



For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

Hi Voltage Field Connection
 Hi Voltage Field Connection
 Hi Voltage Field Connection

NOTE:
 THIS IS LOCATED
 IN UPPER CONTROL
 PANEL

Note: EEV Control Box
 located in Evap. Section

If Economizer is
 installed connect
 Orange/White wire
 to pin #1 on vent
 plug harness

Wire tucked in cable
 duct when no OD switch
 (only use with LAC)

NOTE: JUMPER PLUG
 MUST BE INSTALLED
 WHEN NO VENT OPTION
 IS INSTALLED

WARNING
 USE COPPER CONDUCTORS
 ONLY SUITABLE FOR AT LEAST
 75° C.

DANGER
 *ELECTRICAL SHOCK HAZARD
 *DISCONNECT POWER BEFORE
 SERVICING.

A
 Wires Connect
 if Option Not
 Used

99 Wire Identification numbers
 for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			