


Compressor
Internal Overload
Immersion Crankcase Heater

MODEL	CAPACITOR
30HPQ5	40/370
36HPQ5	40/140
36HPQ6	35/440

24V Terminal Block
REFER TO INSTALLATION INSTRUCTIONS FOR CONTROL CIRCUIT WIRING

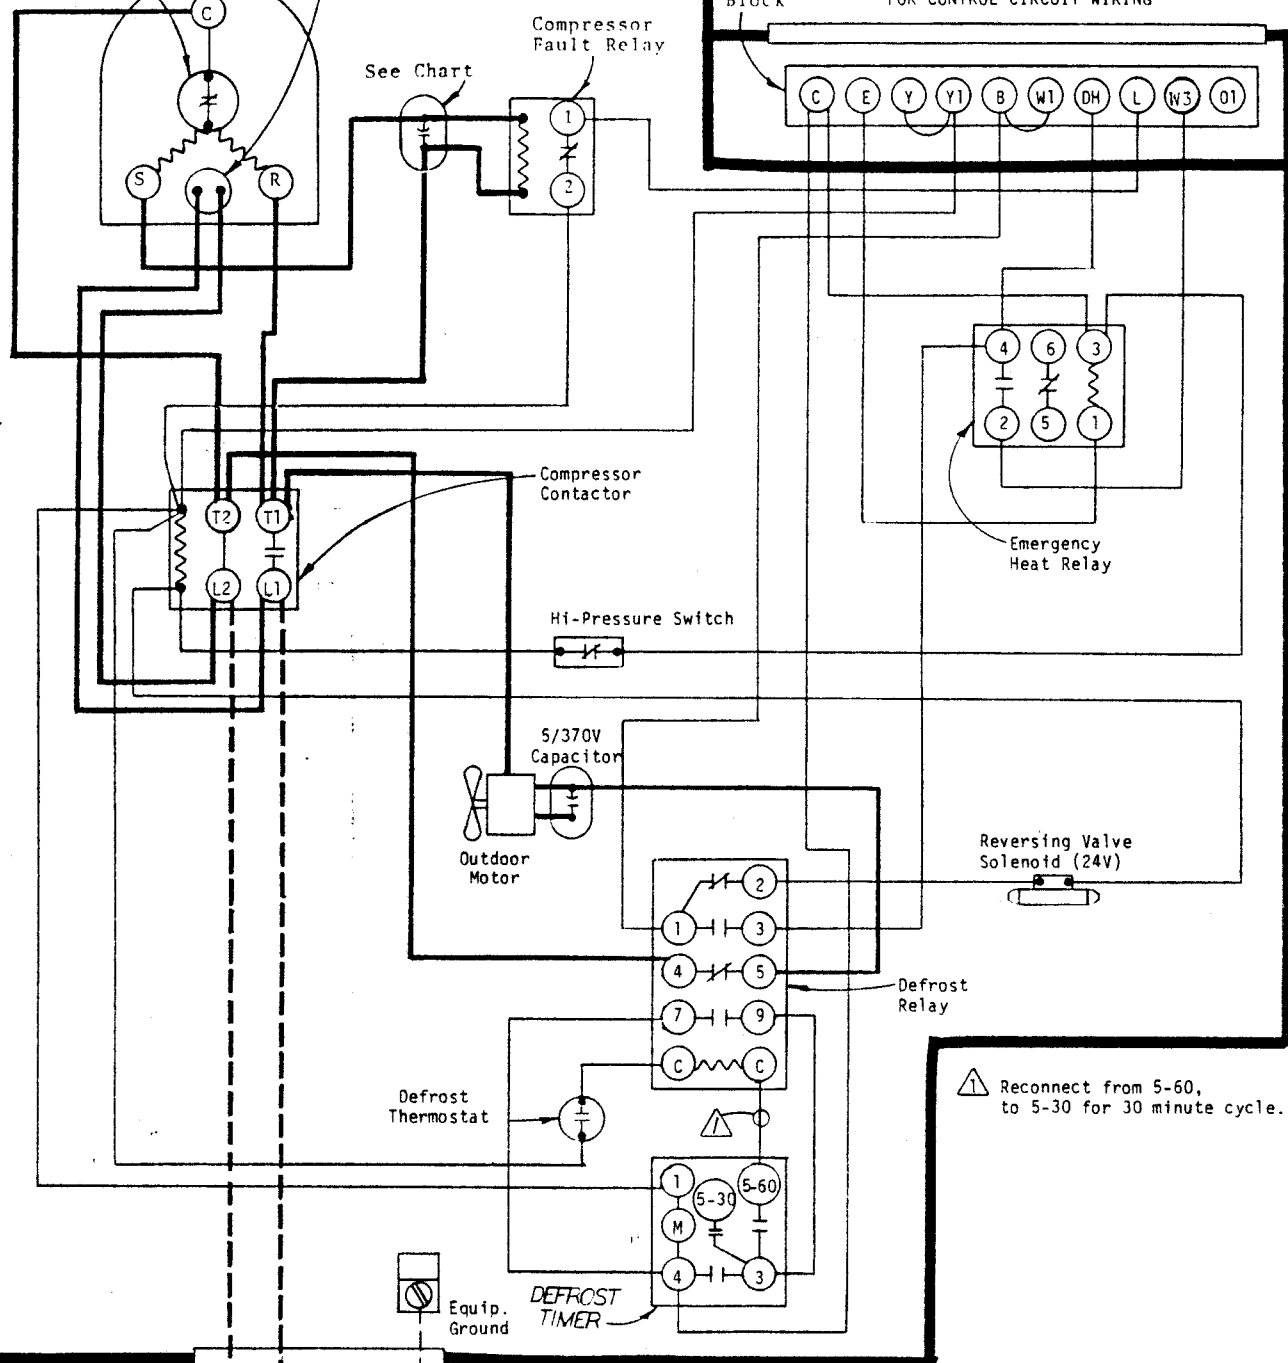

⚠ Reconnect from 5-60, to 5-30 for 30 minute cycle.

Fused Disconnect Switch

FACTORY WIRING	FIELD WIRING
Low Voltage ———	-----
High Voltage ———	-----

USE COPPER WIRE ONLY

MODELS
30HPQ5 1-Ph
36HPQ5 1-Ph
36HPQ6 1-Ph

4028-110E