


TO SET CRV AIRFLOW FOR BLOWER ONLY, JUMPER R,G,F. ADJUST POT #1.
 TO SET CRV AIRFLOW FOR 1ST STAGE COOLING, JUMPER R,G,Y1,F. ADJUST POT #2.
 TO SET CRV AIRFLOW FOR 2ND STAGE COOLING, JUMPER R,G,Y1,Y2,F. ADJUST POT #3.

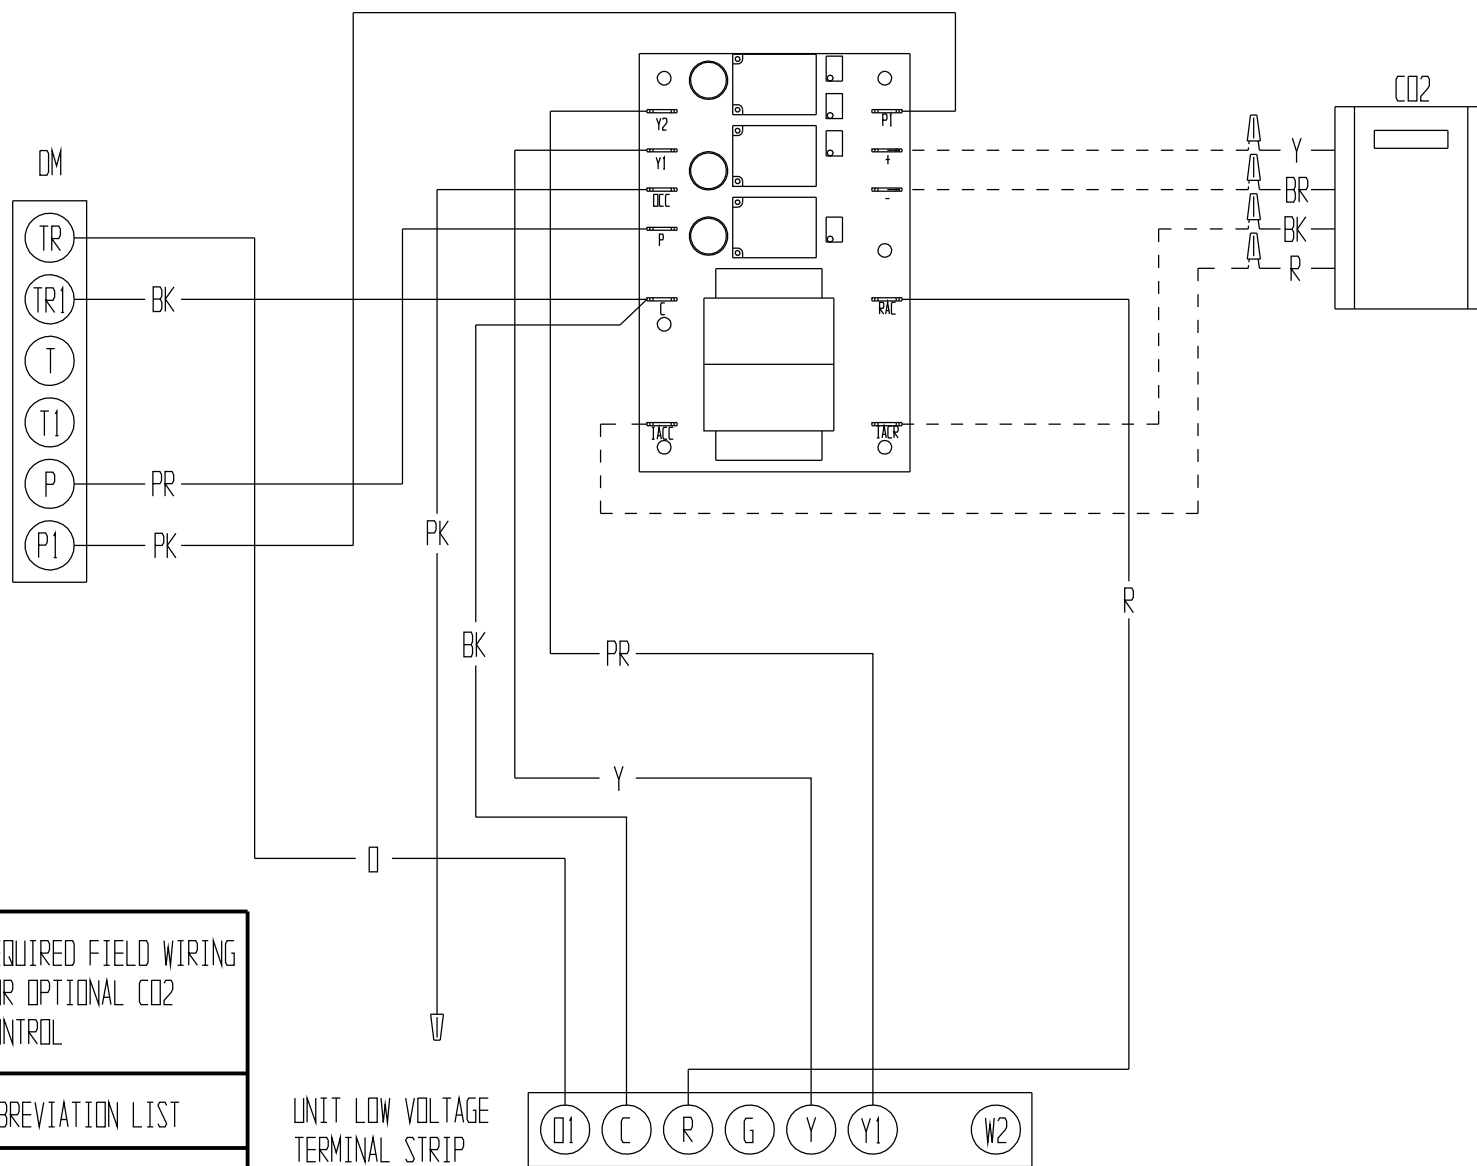

 ALTERNATE CONNECTION FOR
CONSTANT VENTILATION

WIRE COLOR	COLOR CODE ABBREVIATION
------------	----------------------------

BLACK	BK
BROWN	BR
RED	R
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	V(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

----- REQUIRED FIELD WIRING
FOR OPTIONAL CO2
CONTROL

PART ABBREVIATION LIST	
CCB	CRV CONTROL BOARD
CO2	CARBON DIOXIDE SENSOR
COO	CHANGE OVER RELAY
DM	DAMPER MOTOR

UNIT LOW VOLTAGE
TERMINAL STRIP

AIR CONDITIONER CONNECTION DIAGRAM