



DANGER

*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.



WARNING

USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.


Stepdown Transformer

1.4A Class CC Fuse

Energy Recovery Wiring Diagram - 460V

Note: See Control Wiring
Section of Installation Inst.
for Wiring Energy Recovery
to Unit

Note: Connect these wires
to 460-60-1 L1 and L2 on
the compressor contactor

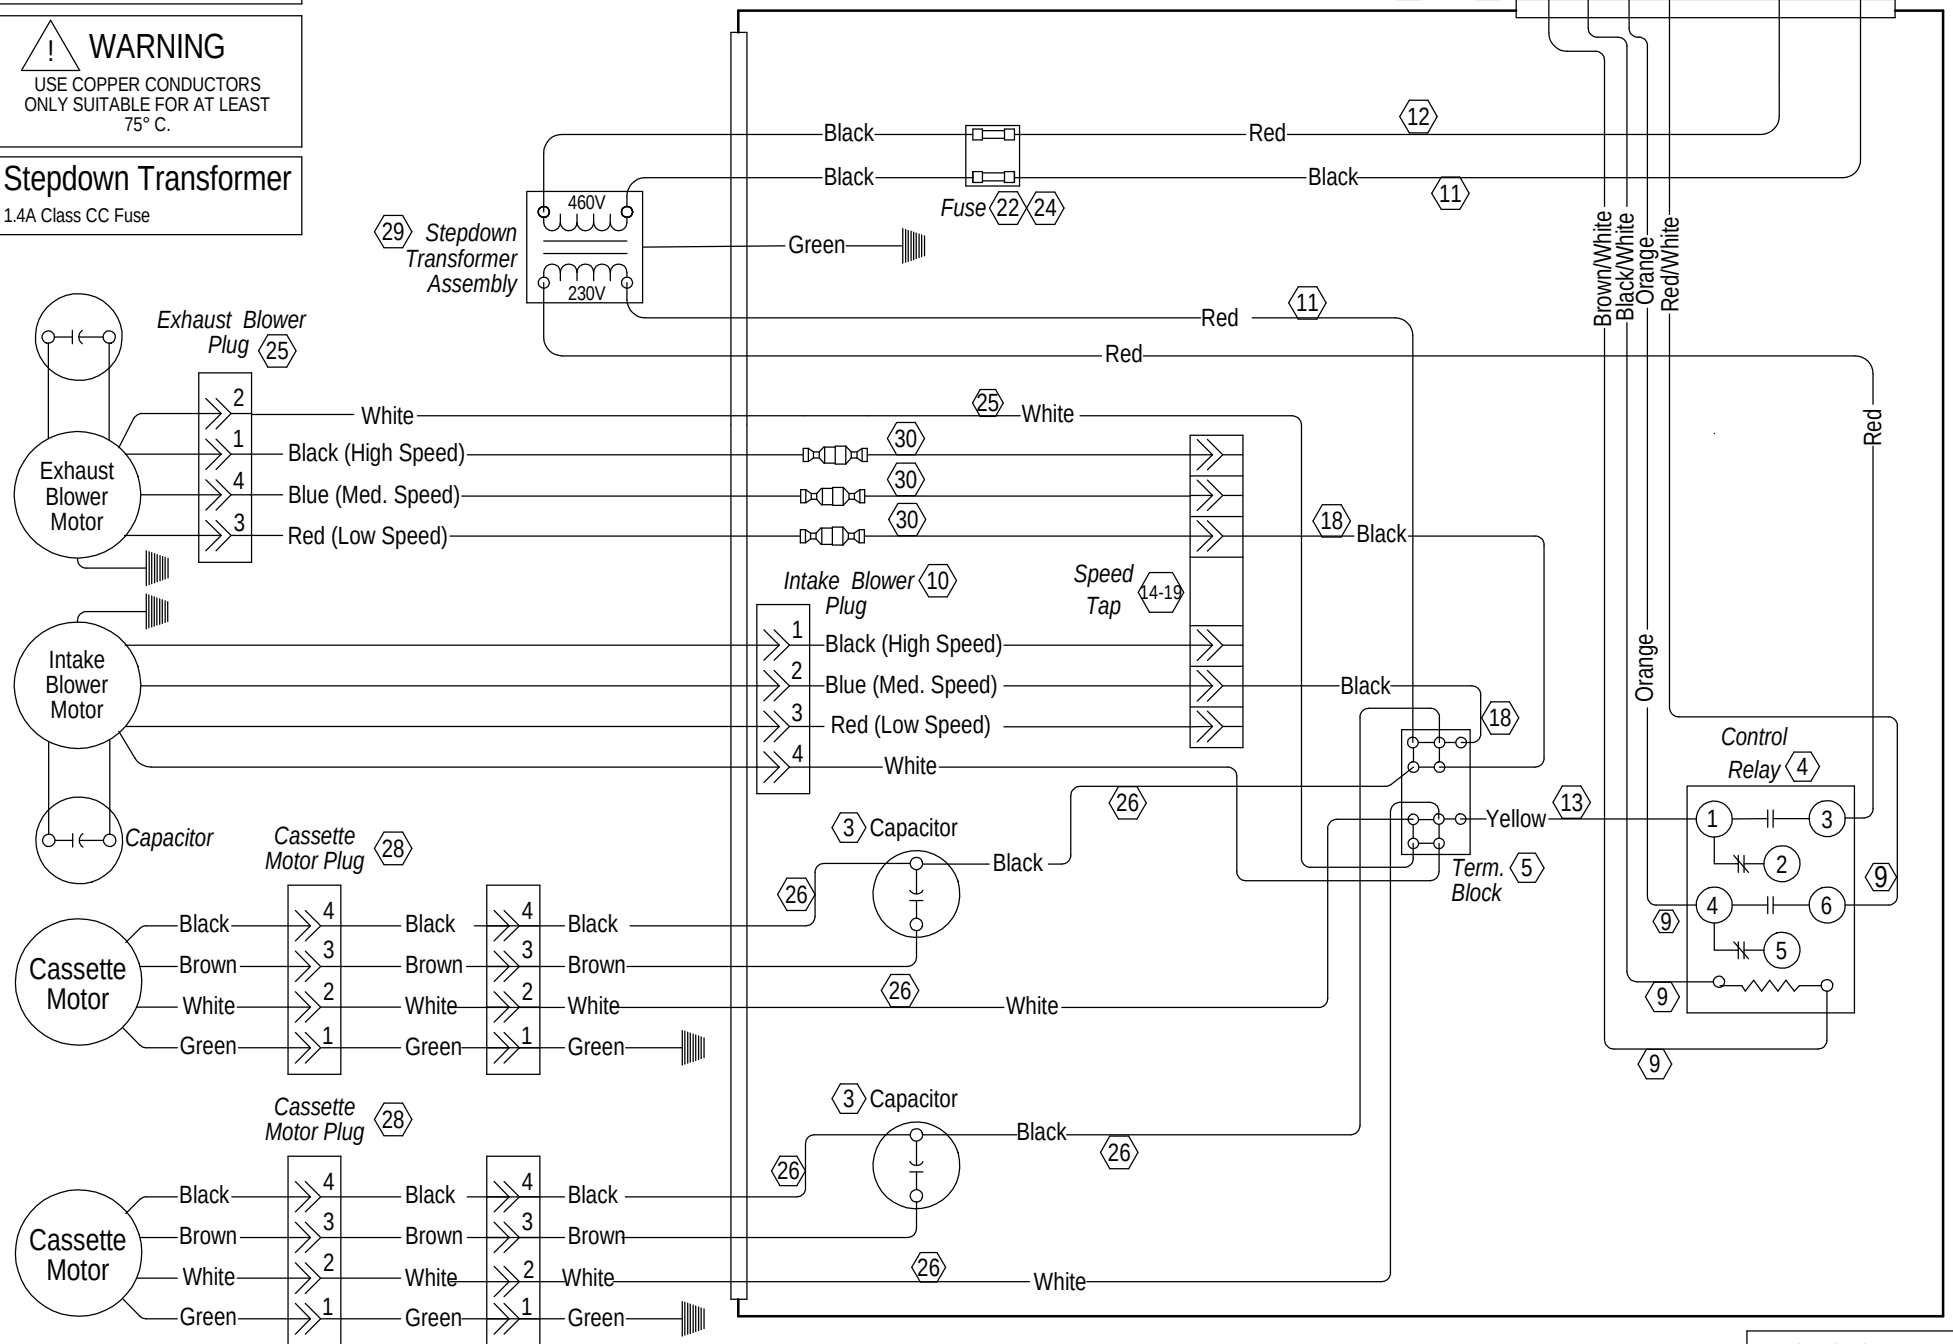

Standard Diagram

4056-317 B