


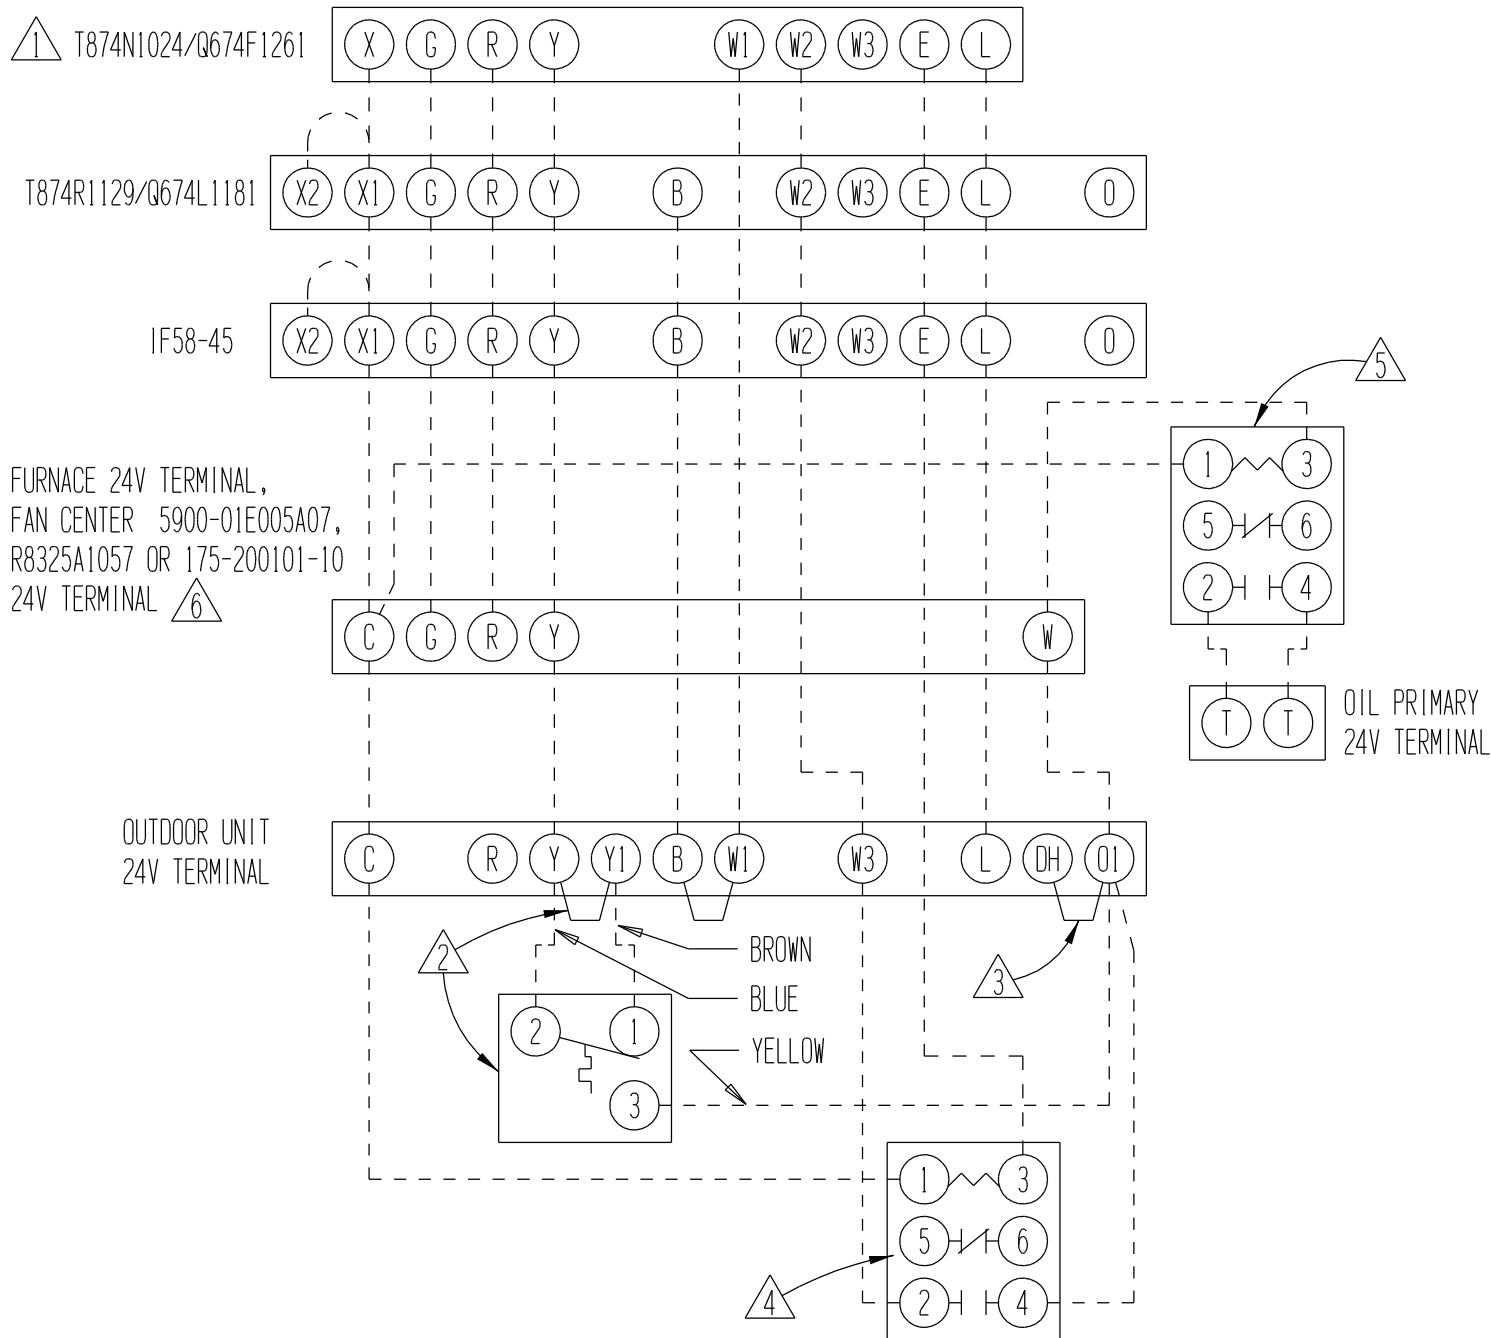

- 1** SET ADJUST HEAT ANTICIPATOR (SEE FURNACE INSTALLATION INSTRUCTIONS)
- 2** WHEN OUTDOOR THERMOSTATE (USED AS CHANGEOVER THERMOSTAT) IS INSTALLED, REMOVE JUMPER Y-Y1.
- 3** IF IT DESIRED NOT TO ALLOW FURNACE TO CYCLE "ON" DURING DEFROST, REMOVE JUMPER DH-01.

- 4** LOCATE EMERGENCY HEAT RELAY IN OUTDOOR UNIT. NECESSARY TO OPERATE FURNACE IN EMERGENCY HEAT MODE.
- 5** LOCATE ISOLATING RELAY IN OIL FURNACE. NECESSARY TO SEPARATE 24V POWER SUPPLY OF HEATPUMP FROM 24V POWER SUPPLY BUILT INTO OIL BURNER PRIMARY CONTROL.
- 6** IF THE FURNACE IS NOT INTERNALLY WIRED FOR ADD ON AIR CONDITIONING, A FAN CENTER WILL NEED TO BE ADDED.

|              | FACTORY<br>WIRING | FIELD<br>WIRING |
|--------------|-------------------|-----------------|
| LOW VOLTAGE  | _____             | -----           |
| HIGH VOLTAGE | _____             | -----           |

HEAT PUMP W/OIL FURNACE