



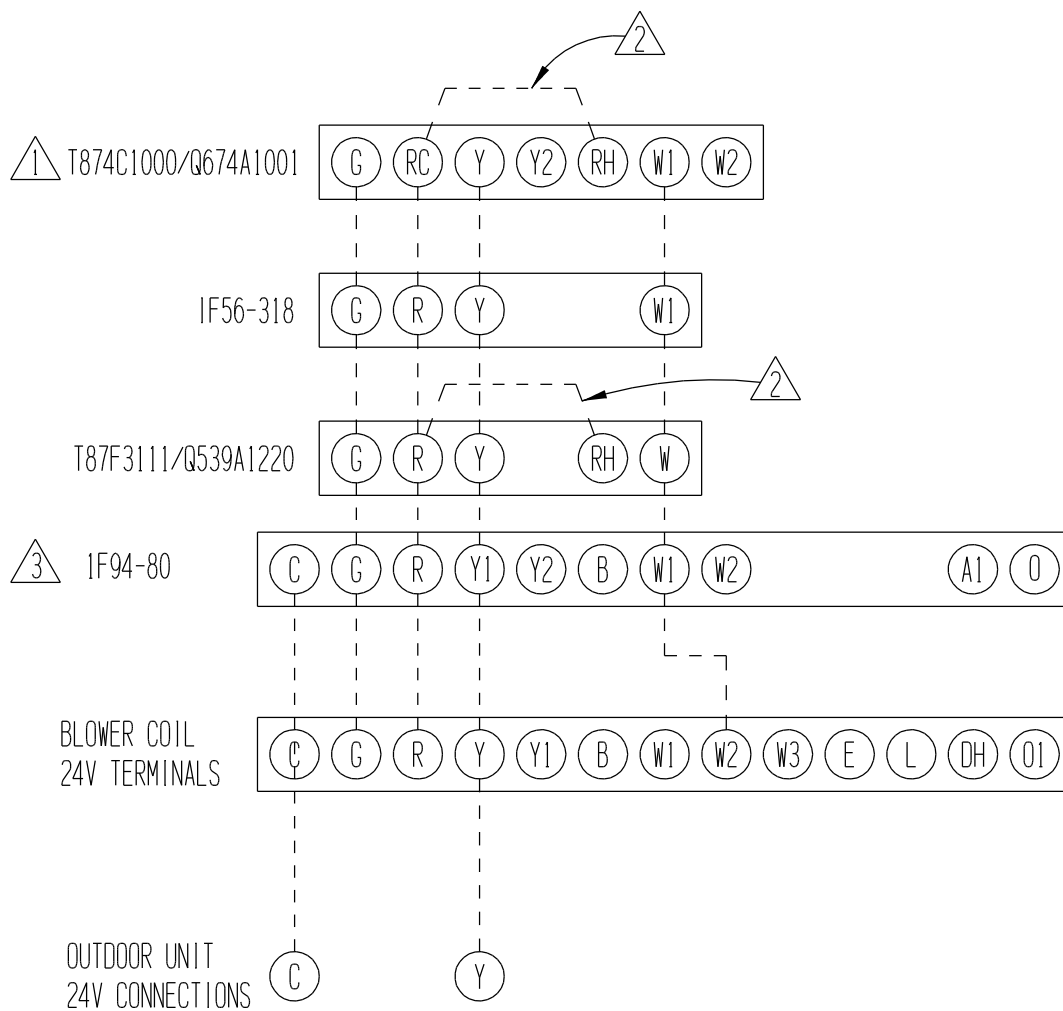

AIR CONDITIONER W/5 TO 10KW BLOWER COIL
EXCEPT FOR B30EHQ-A10

- 1 SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).
- 2 INSTALL JUMPER RC-RH OR R-RH
- 3 OPTION SWITCH SETTING

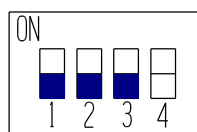

SWITCH #1 "OFF"
SWITCH #2 "OFF"
SWITCH #3 "OFF"
SWITCH #4 SEE THERMOSTAT
INSTALLATION INSTRUCTIONS

FACTORY WIRING

FIELD WIRING

LOW VOLTAGE _____

HIGH VOLTAGE _____