



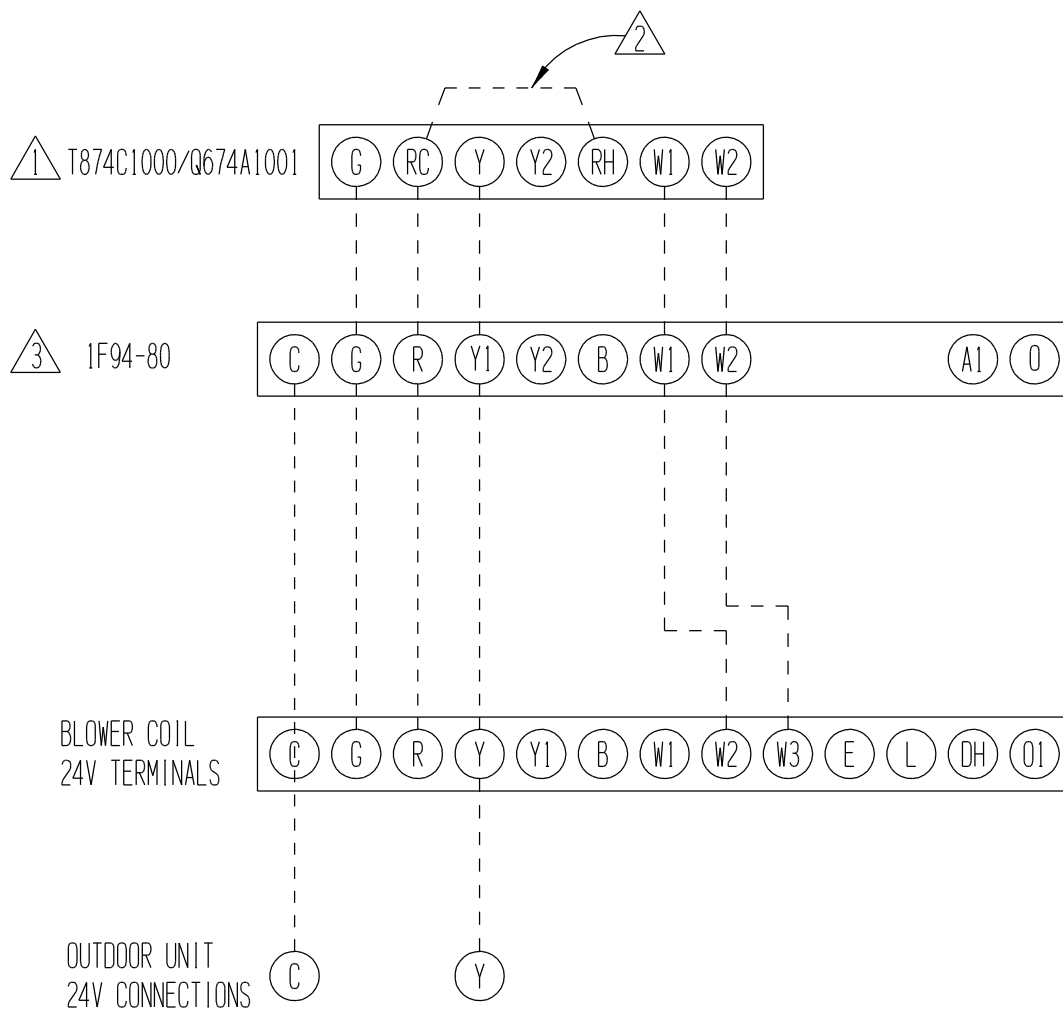

AIR CONDITIONER W/14 TO 20KW BLOWER COIL
EXCEPT FOR B30EHQ-A15 & BC60A MODELS

- 1 SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).
- 2 INSTALL JUMPER RC-RH
- 3 OPTION SWITCH SETTING

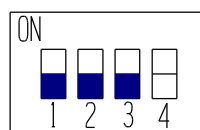

SWITCH #1 "OFF"
SWITCH #2 "OFF"
SWITCH #3 "OFF"
SWITCH #4 SEE THERMOSTAT
INSTALLATION INSTRUCTIONS

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	=====	-----