


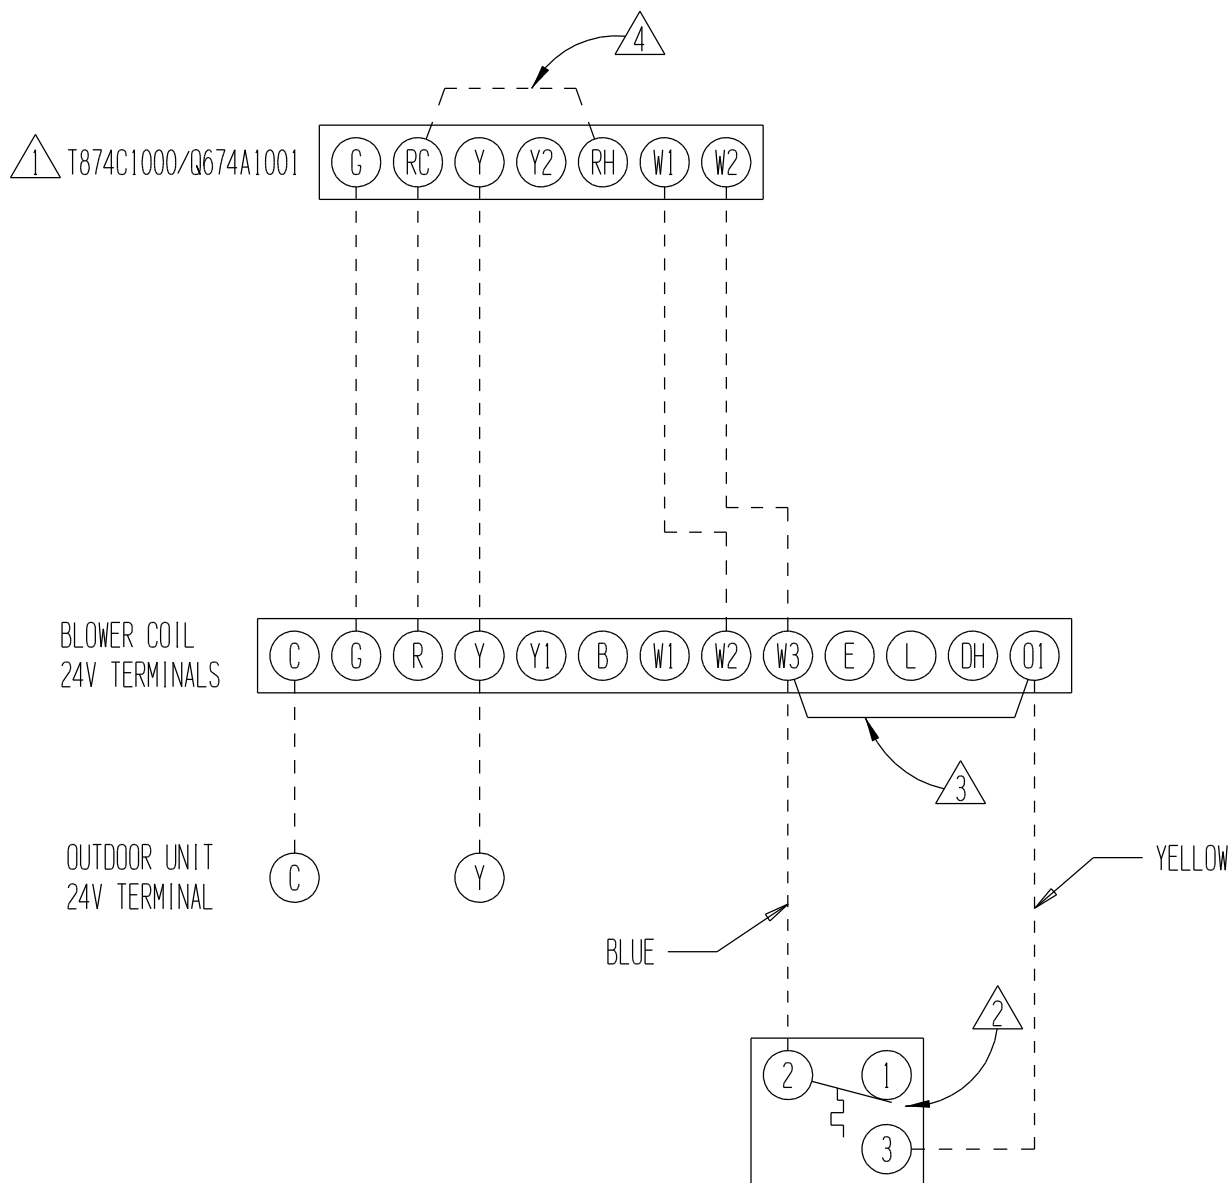

AIR CONDITIONER W/25 TO 30KW BLOWER COIL
EXCEPT BC60 MODELS



SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).



WHEN OUTDOOR THERMOSTAT IS USED TO HOLD LAST 5,10, OR 15KW
OF HEAT, FROM CYCLING WITH THE NORMAL 10KW ON 2ND STAGE.
LOCATE IN OUTDOOR UNIT.



WHEN OUTDOOR THERMOSTAT IS USED, REMOVE JUMPER W3-O1.



INSTALL JUMPER RC-RH.

FACTORY
WIRING

FIELD
WIRING

LOW VOLTAGE
HIGH VOLTAGE

