


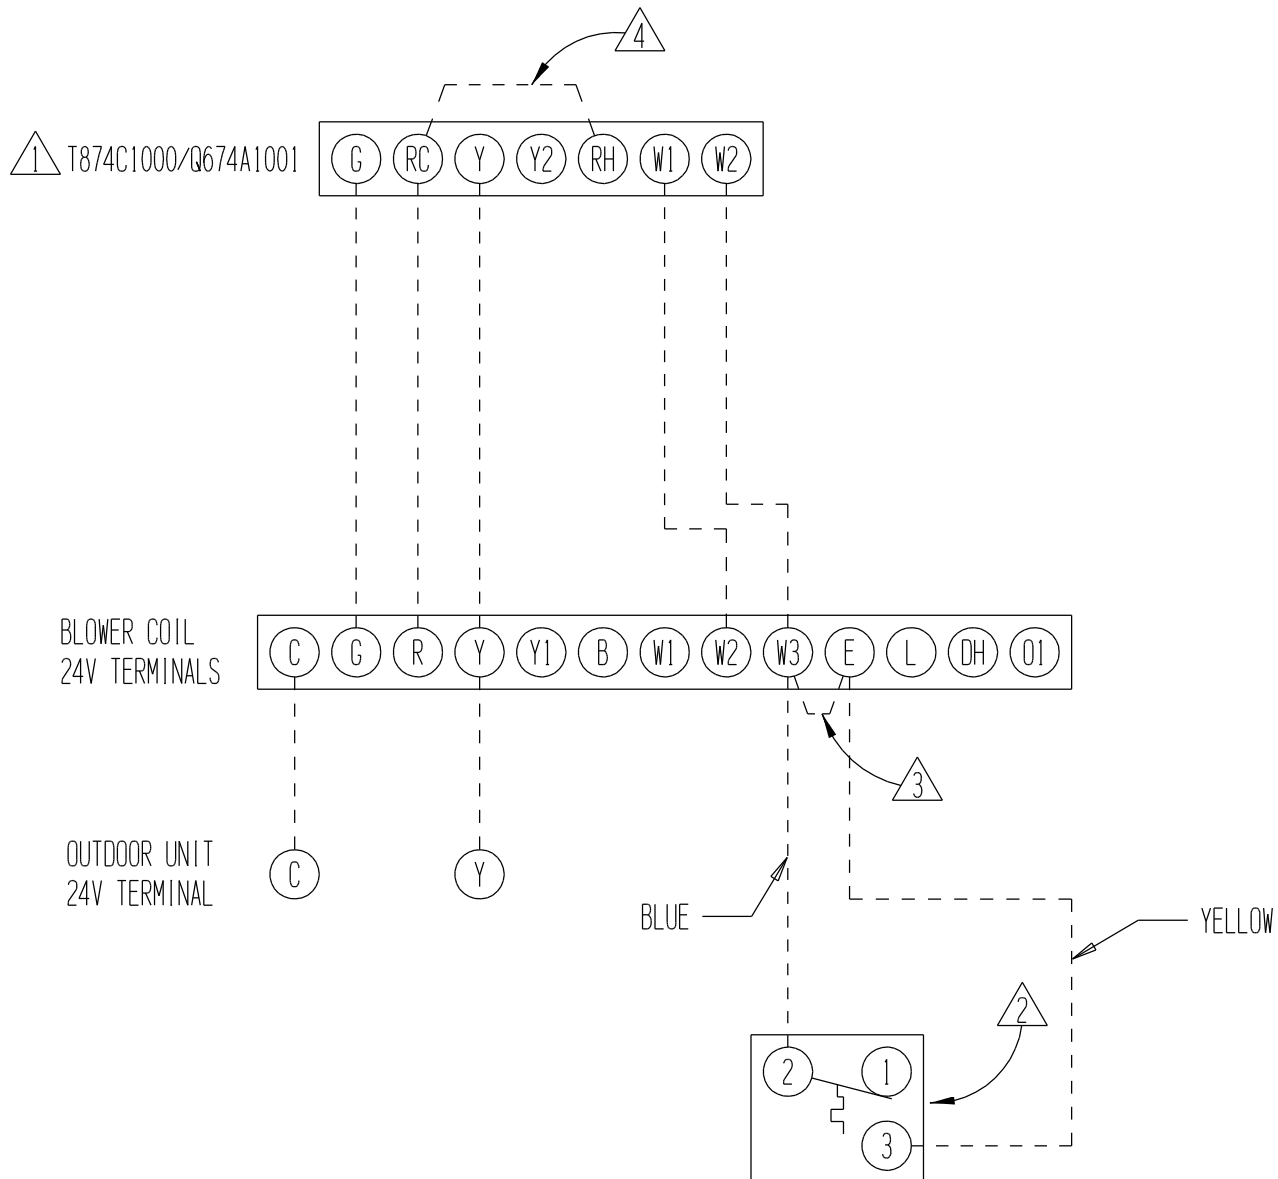

AIR CONDITIONER W/20 TO 30KW BLOWER COIL



SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).



WHEN OUTDOOR THERMOSTAT IS USED TO HOLD LAST 5,10, OR 15KW OF HEAT, FROM CYCLING WITH THE NORMAL 10KW ON 2ND STAGE. LOCATE IN OUTDOOR UNIT.



IF AN OUTDOOR THERMOSTAT IS NOT USED, A FIELD INSTALLED JUMPER IS TO BE INSTALLED BETWEEN TERMINALS W3-E.



INSTALL JUMPER RC-RH.

FACTORY
WIRING

FIELD
WIRING

LOW VOLTAGE
HIGH VOLTAGE

—
—

