



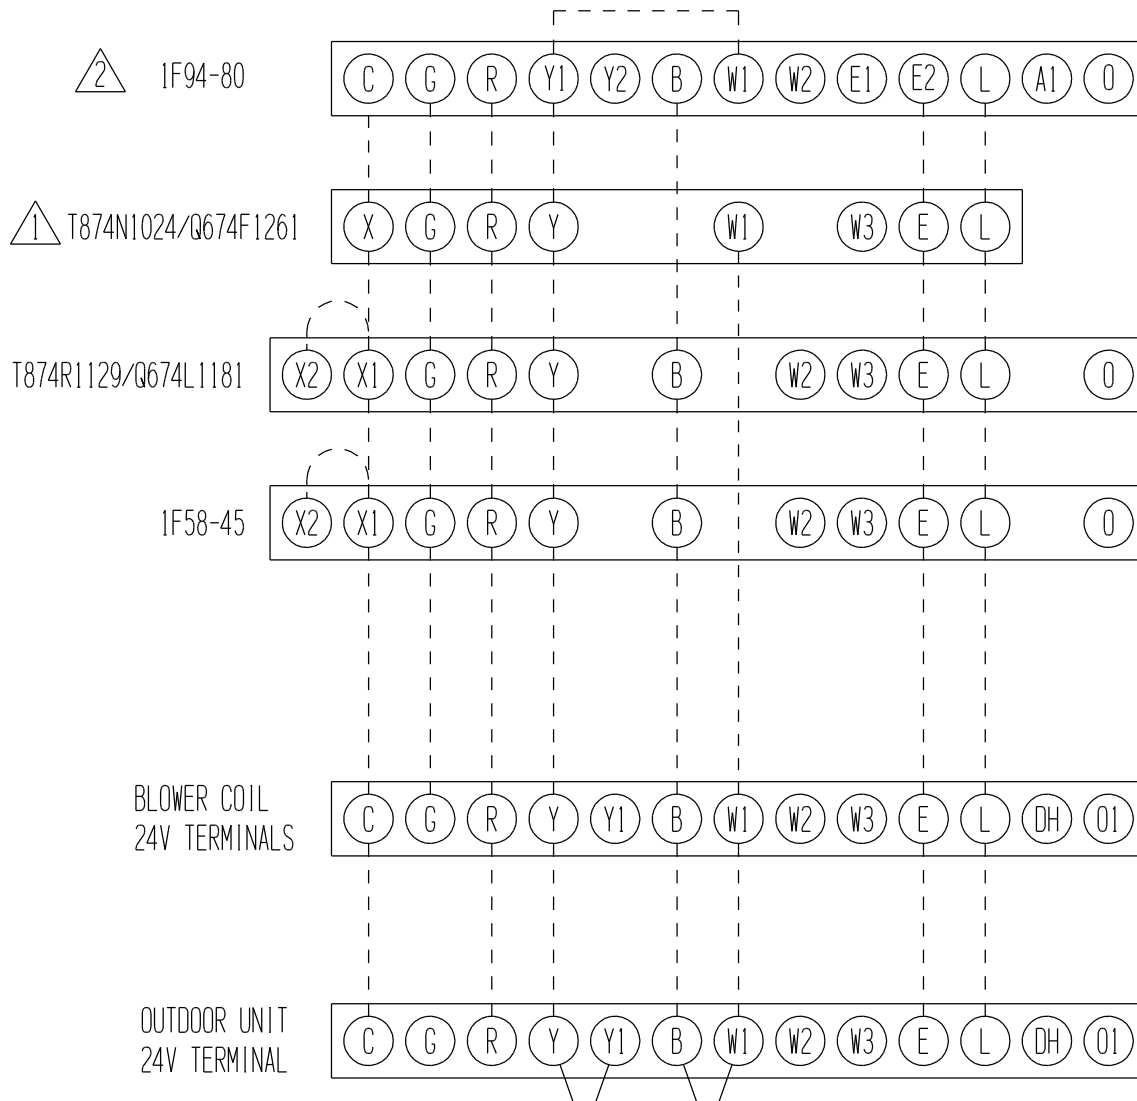

① SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).

② OPTION SWITCH SETTING

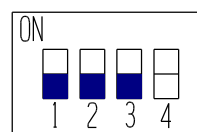

SWITCH #1 "OFF"
 SWITCH #2 "OFF"
 SWITCH #3 "OFF"
 SWITCH #4 SEE THERMOSTAT
 INSTALLATION INSTRUCTIONS

HEATPUMP W/OKW BLOWER COIL

FACTORY
 WIRING

FIELD
 WIRING

LOW VOLTAGE
 HIGH VOLTAGE

