 



3 IF94-80




1 T874N1024/Q674F1261



 
T874R1129/Q674L1181





1F58-45

 

BLOWER COIL
24V TERMINALS

 

OUTDOOR UNIT
24V TERMINAL

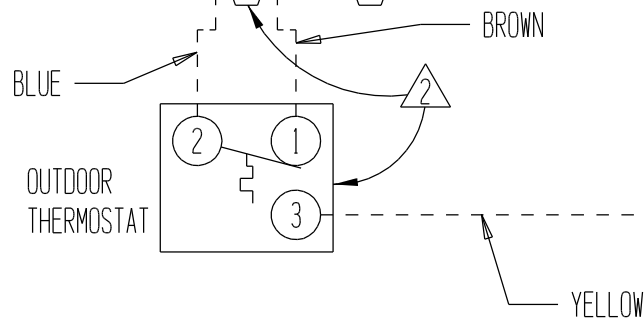 


HEATPUMP W/5 TO 10KW BLOWER COIL

- 1 SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).
- 2 WHEN OUTDOOR THERMOSTAT (USED AS COMPRESSOR CUTOFF) IS INSTALLED, REMOVE JUMPER Y-Y1.
- 3 OPTION SWITCH SETTING

FACTORY
WIRING

FIELD
WIRING

LOW VOLTAGE
HIGH VOLTAGE

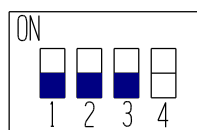

SWITCH #1 "OFF"
SWITCH #2 "OFF"
SWITCH #3 "OFF"
SWITCH #4 SEE THERMOSTAT
INSTALLATION INSTRUCTIONS