


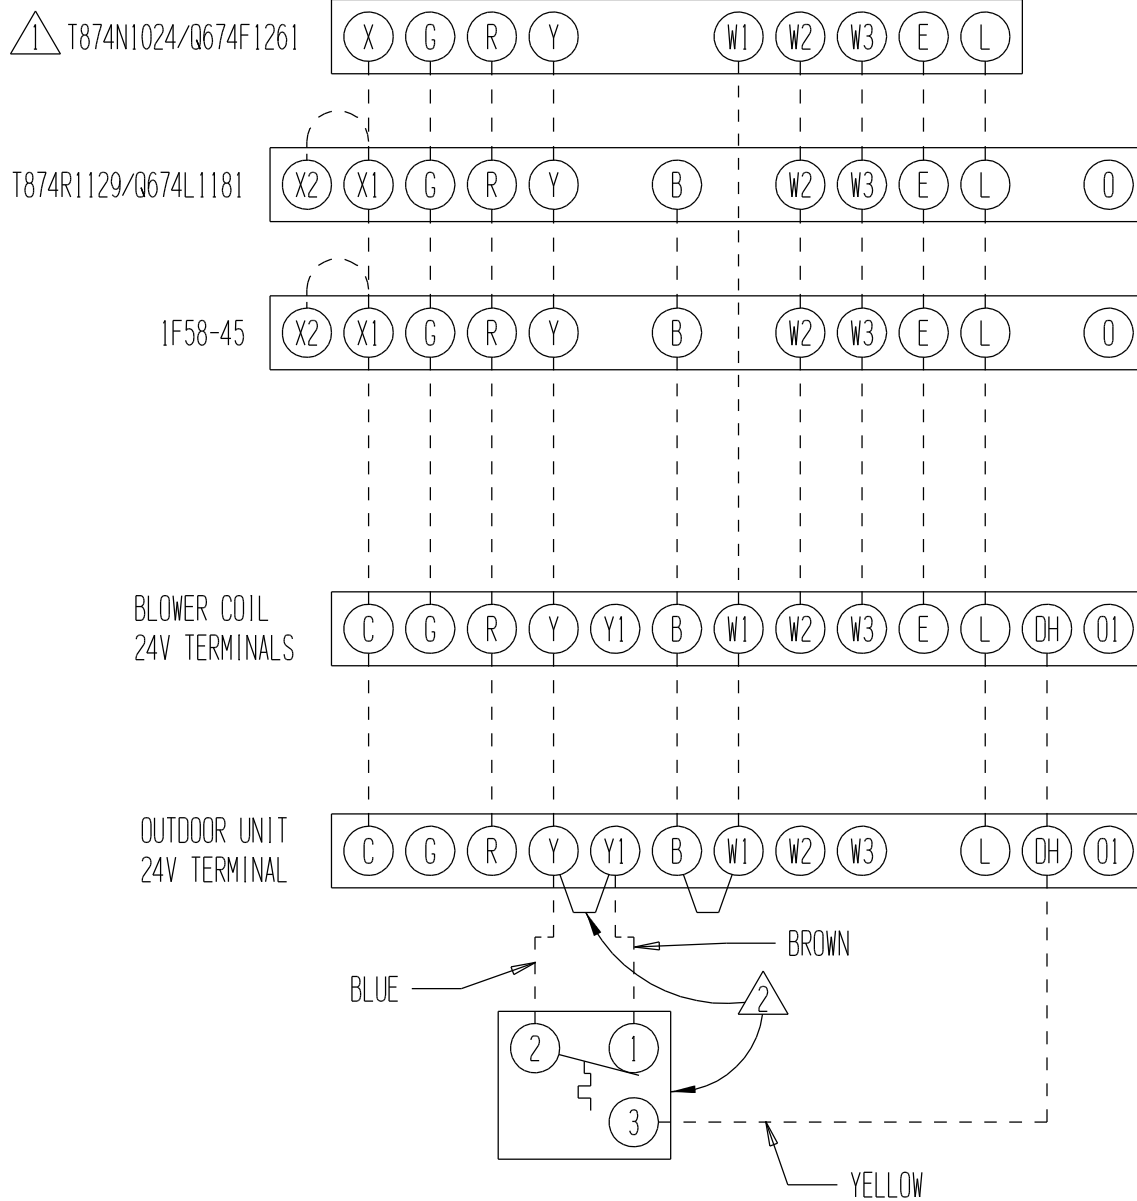

HEATPUMP W/10 TO 15KW BLOWER COIL



SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).



WHEN OUTDOOR THERMOSTAT (USED AS COMPRESSOR CUTOFF) IS
INSTALLED, REMOVE JUMPER Y-Y1.

FACTORY
WIRING

FIELD
WIRING

LOW VOLTAGE
HIGH VOLTAGE

