



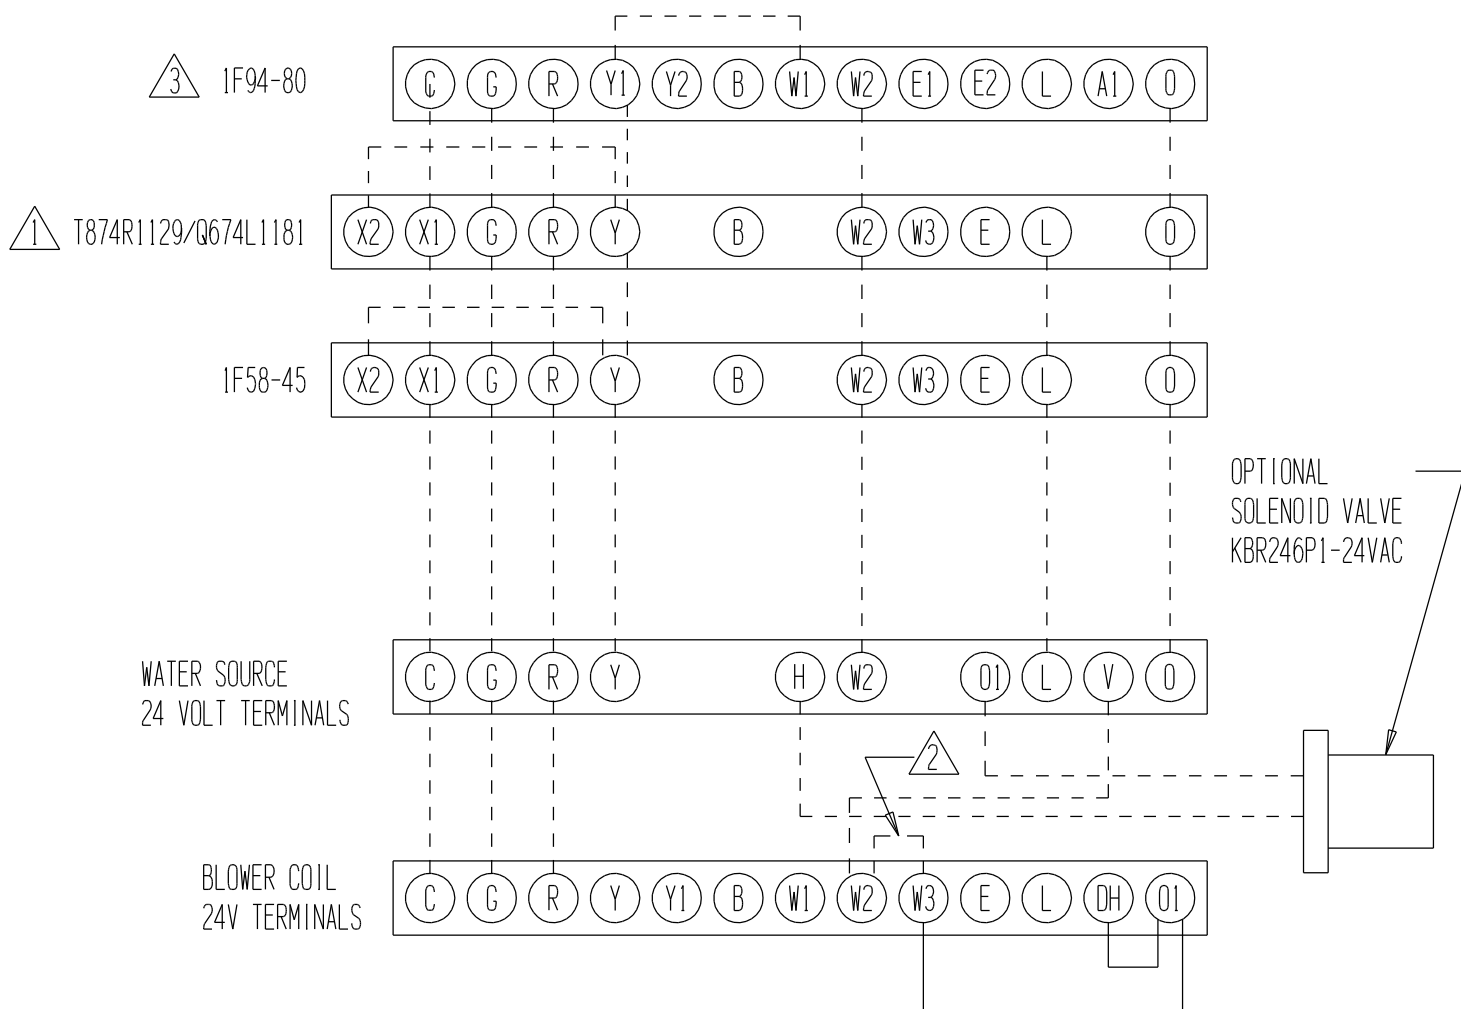

① SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).

② ADD JUMPER W2-W3

③ OPTION SWITCH SETTING

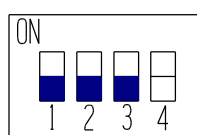

SWITCH #1 "OFF"  
 SWITCH #2 "OFF"  
 SWITCH #3 "OFF"  
 SWITCH #4 SEE THERMOSTAT  
 INSTALLATION INSTRUCTIONS

WATER SOURCE HEATPUMP  
 W/14 TO 20KW BLOWER COIL

FACTORY  
 WIRING

FIELD  
 WIRING

LOW VOLTAGE  
 HIGH VOLTAGE

—————  
 —————

-----  
 -----

LOW VOLTAGE FIELD  
 WIRING MUST BE  
 CLASS 1