



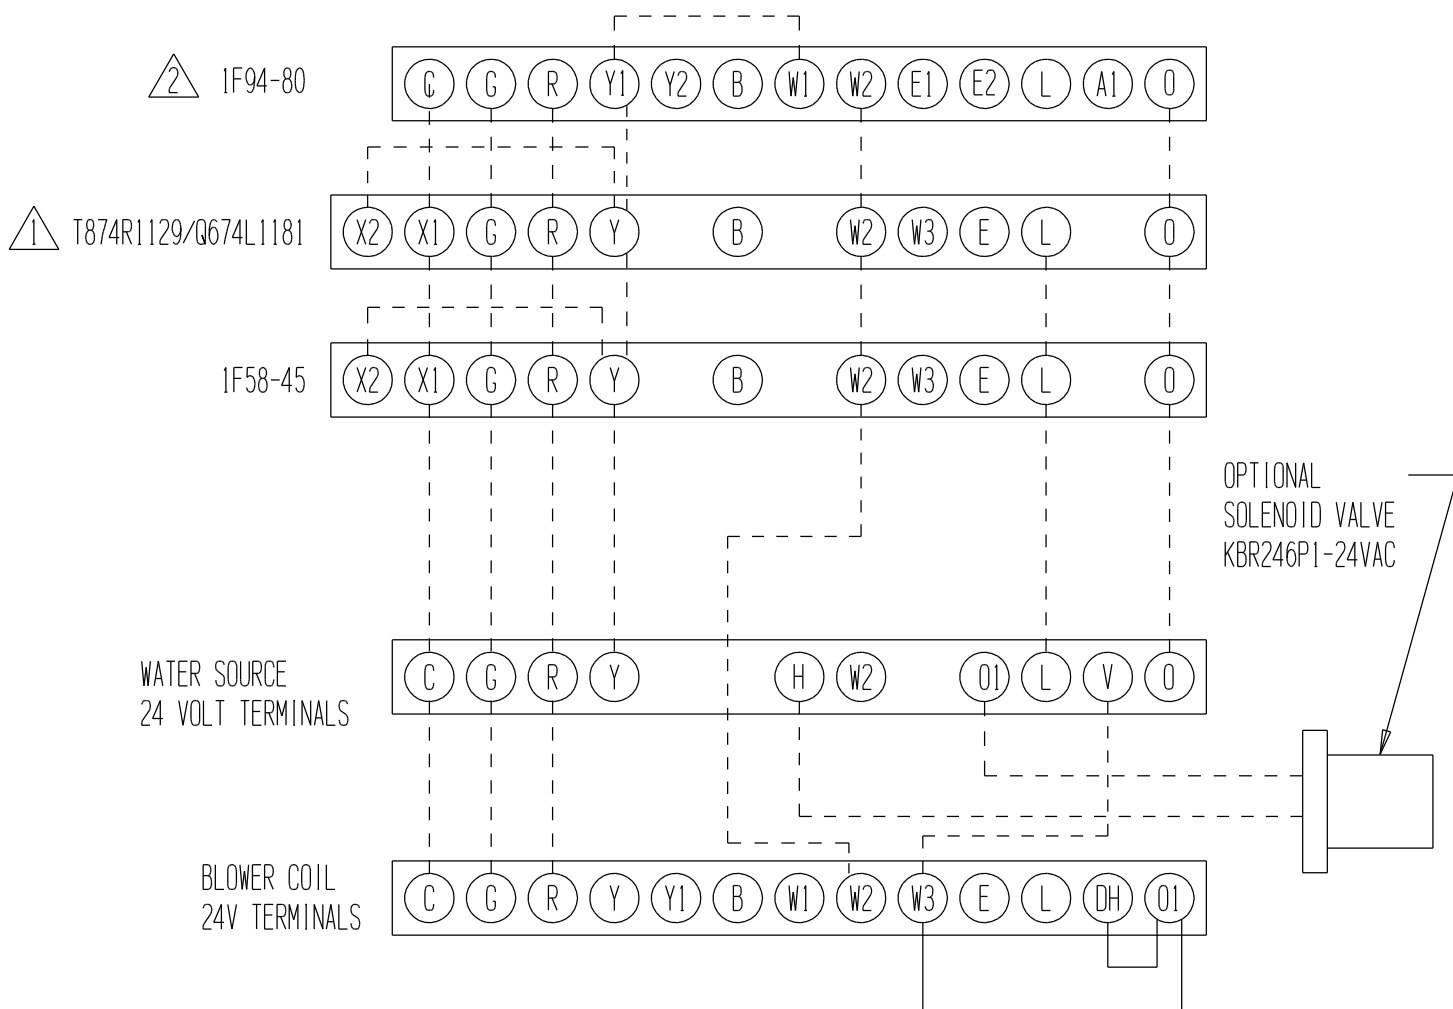

△1 SET ADJUST HEAT ANTICIPATOR (SEE BLOWER COIL INSTRUCTIONS).

△2 OPTION SWITCH SETTING

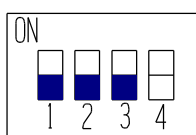

SWITCH #1 "OFF"

SWITCH #2 "OFF"

SWITCH #3 "OFF"

SWITCH #4 SEE THERMOSTAT
INSTALLATION INSTRUCTIONS

WATER SOURCE HEATPUMP
W/14 TO 20KW BLOWER COIL

FACTORY
WIRING

FIELD
WIRING

LOW VOLTAGE
HIGH VOLTAGE

—————
—————

LOW VOLTAGE FIELD
WIRING MUST BE
CLASS 1