


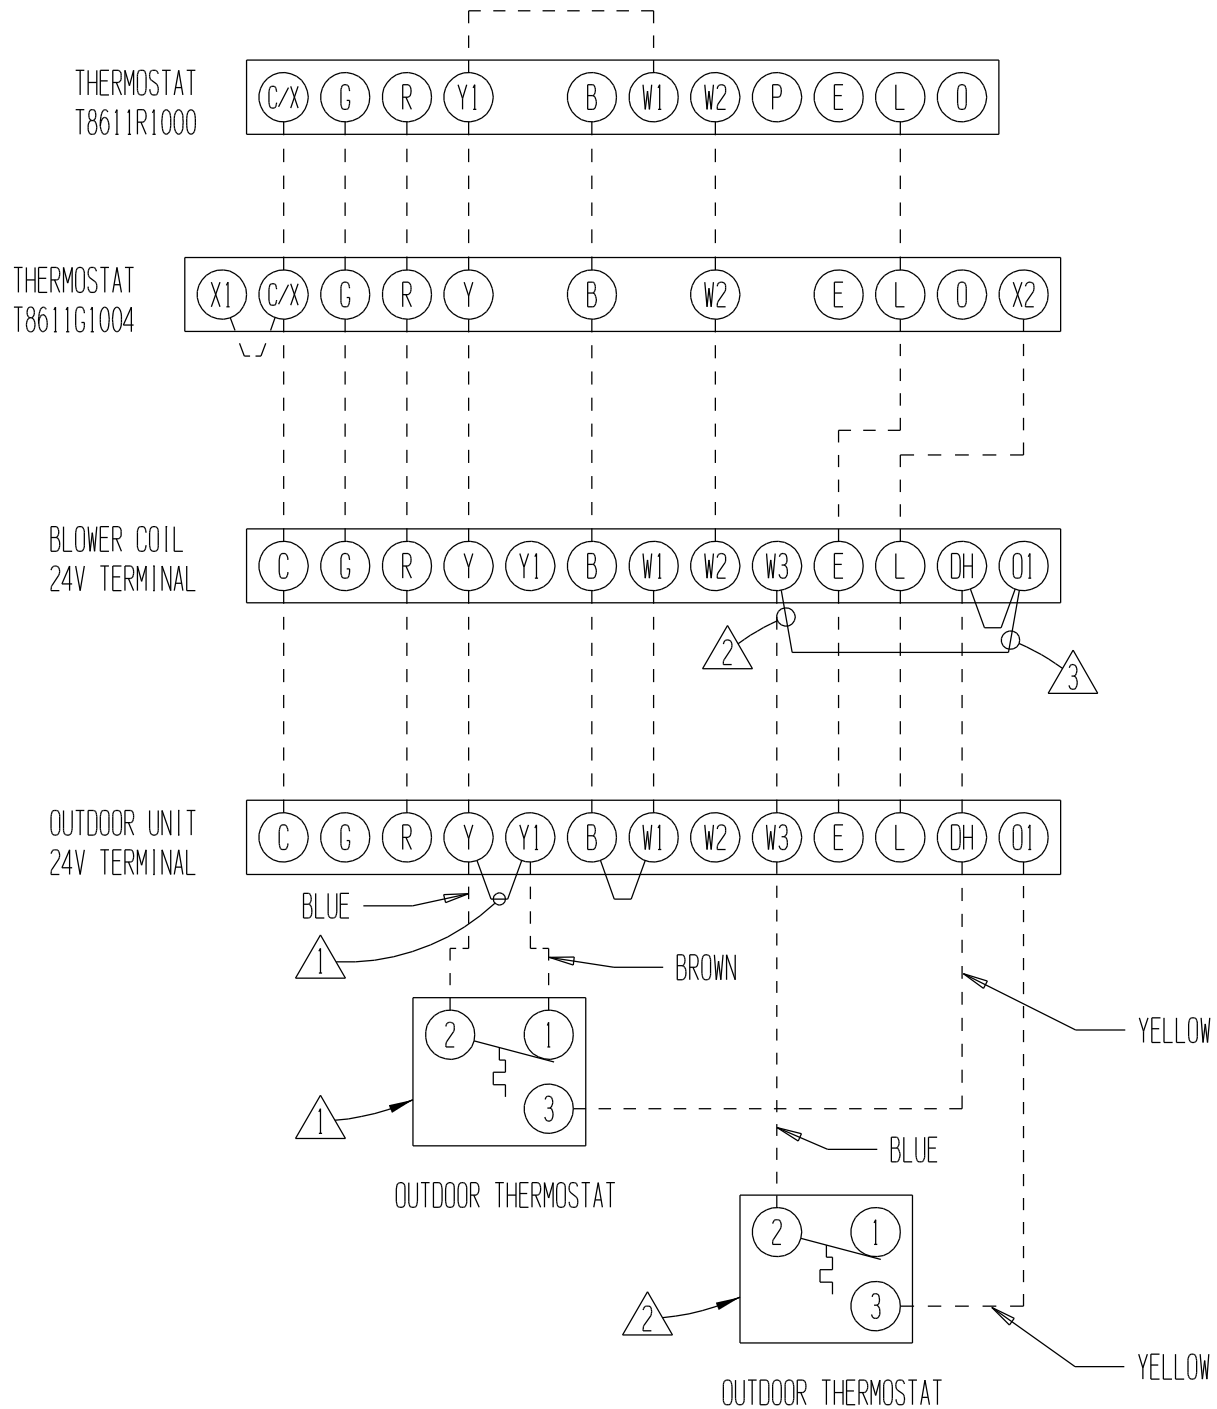

HEATPUMP W/14 OR 18KW BLOWER COIL

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	—————	-----

1 IF OUTDOOR THERMOSTAT (USED AS COMPRESSOR CUTOFF) IS INSTALLED, REMOVE JUMPER Y-Y1.

2 IF OUTDOOR THERMOSTAT IS USED TO STAGE HEAT, REMOVE JUMPER W3-01.

3 FOR COUNTERFLOW APPLICATIONS, REMOVE JUMPER W3-01.