



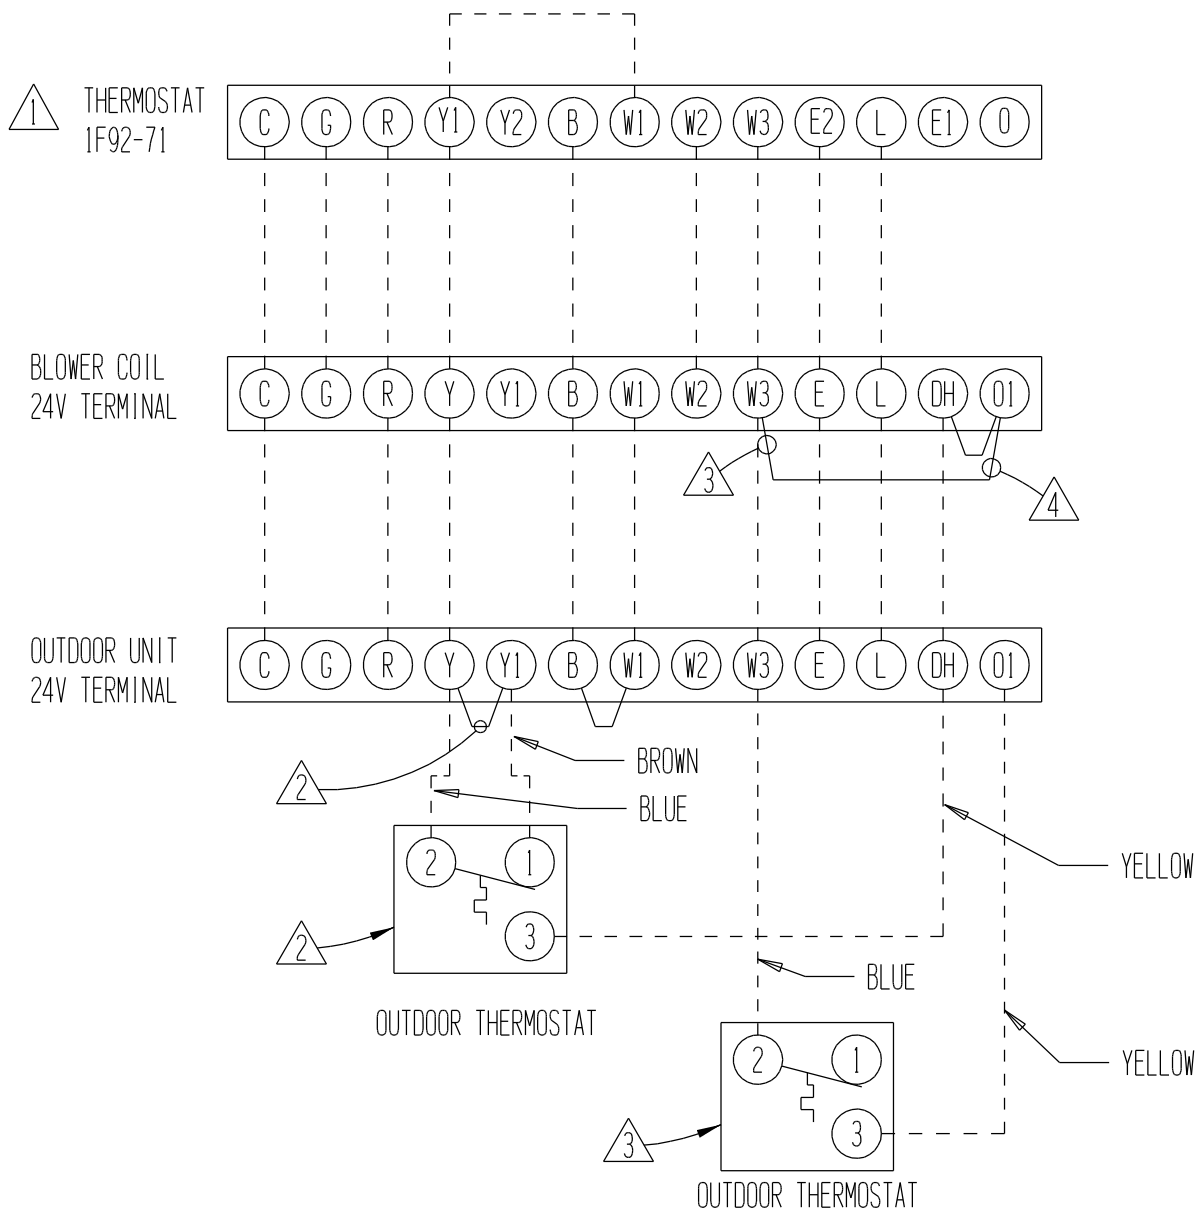

OPTION SWITCH SETTING

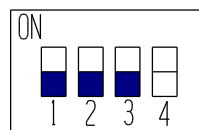

SWITCH #1 "OFF"

SWITCH #2 "OFF"

SWITCH #3 "OFF"

SWITCH #4 SEE THERMOSTAT

INSTALLATION INSTRUCTIONS

HEATPUMP W/14 OR 18KW BLOWER COIL

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	=====	-----



IF OUTDOOR THERMOSTAT (USED AS COMPRESSOR CUTOFF) IS INSTALLED, REMOVE JUMPER Y-Y1.



IF OUTDOOR THERMOSTAT IS USED TO STAGE HEAT, REMOVE JUMPER W3-O1.



FOR COUNTERFLOW APPLICATIONS, REMOVE JUMPER W3-O1.