


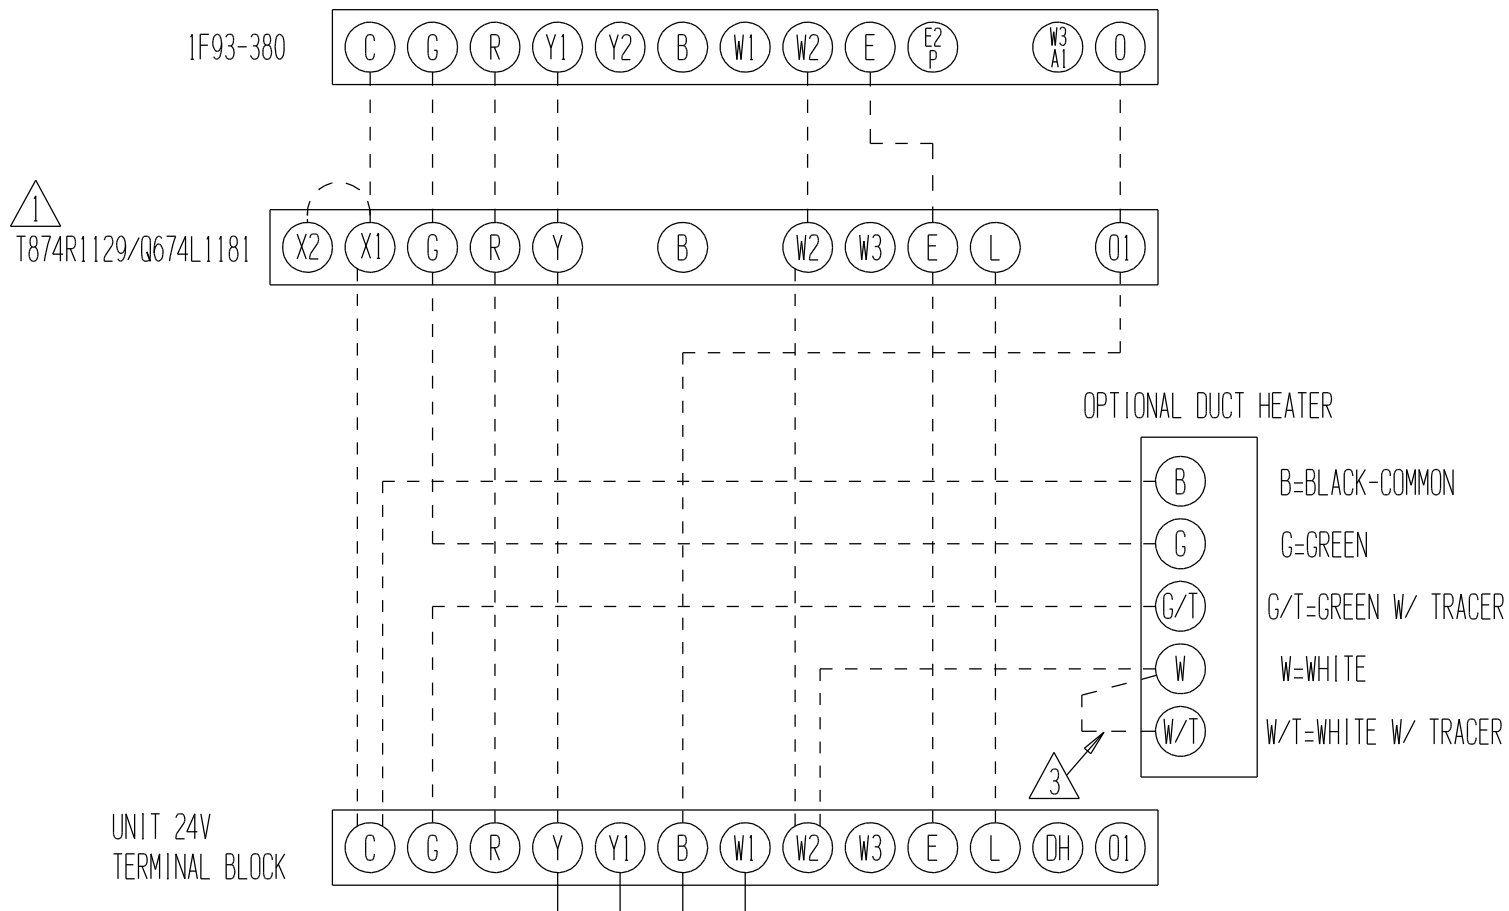

△ 1 SET ADJUST HEAT ANTICIPATOR AT .45A

WATERSOURCE HEATPUMP WITH
OPTIONAL DUCT HEATER

△ 3 NOT USED ON THE 5Kw AND 10Kw MODELS

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	_____	-----
HIGH VOLTAGE	—————	-----