


For Unit Ladder Diagram, Vent Wiring, or controller/thermostat connections, see installation instructions or go to www.bardhvac.com

- Hi Voltage Field Connection-

--Hi Voltage Field Connection

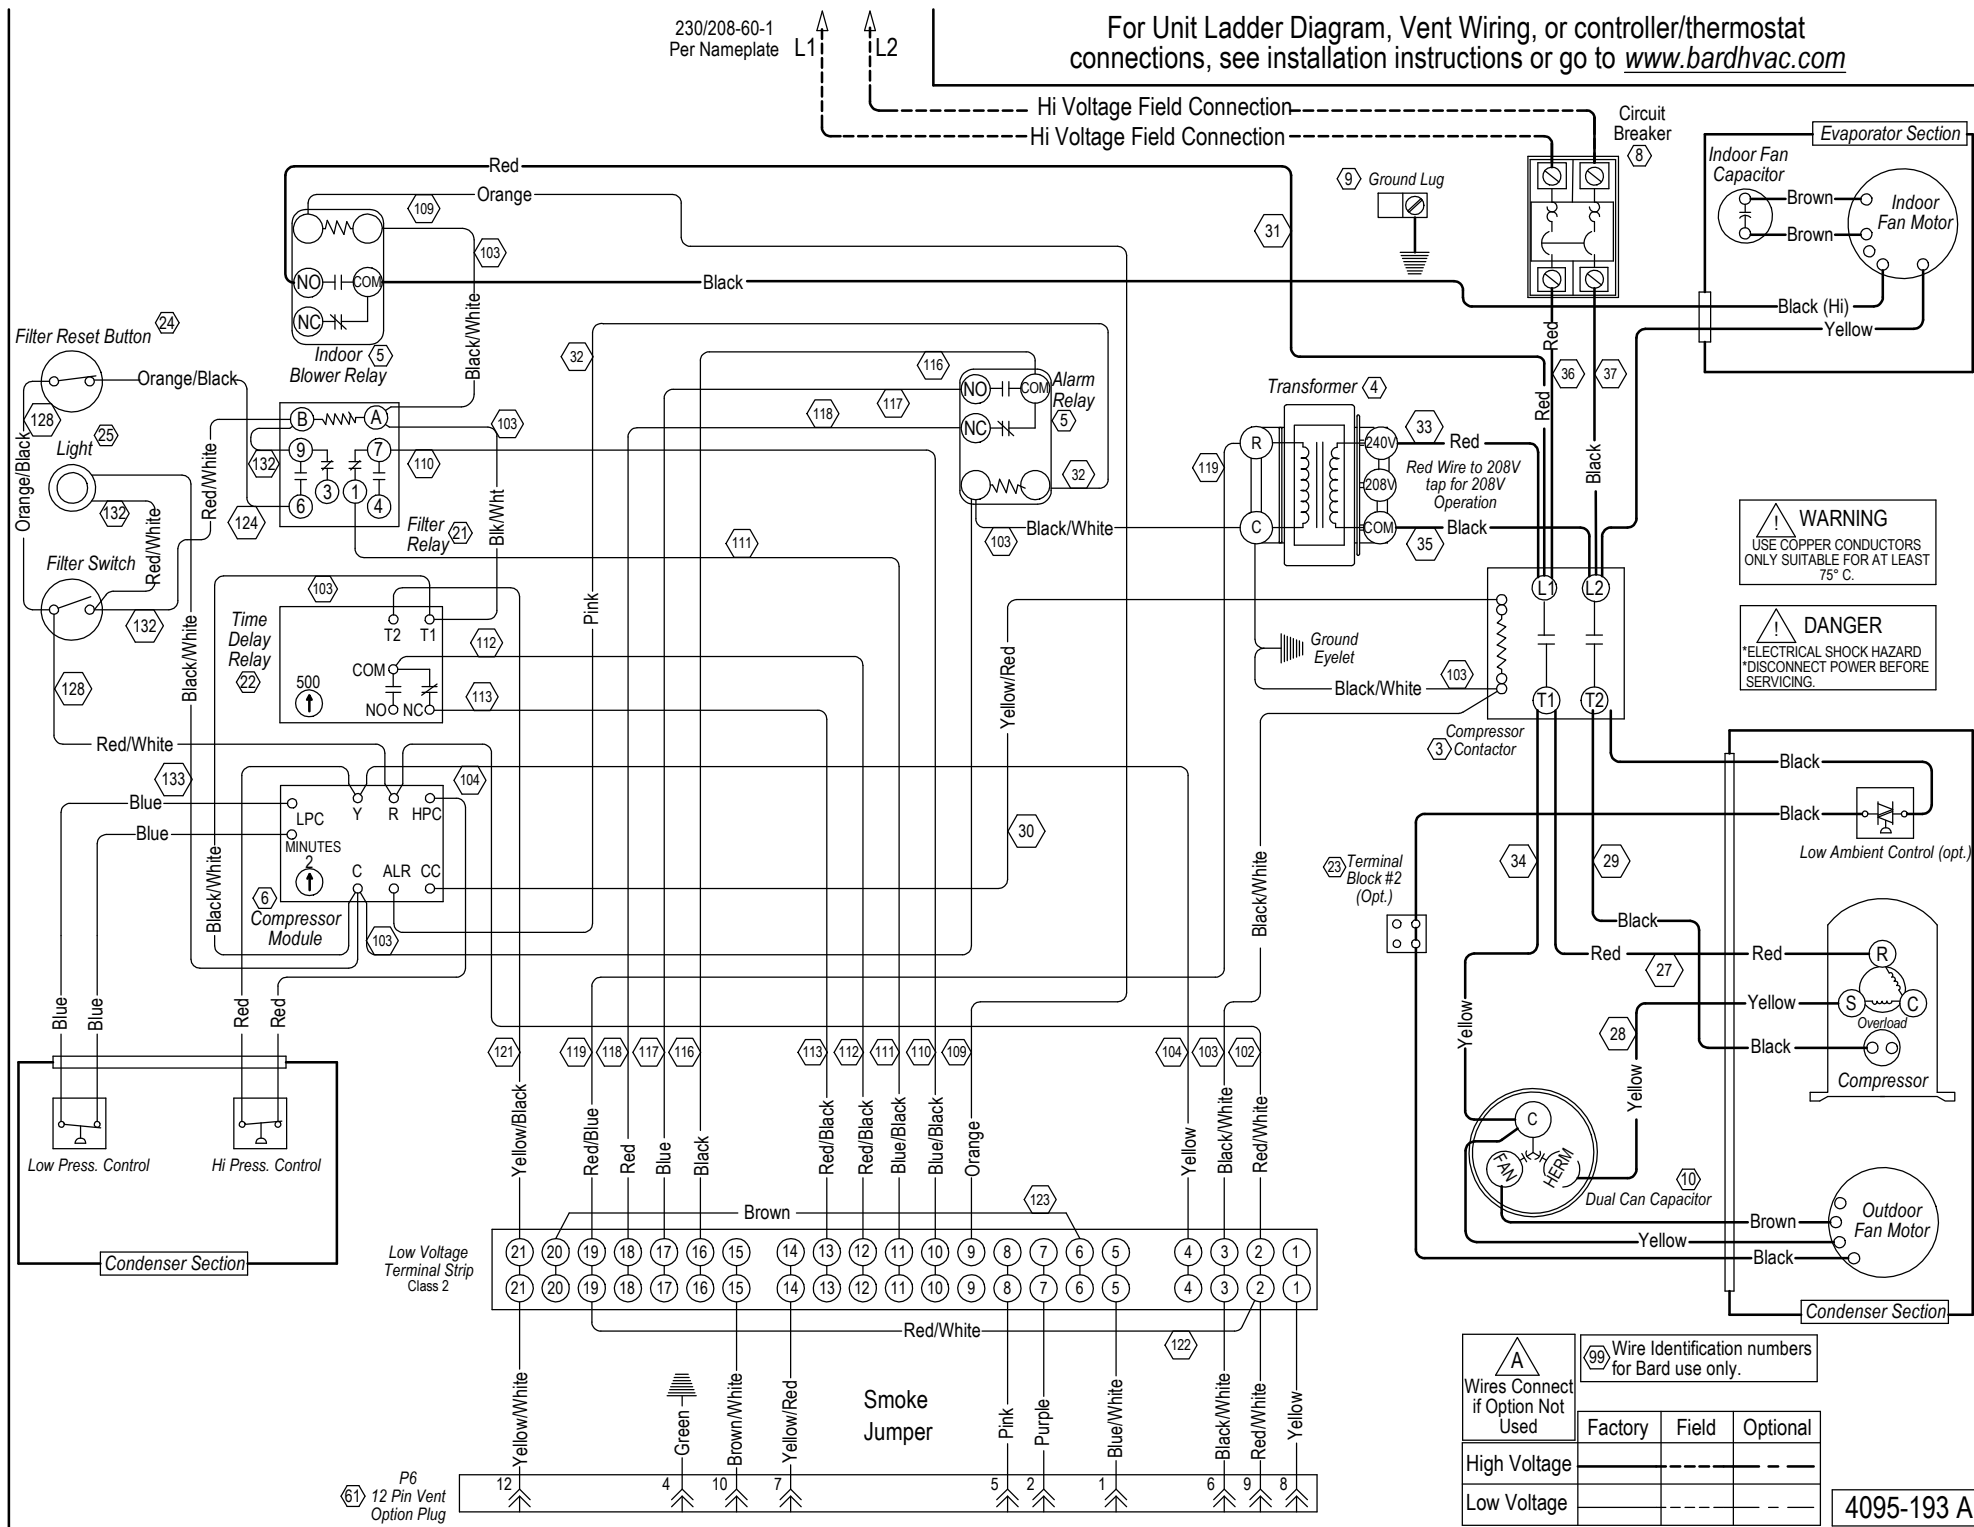

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

 **DANGER**
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING

 Wires Connect if Option Not Used	 Wire Identification number for Bard use only.		
	Factory	Field	Optional
High Voltage		---	---
Low Voltage		---	---

4095-193 A