
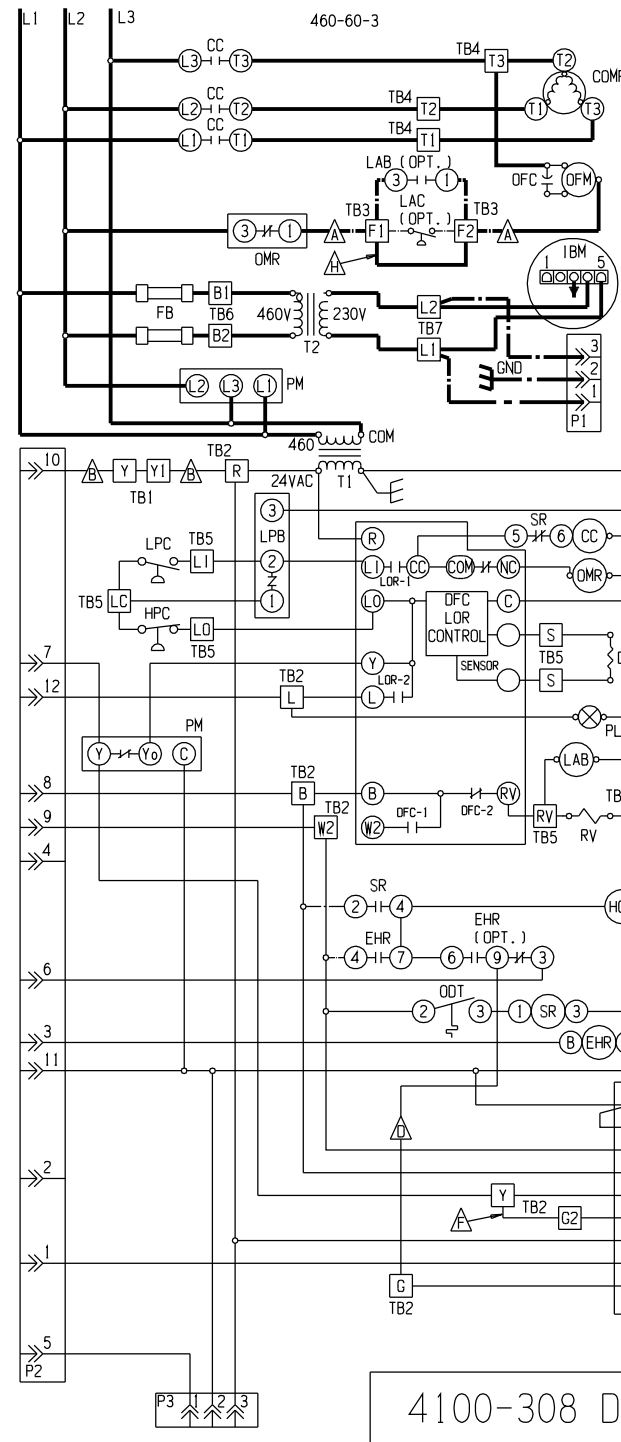


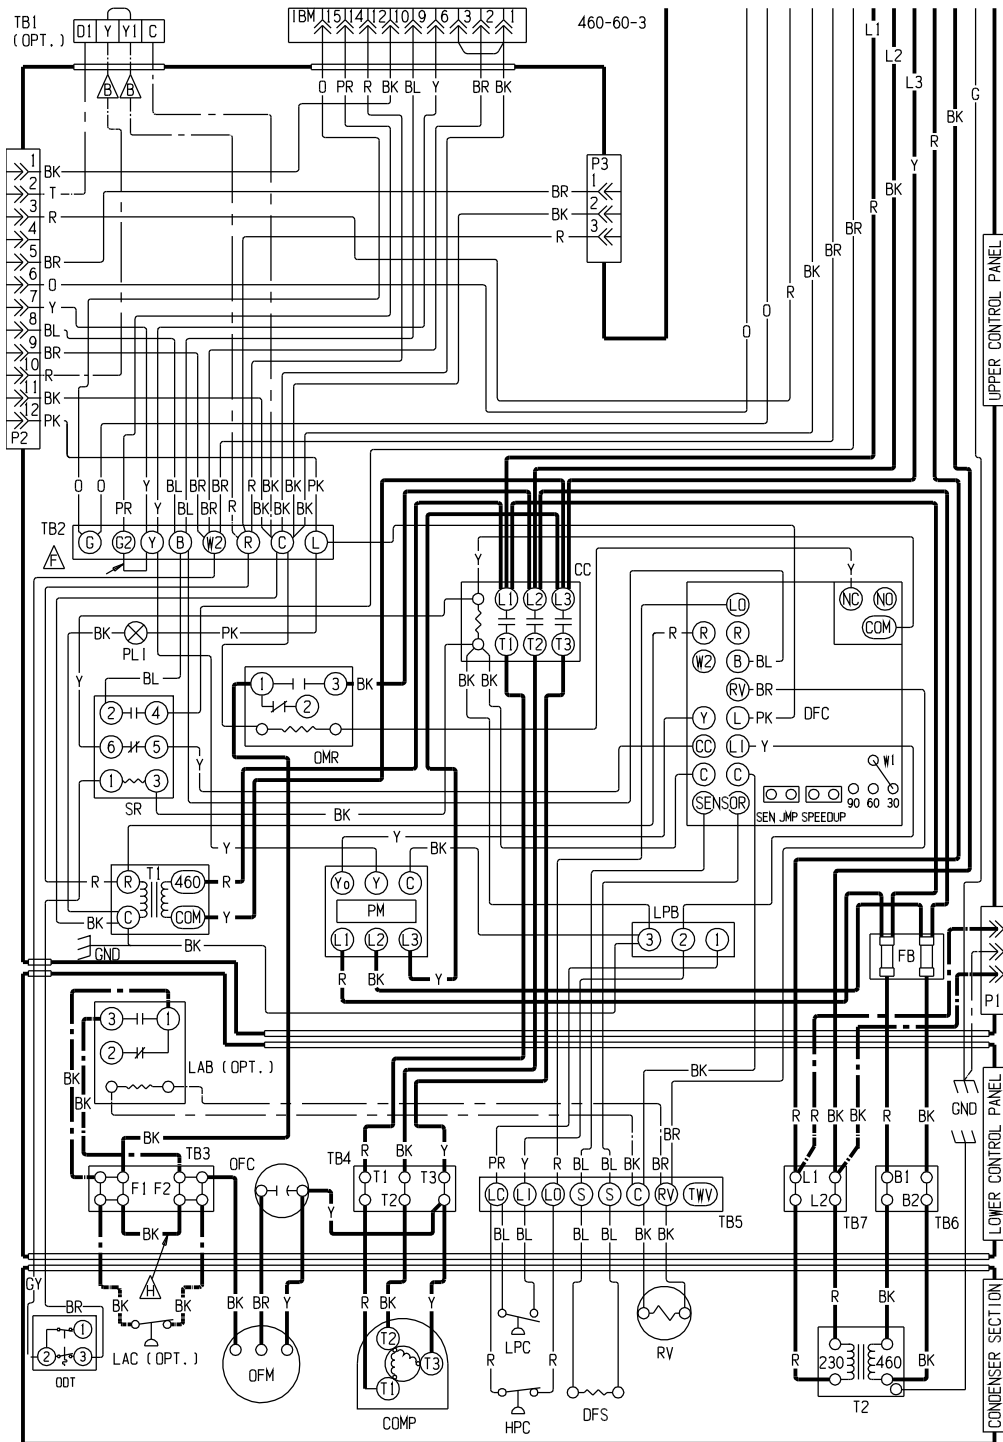

COMPONENT CODE			
CB1	CIRCUIT BREAKER #1		
CB2	CIRCUIT BREAKER #2		
CC	COMPRESSOR CONTACTOR		
COMP	COMPRESSOR		
DCC	DUAL CAN CAPACITOR		
DFC	DEFROST CONTROL		
DFS	DEFROST SENSOR		
FB	FUSE BLOCK		
GND	GROUND		
HC1	HEATER CONTACTOR #1		
HC2	HEATER CONTACTOR #2		
HPC	HIGH PRESSURE CONTROL		
HS1	HEAT STRIP #1		
HS2	HEAT STRIP #2		
IBM	INDOOR BLOWER MOTOR		
LAB	LOW AMBIENT BYPASS		
LAC	LOW AMBIENT CONTROL		
LPB	LOW PRESSURE BYPASS		
LPC	LOW PRESSURE CONTROL		
LS	LIMIT SWITCH		
OFM	OUTDOOR FAN MOTOR		
OMR	OUTDOOR MOTOR RELAY		
P1	ACCESSORY PLUG #1		
P2	ACCESSORY PLUG #2		
P3	ACCESSORY PLUG #3		
PL1	PRESSURE LOCKOUT INDICATOR		
PM	PHASE MONITOR		
RV	REV. VALVE SOLINOID		
SR	STAGING RELAY		
T1	TRANSFORMER #1		
T2	TRANSFORMER #2		
TB1	TERMINAL BLOCK #1		
TB2	TERMINAL BLOCK #2		
TB3	TERMINAL BLOCK #3		
TB4	TERMINAL BLOCK #4		
TB5	TERMINAL BLOCK #5		
TB6	TERMINAL BLOCK #6		
TB7	TERMINAL BLOCK #7		
TWV	THREE WAY VALVE		

Labeled wires connect if no options used.			
MOVE RED WIRE TO 208V TAP FOR 208V OPERATION			
INSTALL JUMPER FOR HIGH SPEED BLOWER OPER. ON MODELS 36 & 42			

FUSES	
1 KVA	3.2 A
1.5 KVA	5.0 A
2 KVA	7.0 A
3 KVA	10.0 A

REMOVE JUMPER WHEN LAC IS INSTALLED			
-------------------------------------	--	--	--

WIRING CODE			
	FACTORY STD.	FIELD	OPTIONAL
HIGH VOLTAGE			
LOW VOLTAGE			
ACCESSORY			

COLOR CODE			
BK	BLACK	PK	PINK
BL	BLUE	PR	PURPLE
BR	BROWN	R	RED
G	GREEN	T	TAN
GY	GRAY	Y	YELLOW
O	ORANGE		

4100-308 D