
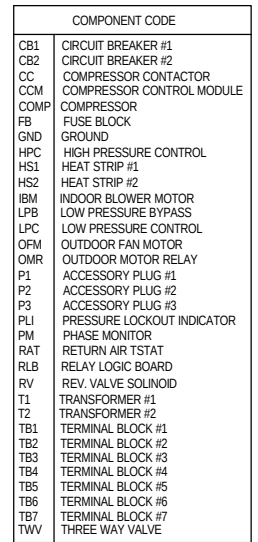


OPTIONAL CS2000A ENERGY MONITOR
(USE WITH "G" THERMOSTAT ONLY)

AREA OCCUPIED			HVAC			PWR
N/C	N/C	G	N/C	N/C	G	

Wiring connections shown:

- Area Occupied G terminal connects to a common bus.
- HVAC G terminal connects to a common bus.
- PWR terminal connects to a common bus.
- Area Occupied N/C terminals connect to a common bus.
- HVAC N/C terminals connect to a common bus.

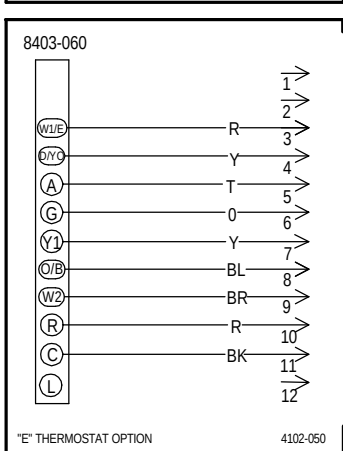

-  LABELED WIRES CONNECT IF NO OPTIONS USED.
 -  MOVE RED WIRE TO 208V TAP FOR 208V OPERATION
 -  INSTALL JUMPER FOR HIGH SPEED BLOWER OPER. ON MODELS 36,42, 48, AND 60
 -  REMOVE JUMPER WHEN LAC IS INSTALLED

WIRING CODE				
	FACTORY STD.	FIELD	OPTIONAL	
HIGH VOLTAGE				
LOW VOLTAGE				
ACCESSORY				

COLOR CODE			
BK	BLACK	PK	PINK
BL	BLUE	PR	PURPLE
BR	BROWN	R	RED
G	GREEN	T	TAN
GY	GRAY	Y	YELLOW
O	ORANGE		