


USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.



*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

	Factory	Field	Optional
High Voltage	————	-----	— -- —
Low Voltage	————	-----	— -- —

230/208-60-3, Represents Max. KW Electric Heat

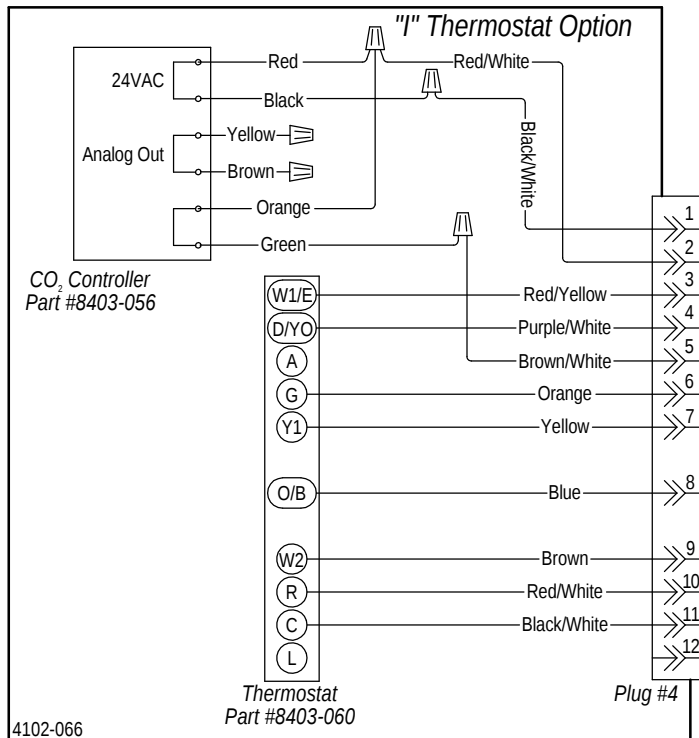

- Labeled wires connect if no options used.
-     Move Red wire to 208V tap for 208V operation.
 -  Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.
 -  Remove jumper when Low Amb. Bypass is installed.
 -  Remove jumper when CS2000A Energy Monitor is installed.

