



 **DANGER**
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

	Factory	Field	Optional
High Voltage		---	---
Low Voltage		---	---

- Labeled wires connect if no options used.
- Move Red wire to 208V tap for 208V operation.
- Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.
- Remove jumper when Low Amb. Bypass is installed.
- Remove jumper when CS2000A Energy Monitor is installed.

