



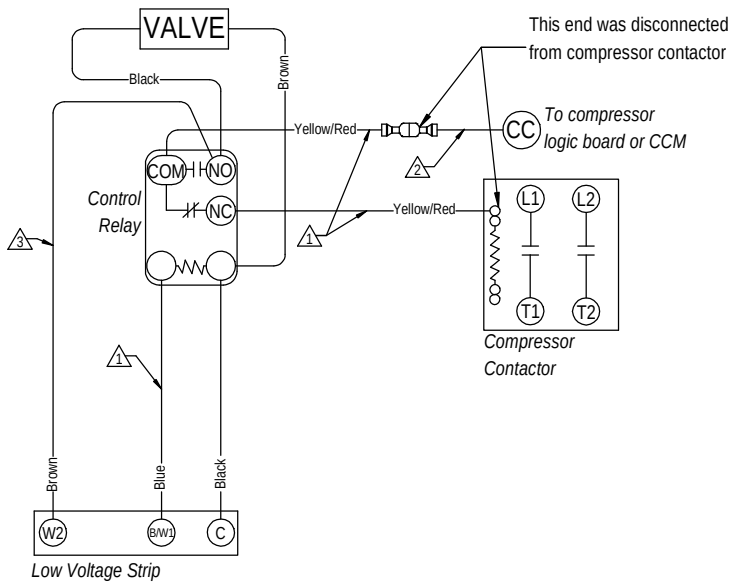

Wiring shown is for hot water as primary heat in heat pump units

- 1** Discard wires when used for supplemental or secondary heat, or air conditioner models.
- 2** Leave wire from "CC" connected to compressor contactor when used for supplemental or secondary heat
- 3** Brown wire connects to "W2" for heat pump units, but for air conditioners, the brown wire connects to "B/W1".

4102-081 A

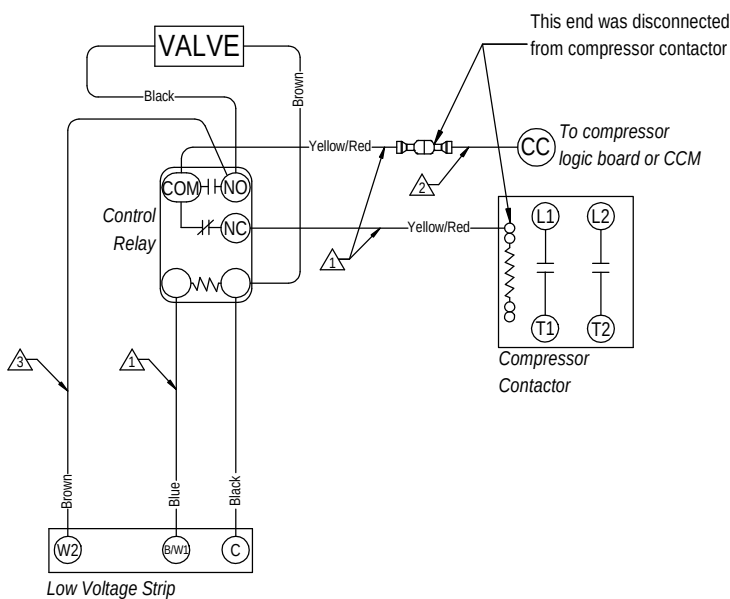

Wiring shown is for hot water as primary heat in heat pump units

- 1** Discard wires when used for supplemental or secondary heat, or air conditioner models.
- 2** Leave wire from "CC" connected to compressor contactor when used for supplemental or secondary heat
- 3** Brown wire connects to "W2" for heat pump units, but for air conditioners, the brown wire connects to "B/W1".

4102-081 A