
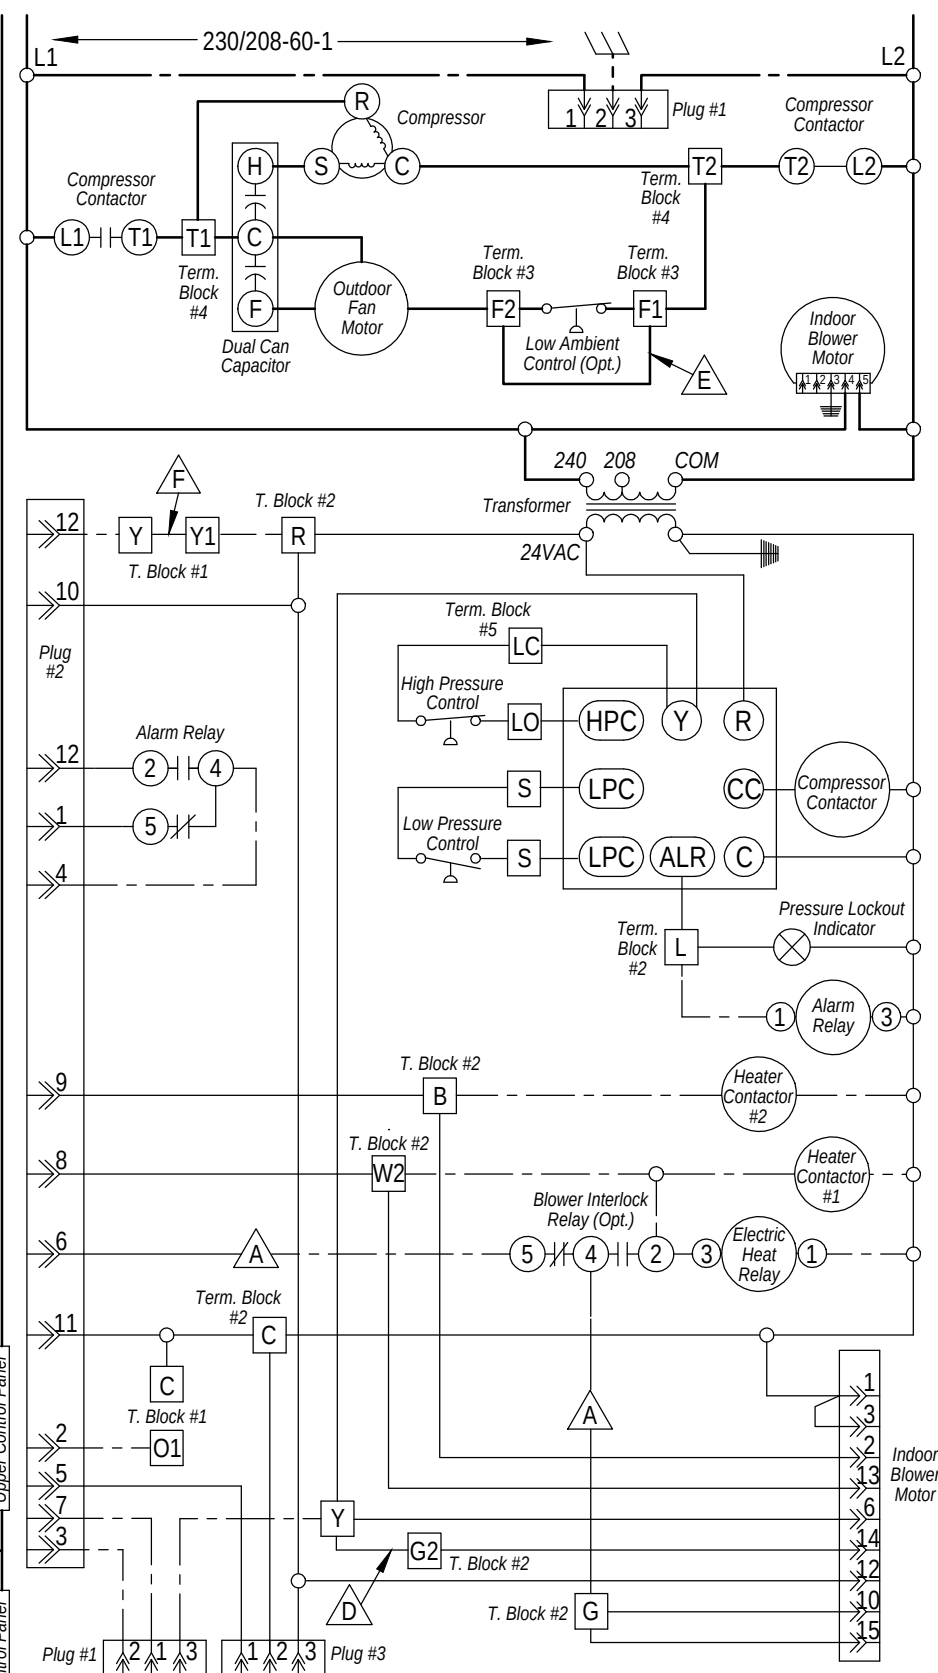


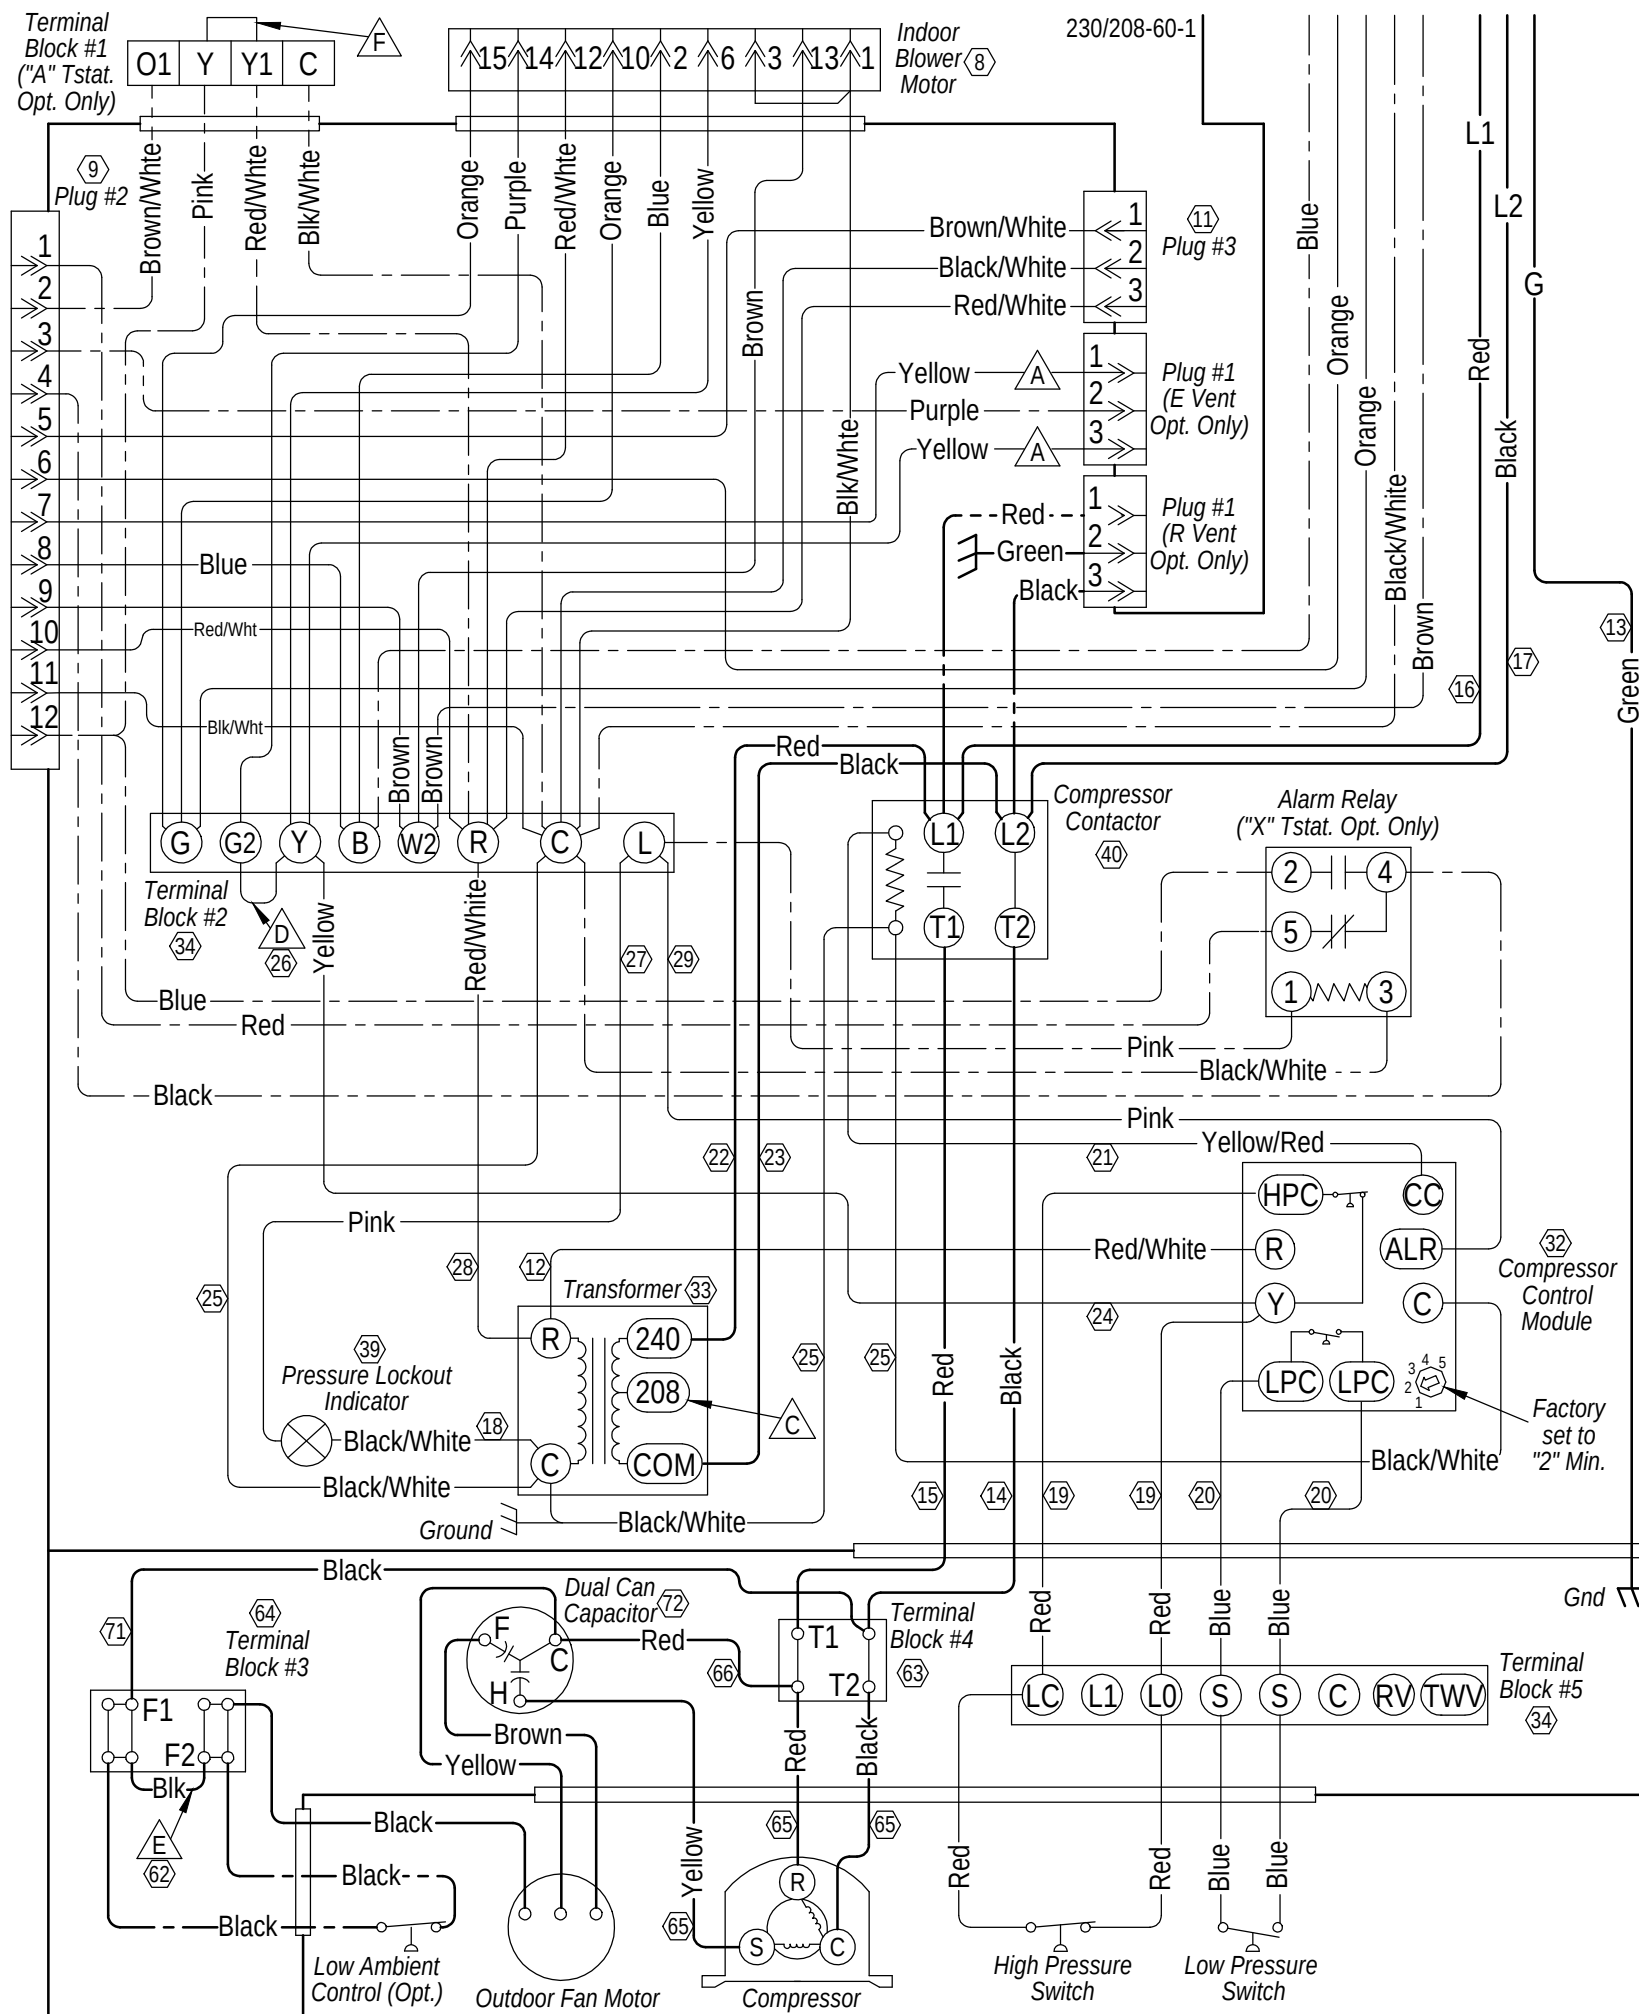

Legend:

- A** Labeled wires connect if no options used.
- B** Move Red wire to 208V tap for 208V operation.
- C** Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.
- D** Remove jumper when Low Amb. Control is installed.
- E** Remove jumper when CS2000 Energy Monitor is installed.
- F** Remove jumper when CS2000 Energy Monitor is installed.

WARNING
 USE COPPER CONDUCTORS
 ONLY SUITABLE FOR AT LEAST
 75° C.

DANGER
 *ELECTRICAL SHOCK HAZARD
 *DISCONNECT POWER BEFORE
 SERVICING.

Bard
 SINCE 1914

Bard Mfg. Co.
 Bryan, Ohio

4107-102

	Factory	Field	Optional
High Voltage			
Low Voltage			