
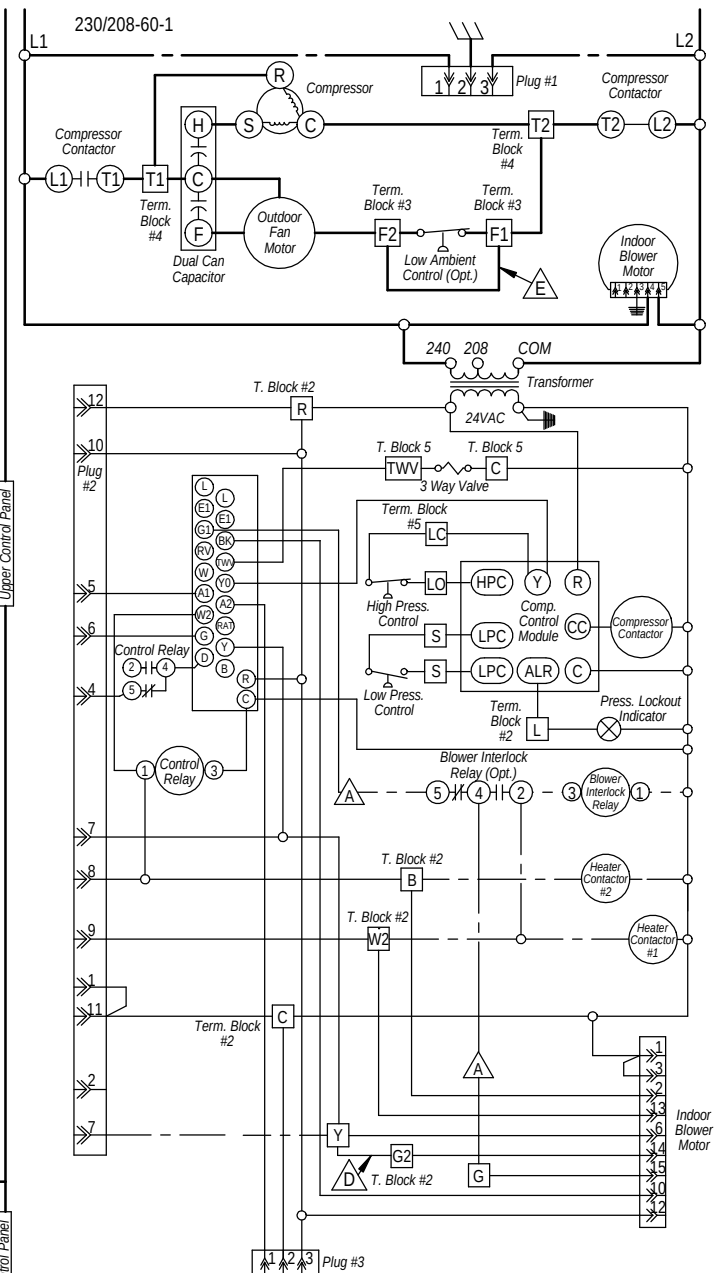


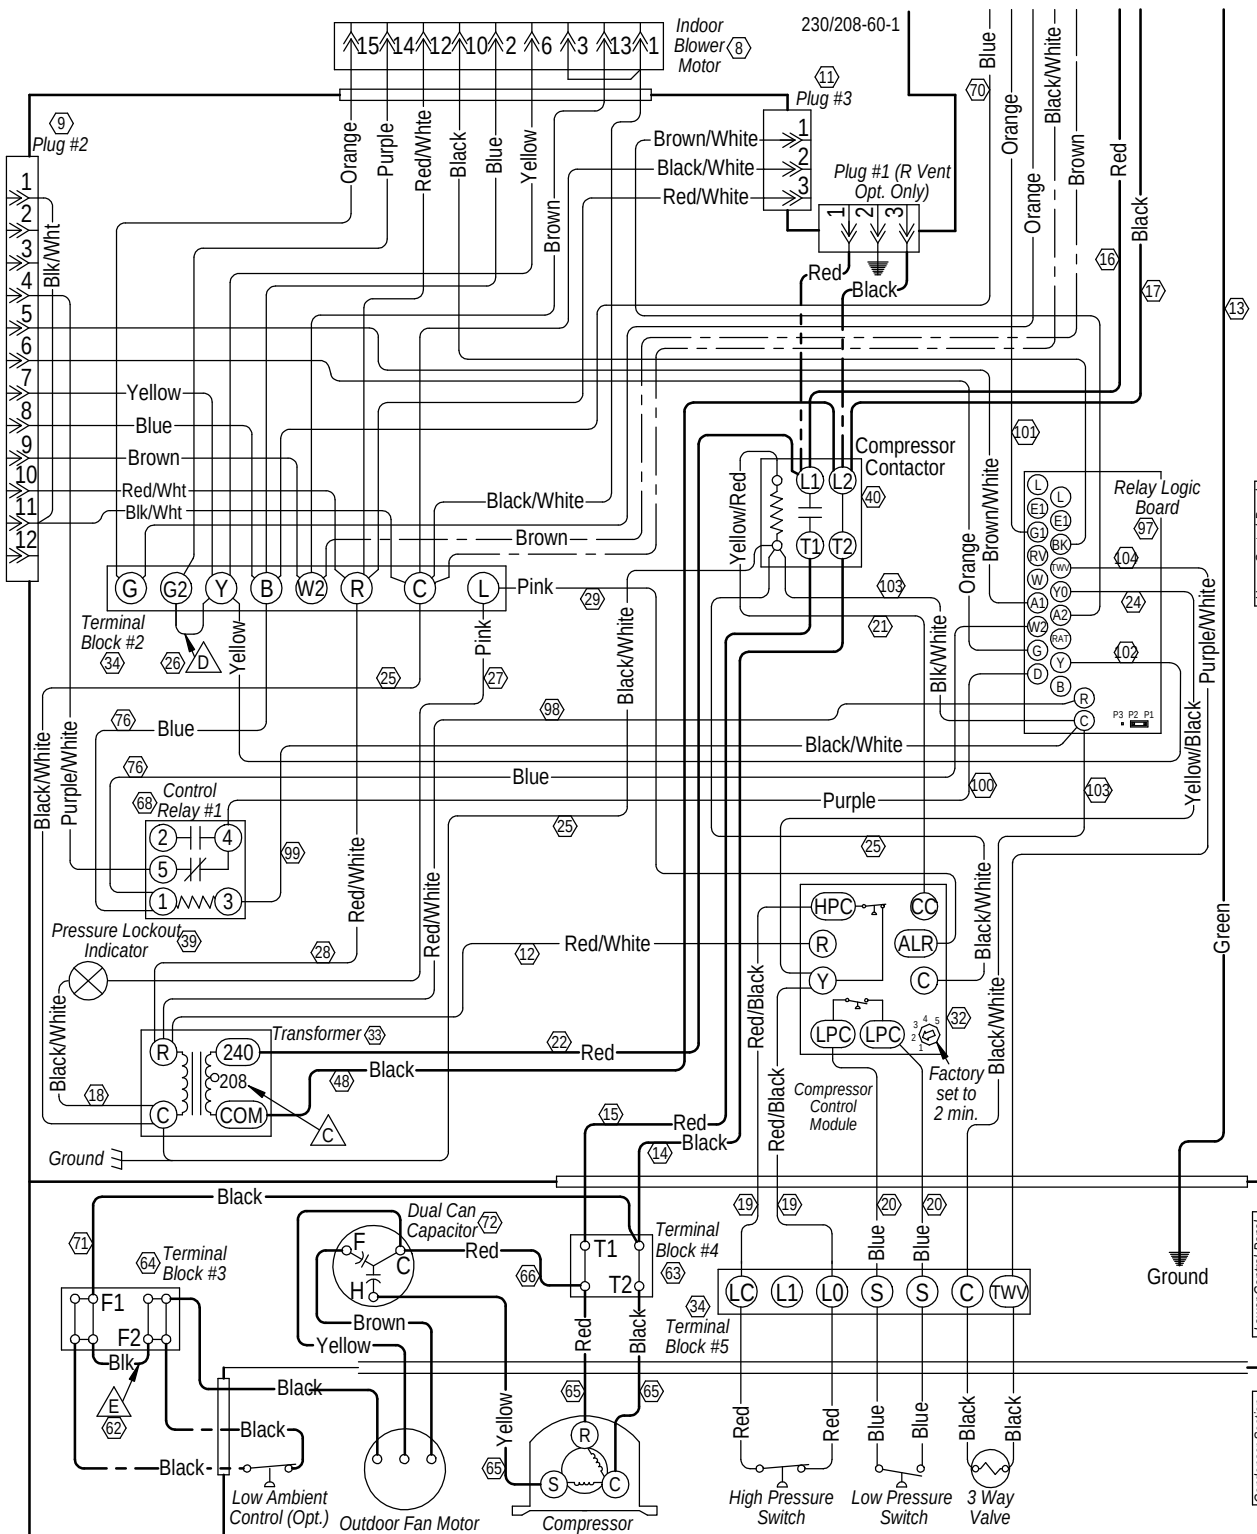

- Legend:**
- A, B** Labeled wires connect if no options used.
 - C** Move Red wire to 208V tap for 208V operation.
 - D** Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.
 - E** Remove jumper when Low Amb. Control is installed.
- | | Factory | Field | Optional |
|--------------|---------|-------|----------|
| High Voltage | | | |
| Low Voltage | | | |

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

Bard
SINCE 1914

Bard Mfg. Co.
Bryan, Ohio

4107-105