


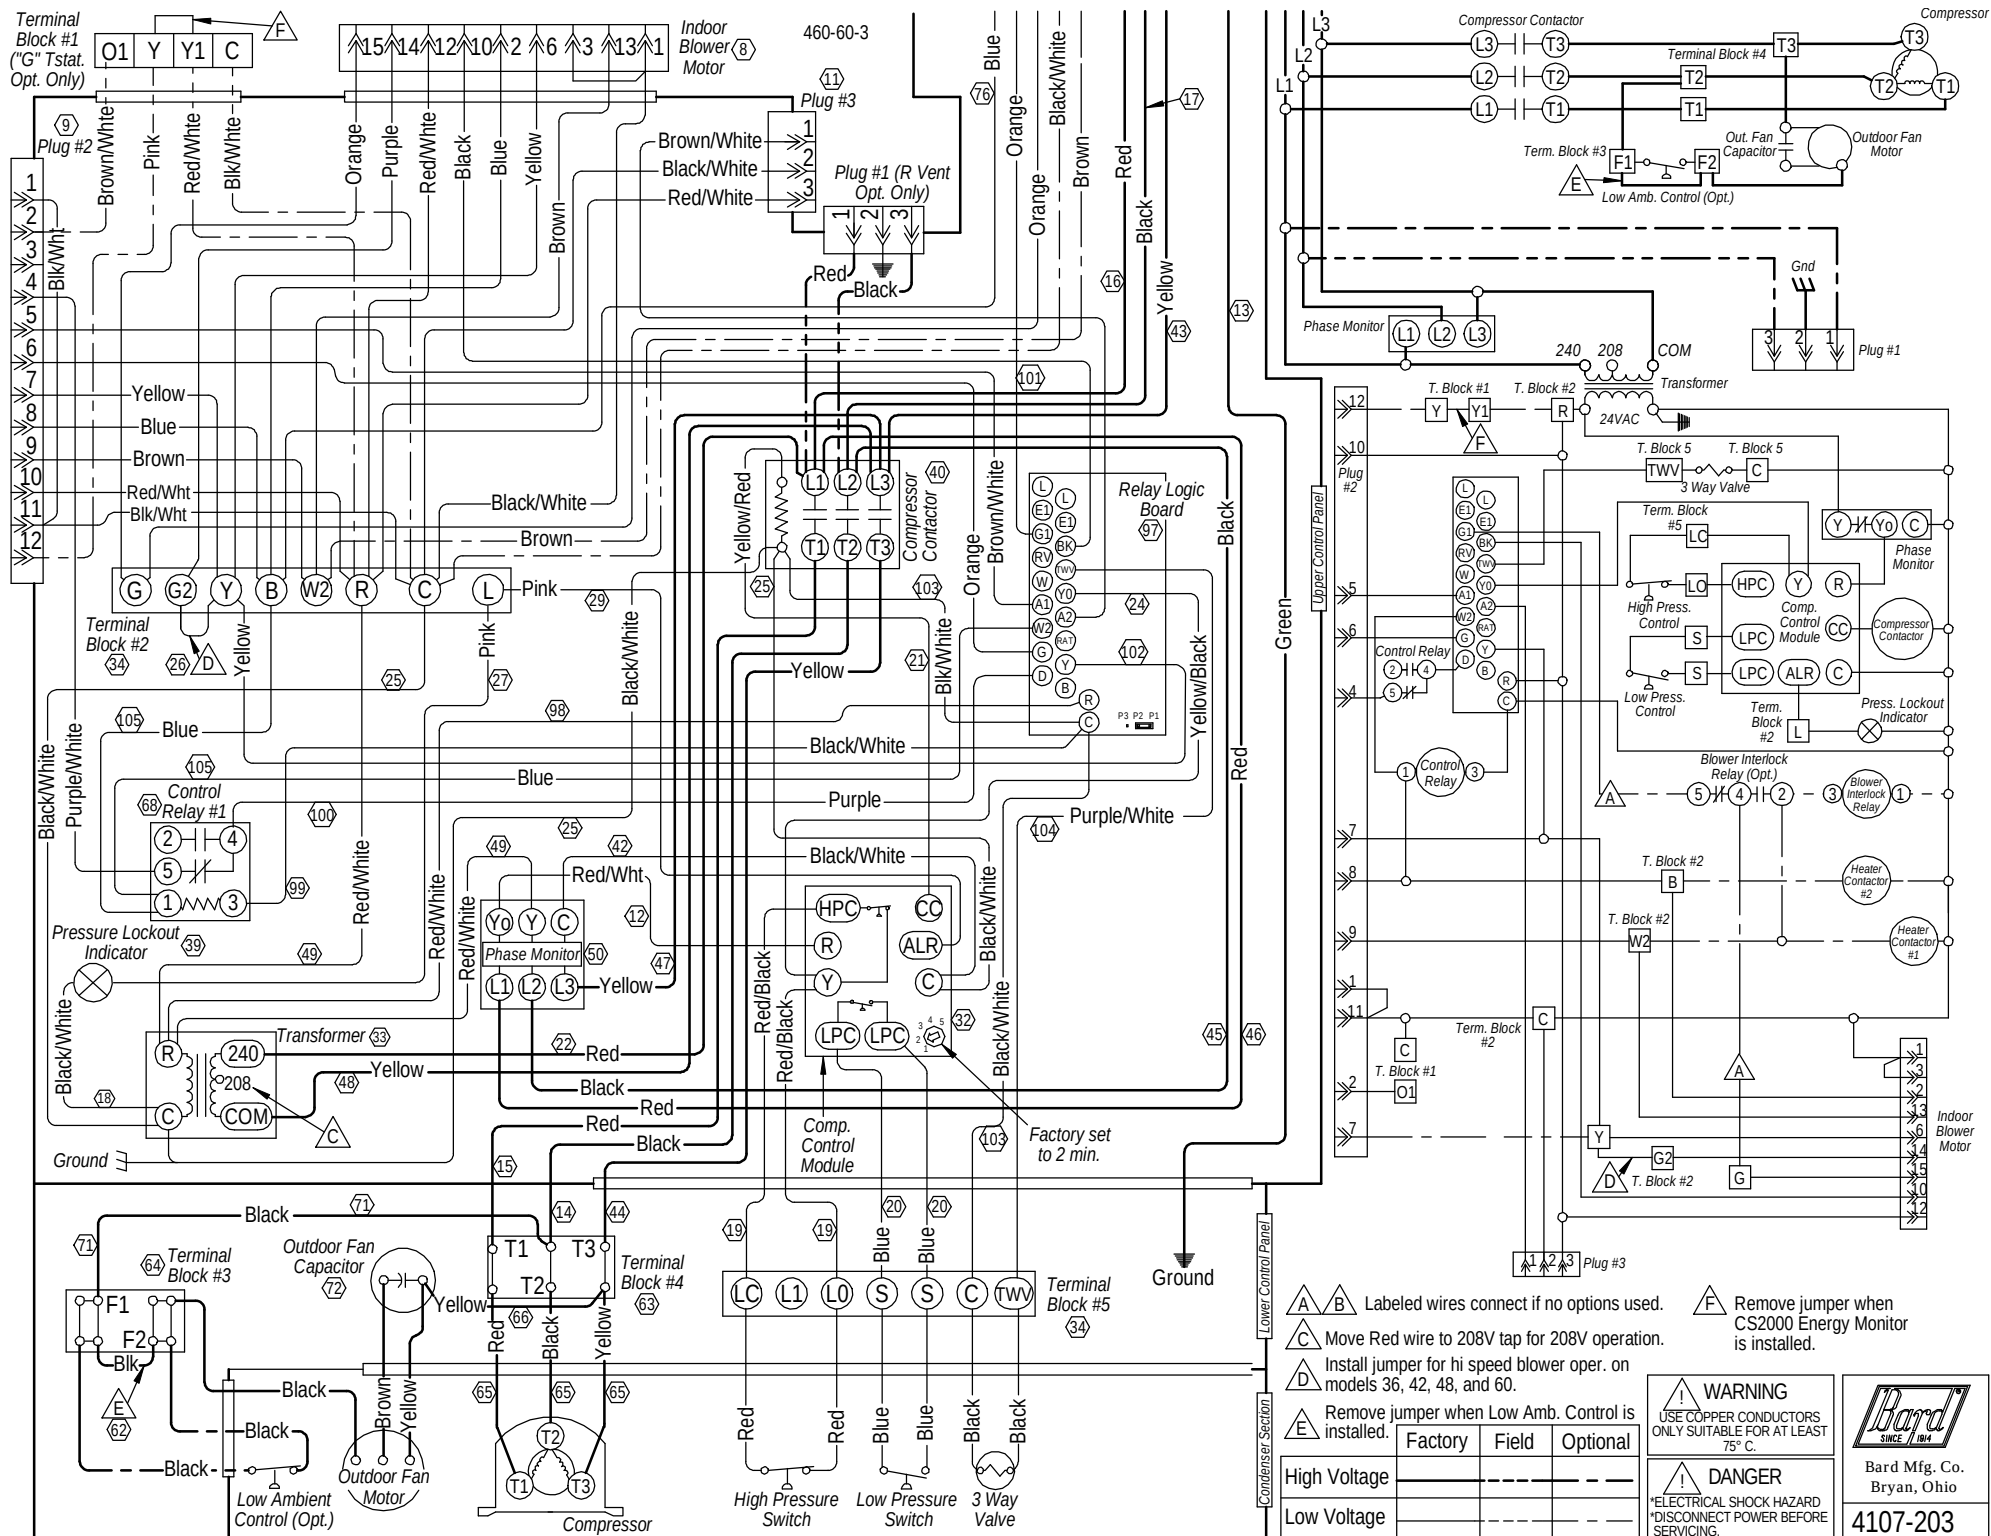

Legend:

- A, B** Labeled wires connect if no options used.
- C** Move Red wire to 208V tap for 208V operation.
- D** Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.
- E** Remove jumper when Low Amb. Control is installed.
- F** Remove jumper when CS2000 Energy Monitor is installed.

WARNING
USE COPPER CONDUCTORS.
ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

	Factory	Field	Optional
High Voltage			
Low Voltage			

Bard
Bard Mfg. Co.
Bryan, Ohio
4107-203