


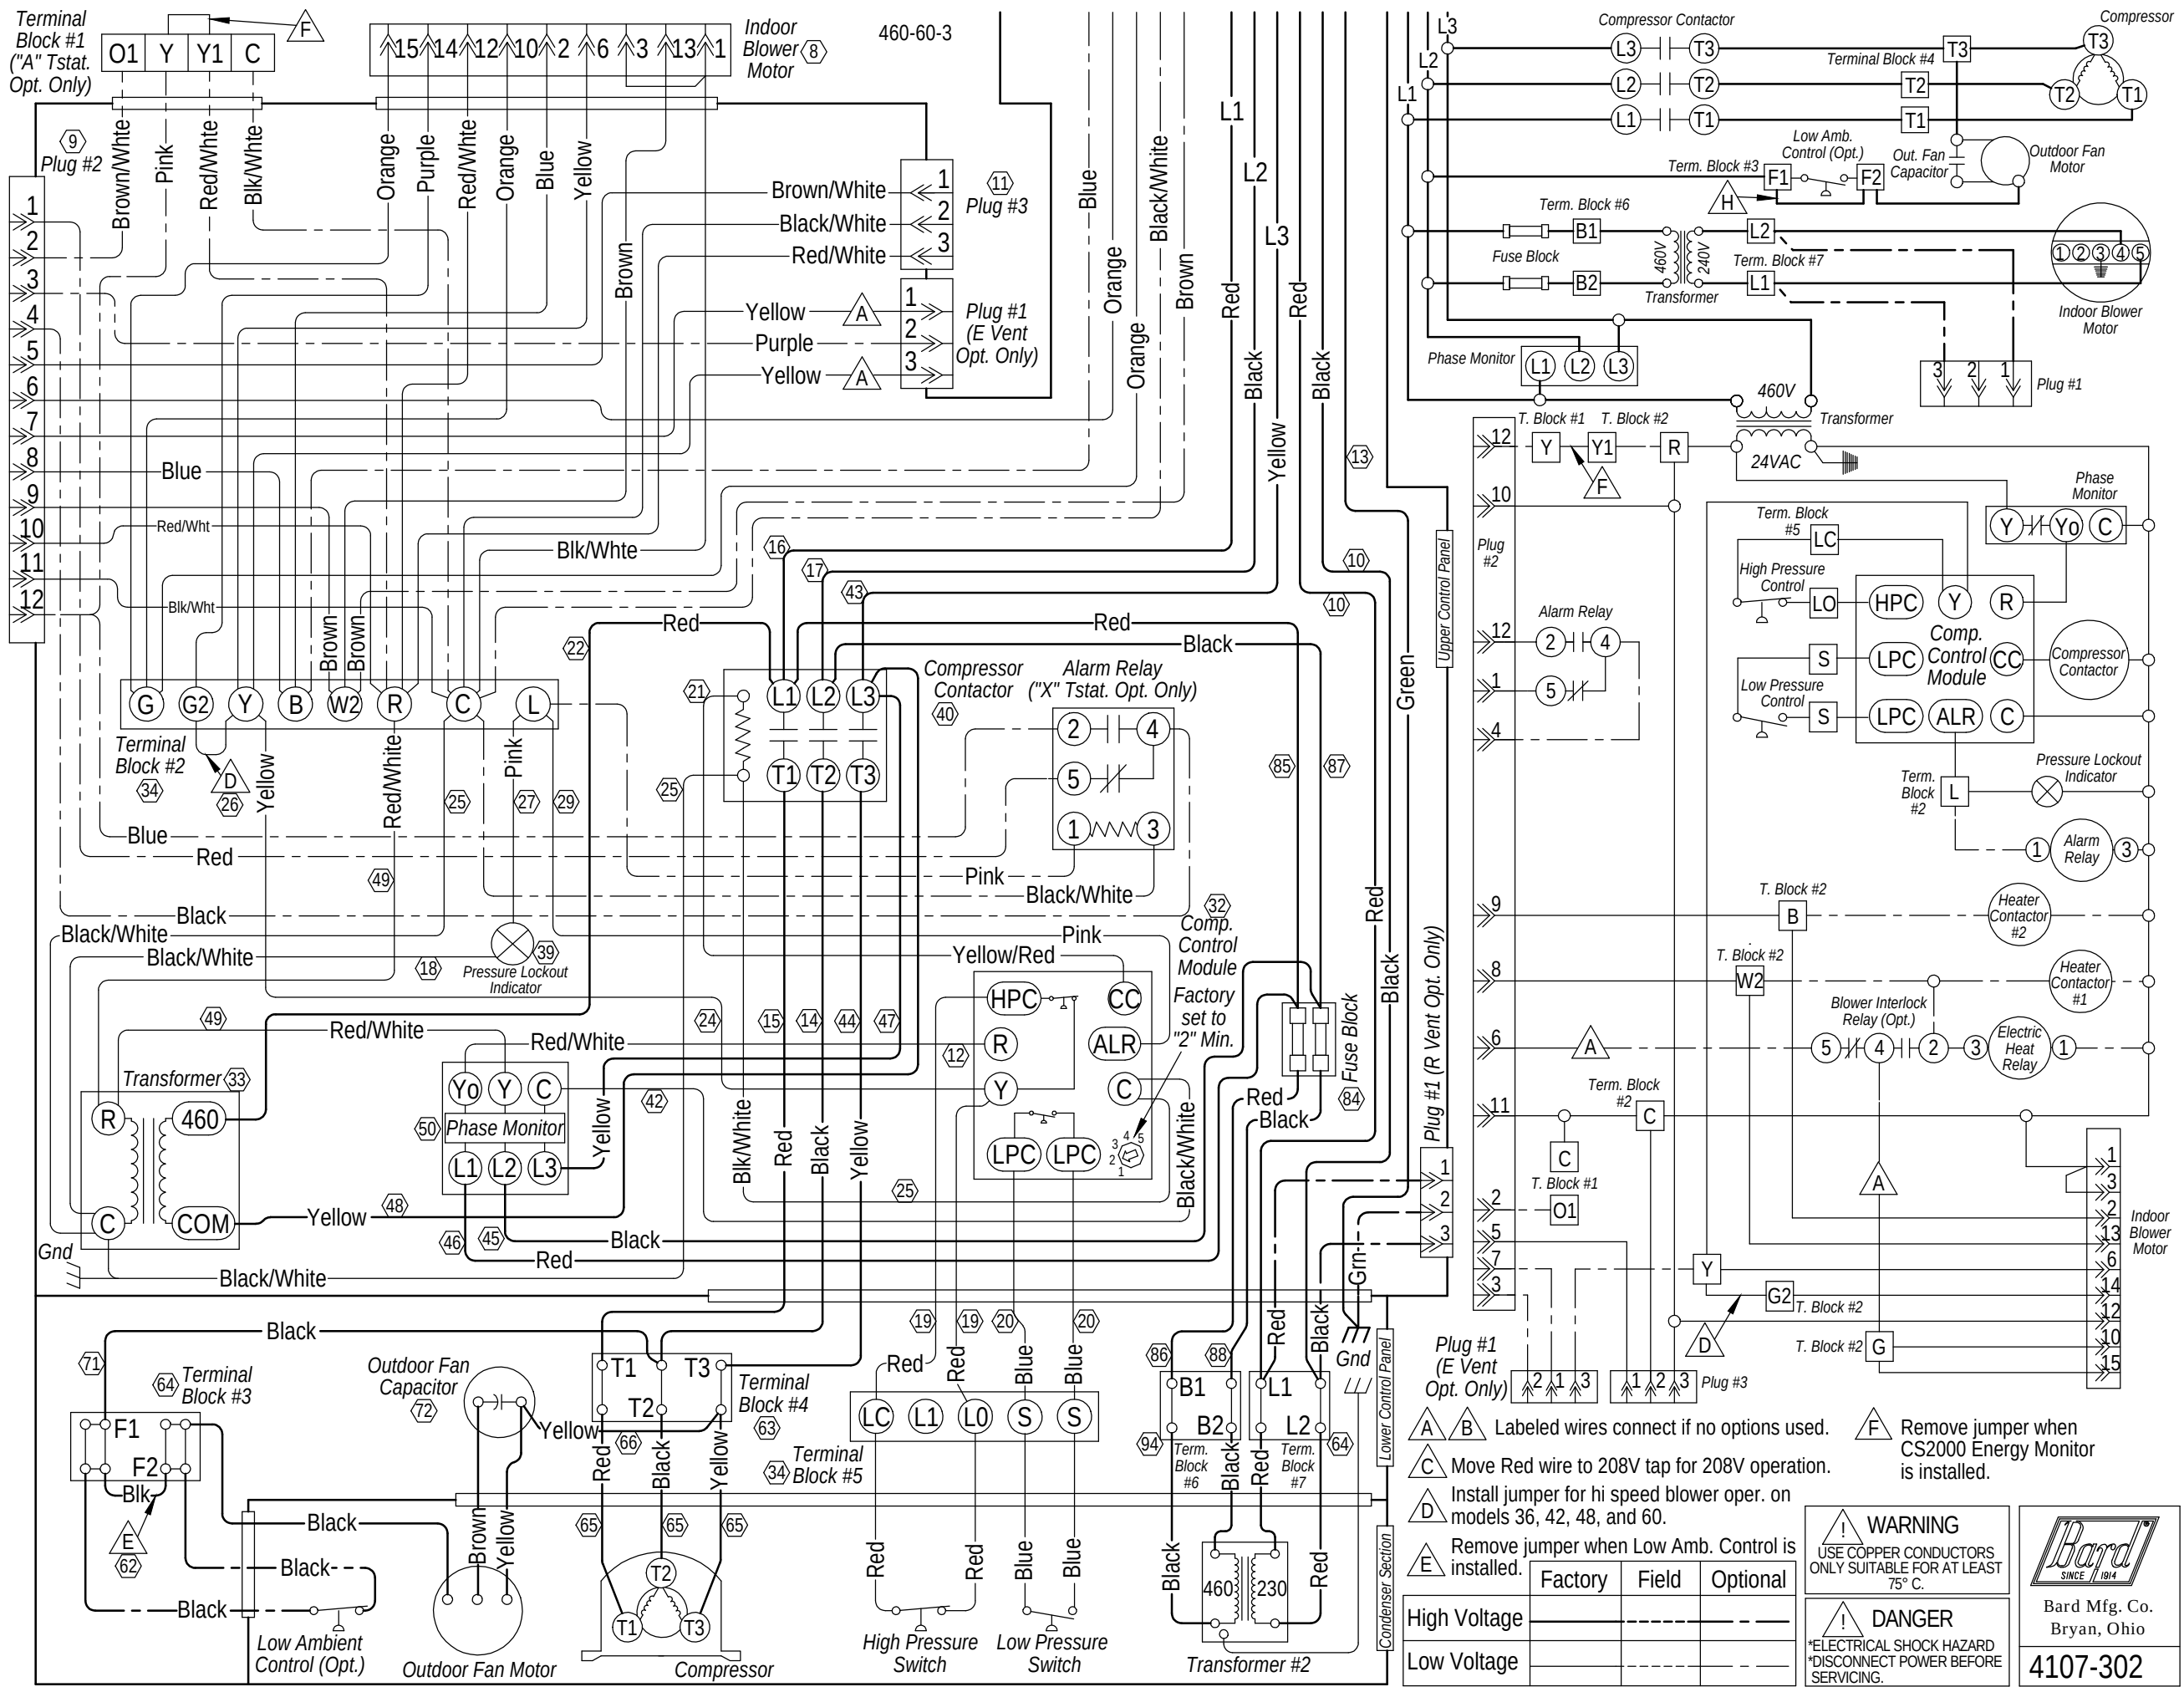

- A B** Labeled wires connect if no options used.
- C** Move Red wire to 208V tap for 208V operation.
- D** Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.
- E** Remove jumper when Low Amb. Control is installed.
- F** Remove jumper when CS2000 Energy Monitor is installed.

	Factory	Field	Optional
High Voltage			
Low Voltage			

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

Bard
SINCE 1914

Bard Mfg. Co.
Bryan, Ohio

4107-302