

COND. OVERFLOW INDICATOR ALARMS:
 RED LED: OVERFLOW DETECTED, SWITCH ACTIVATED
 GREEN LED: NO OVERFLOW DETECTED CURRENTLY
 AMBER LED: PREVIOUS OVERFLOW CONDITION DETECTED.

16 PIN PLUG FOR
 INDOOR BLOWER
 MOTOR

FREEZE
 THERMOSTAT

COND.
 OVERFLOW
 SWITCH

EVAP.FLOAT
 SWITCH

ECON DISABLE
 RELAY
 BLK/WHT

OVERFLOW
 LIGHT


ECON ENABLE
 RELAY

6 PIN PLUG FOR
 ELECTRICAL HEAT

NOTE: ECON ENABLE AND
 ECON DISABLE RELAY ARE
 LOCATED IN VENT OPTION.

NOTE: OVERFLOW LIGHT ALARM
 WILL ACTIVATE WHEN THERE
 IS AN OVERFLOW CONDITION.
 CHECK CONDENSER SWITCH LED
 FOR ALARM. IF NO ALARM AT COND.
 SWITCH CHECK EVAP PAN FLOAT SWITCH.

WIRES TO VENTILATION MODULE

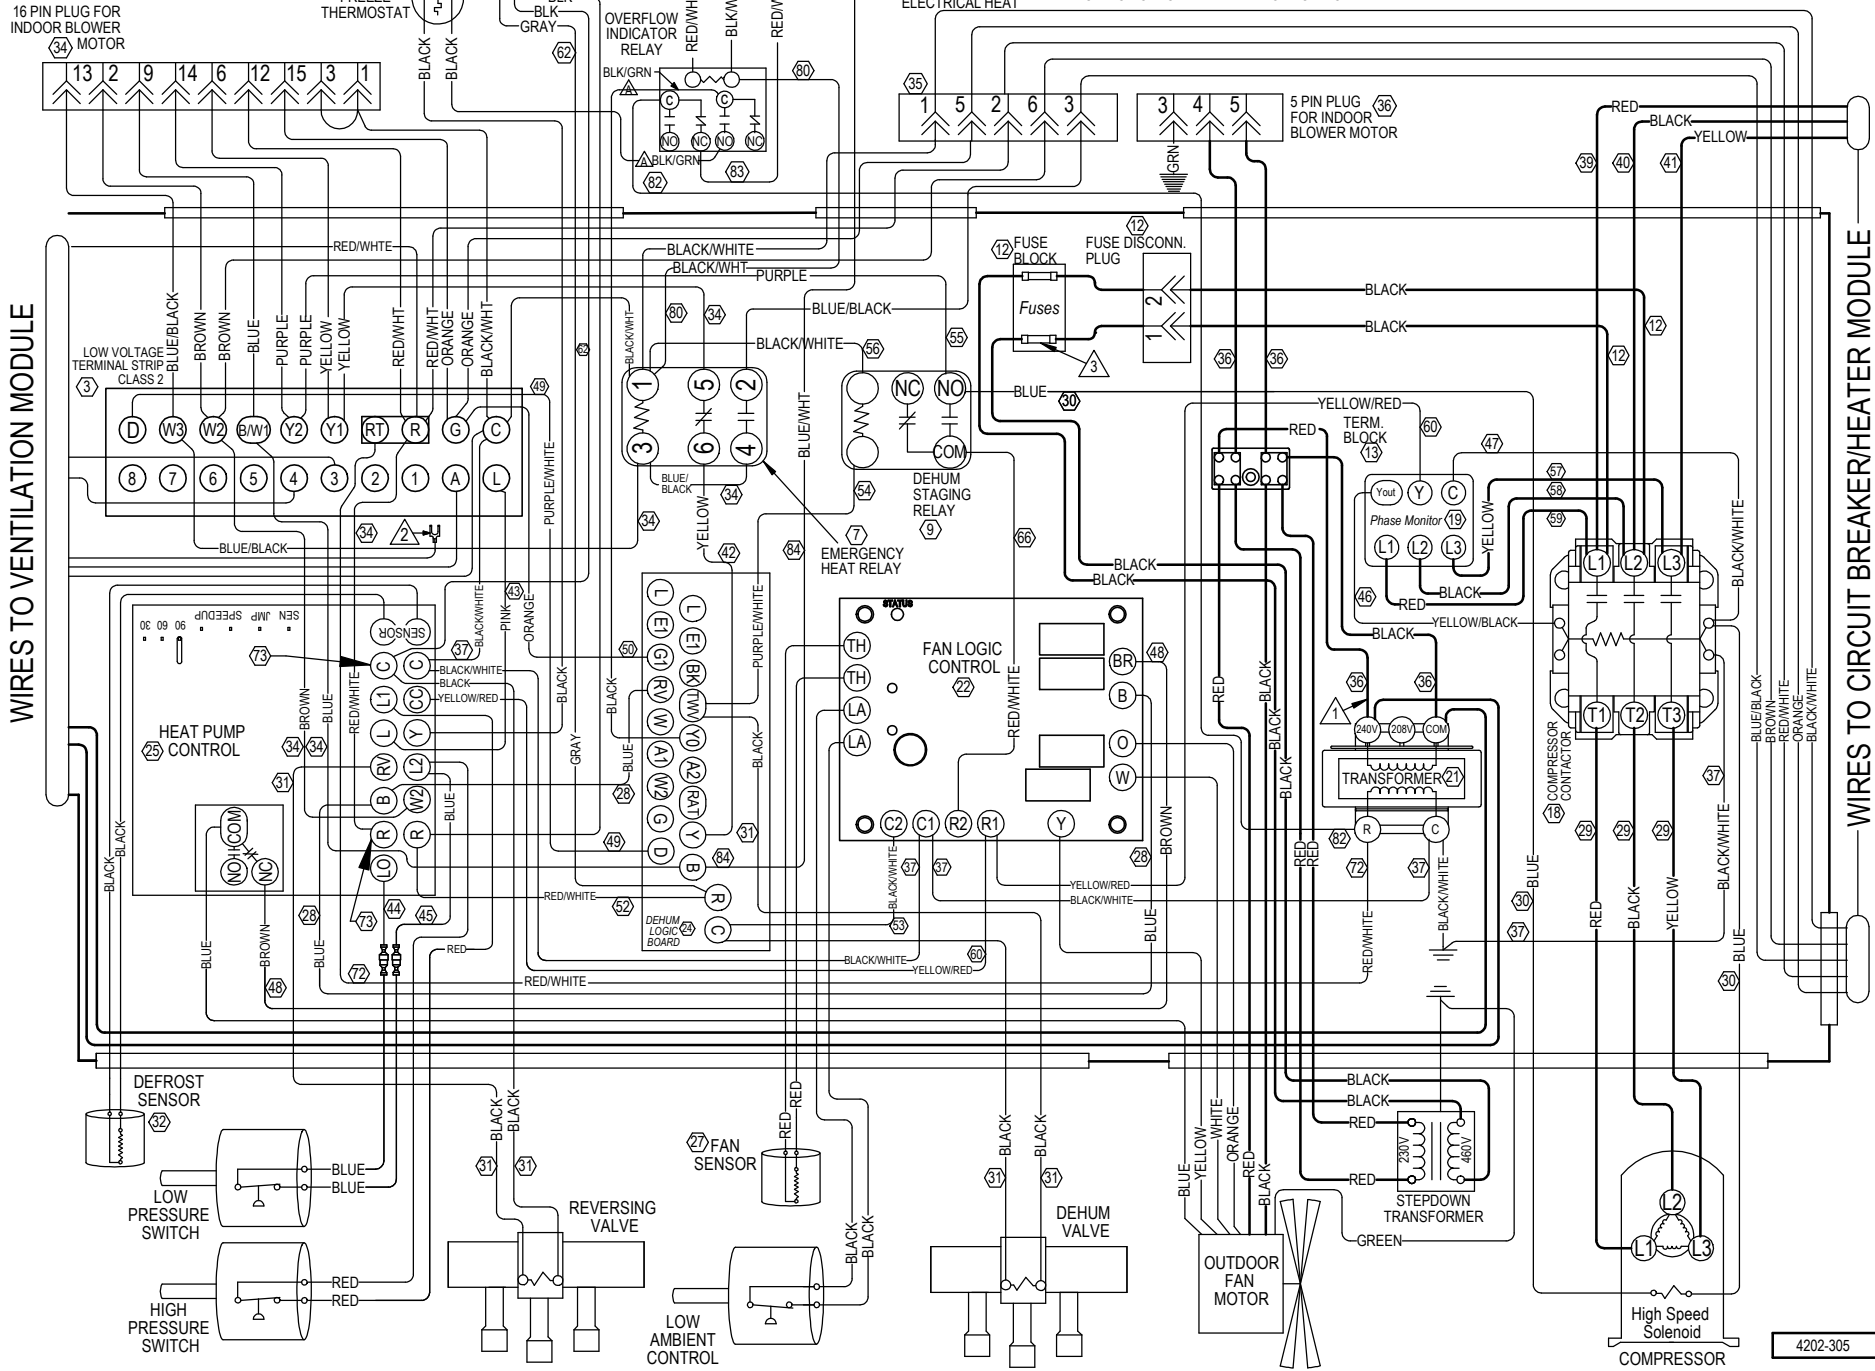

WIRES TO CIRCUIT BREAKER/HEATER MODULE