



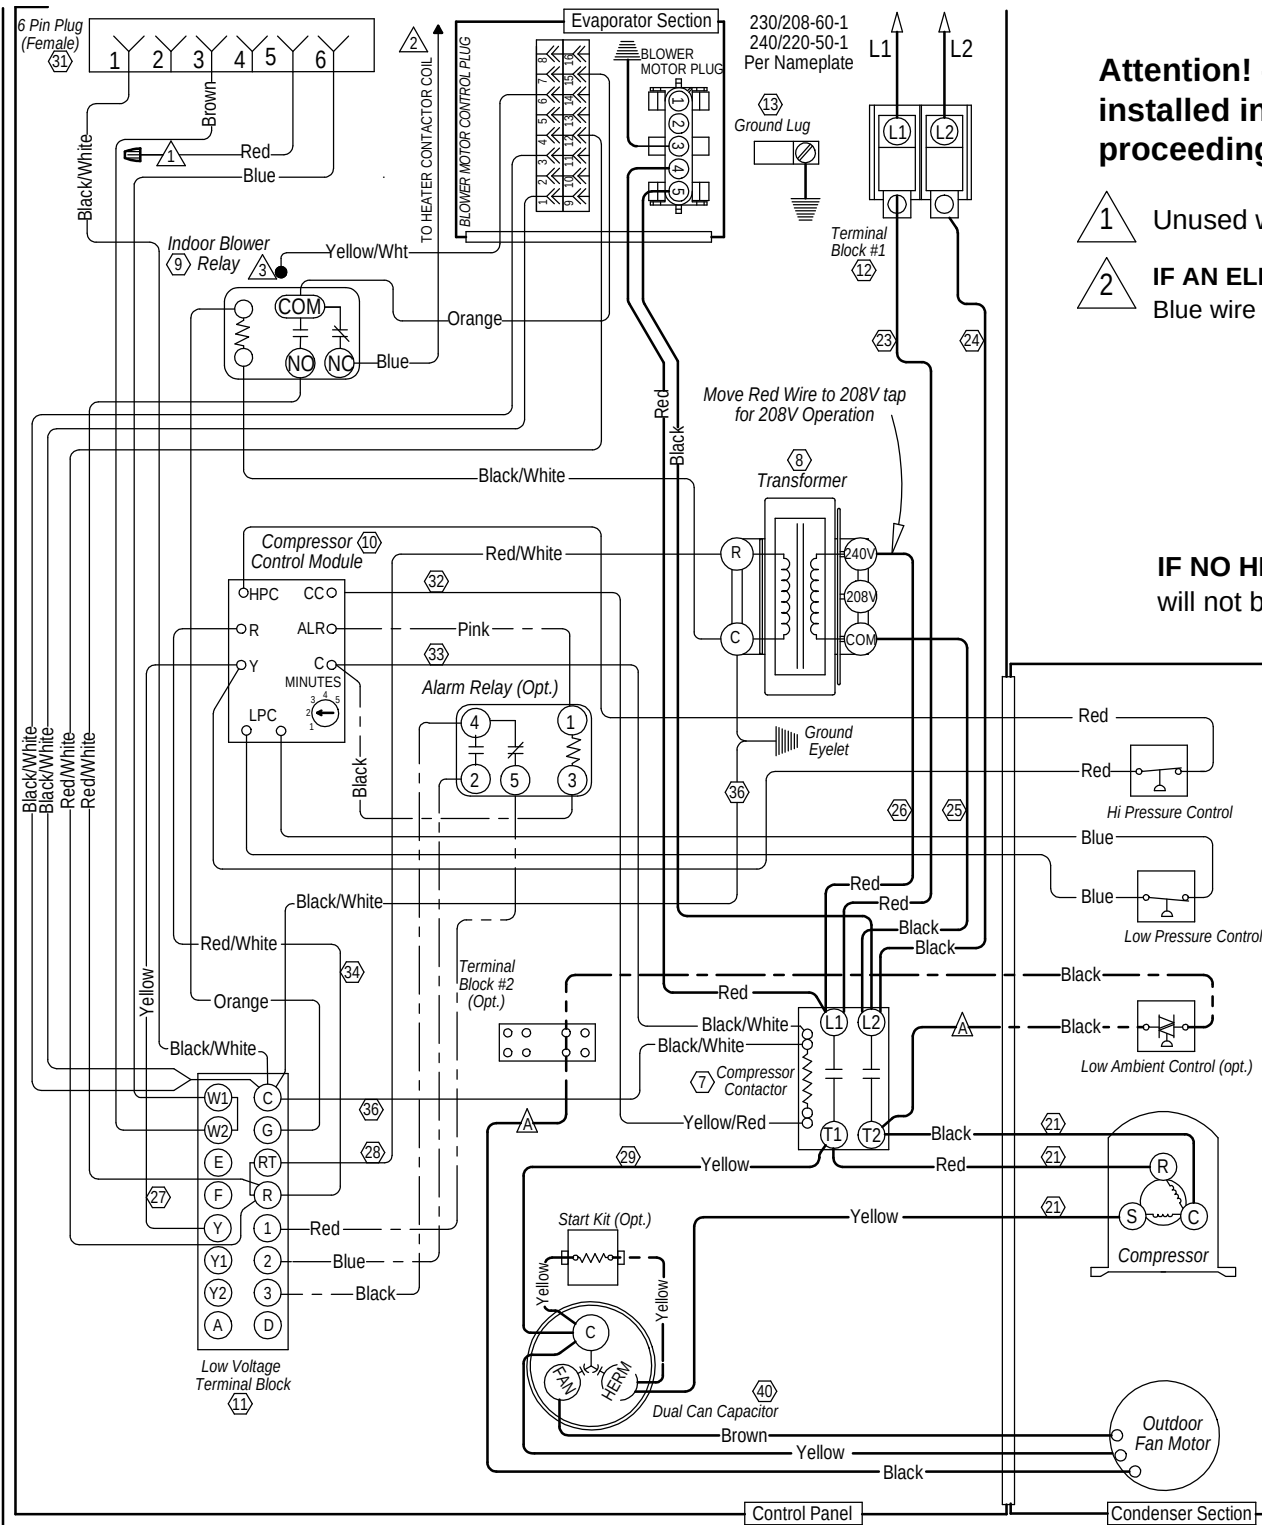

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

- 1 Unused wire. End should be covered with a wire nut.
- 2 **IF AN ELECTRIC HEATER PACKAGE IS INSTALLED IN THIS UNIT**
Blue wire is connected to the (+) side of the heater contactor coil.

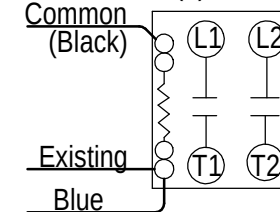

IF NO HEATER PACKAGE IS INSTALLED - Blue wire will not be present in the unit.

- 3 **Blower Airflow Select Wires** - The appropriate airflow selection wire will be connected to the **COM** contact on the **Indoor Blower Relay** (9)

* (9) was high voltage blower relay. Replaced with pilot duty low voltage relay*

-Yellow/White wire for W30 units ONLY.
-Orange wire for All Other Units

Wires Connect if Option Not Used	Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

4213-111