



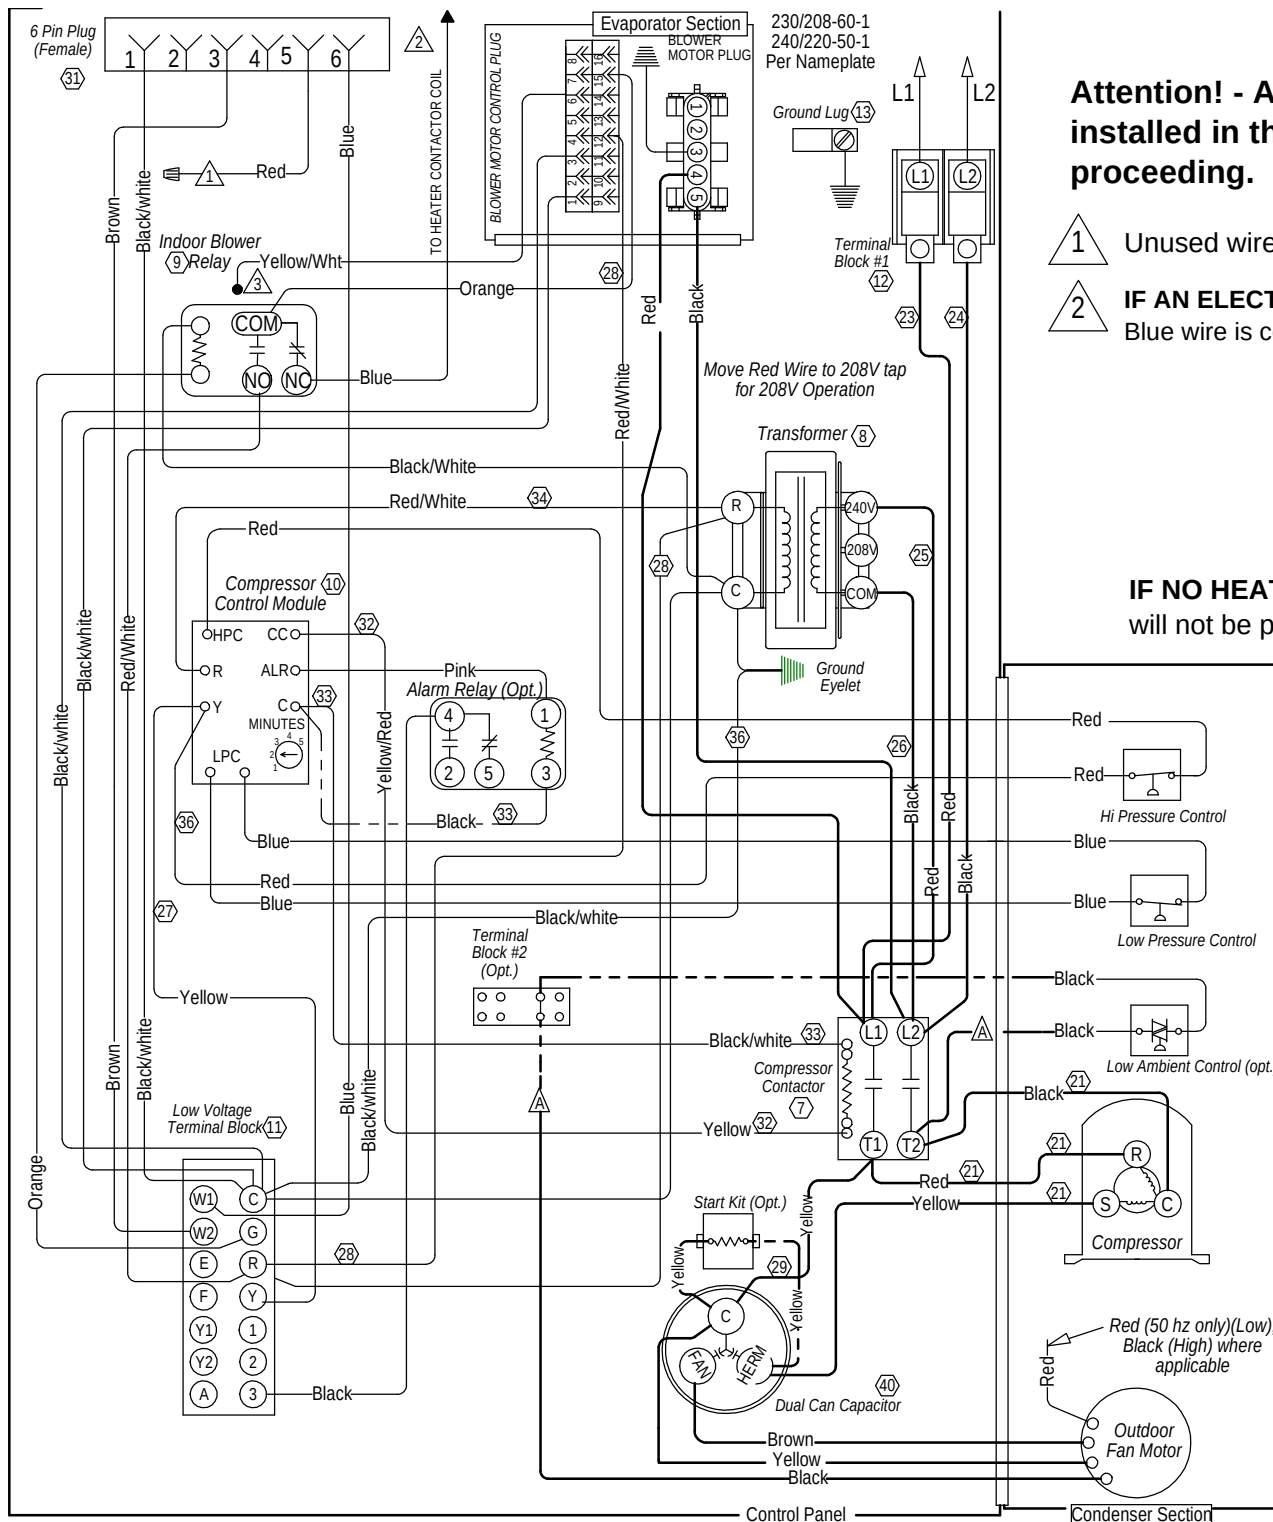

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

- 1 Unused wire. End should be covered with a wire nut.
- 2 **IF AN ELECTRIC HEATER PACKAGE IS INSTALLED IN THIS UNIT**
Blue wire is connected to the (+) side of the heater contactor coil.

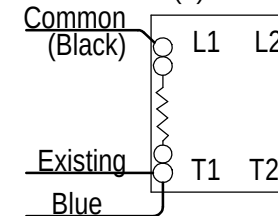

IF NO HEATER PACKAGE IS INSTALLED - Blue wire will not be present in the unit.

- 3 **Blower Airflow Select Wires** - The appropriate airflow selection wire will be connected to the **COM** contact on the *Indoor Blower Relay* (9)

* (9) was high voltage blower relay. Replaced with pilot duty low voltage relay*

-Yellow/White wire for W30 units ONLY.
-Orange wire for All Other Units

A Wires Connect if Option Not Used	(99) Wire Identification numbers for Bard use only.			WARNING USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
	Factory	Field	Optional	
High Voltage				DANGER *ELECTRICAL SHOCK HAZARD *DISCONNECT POWER BEFORE SERVICING.
Low Voltage				