



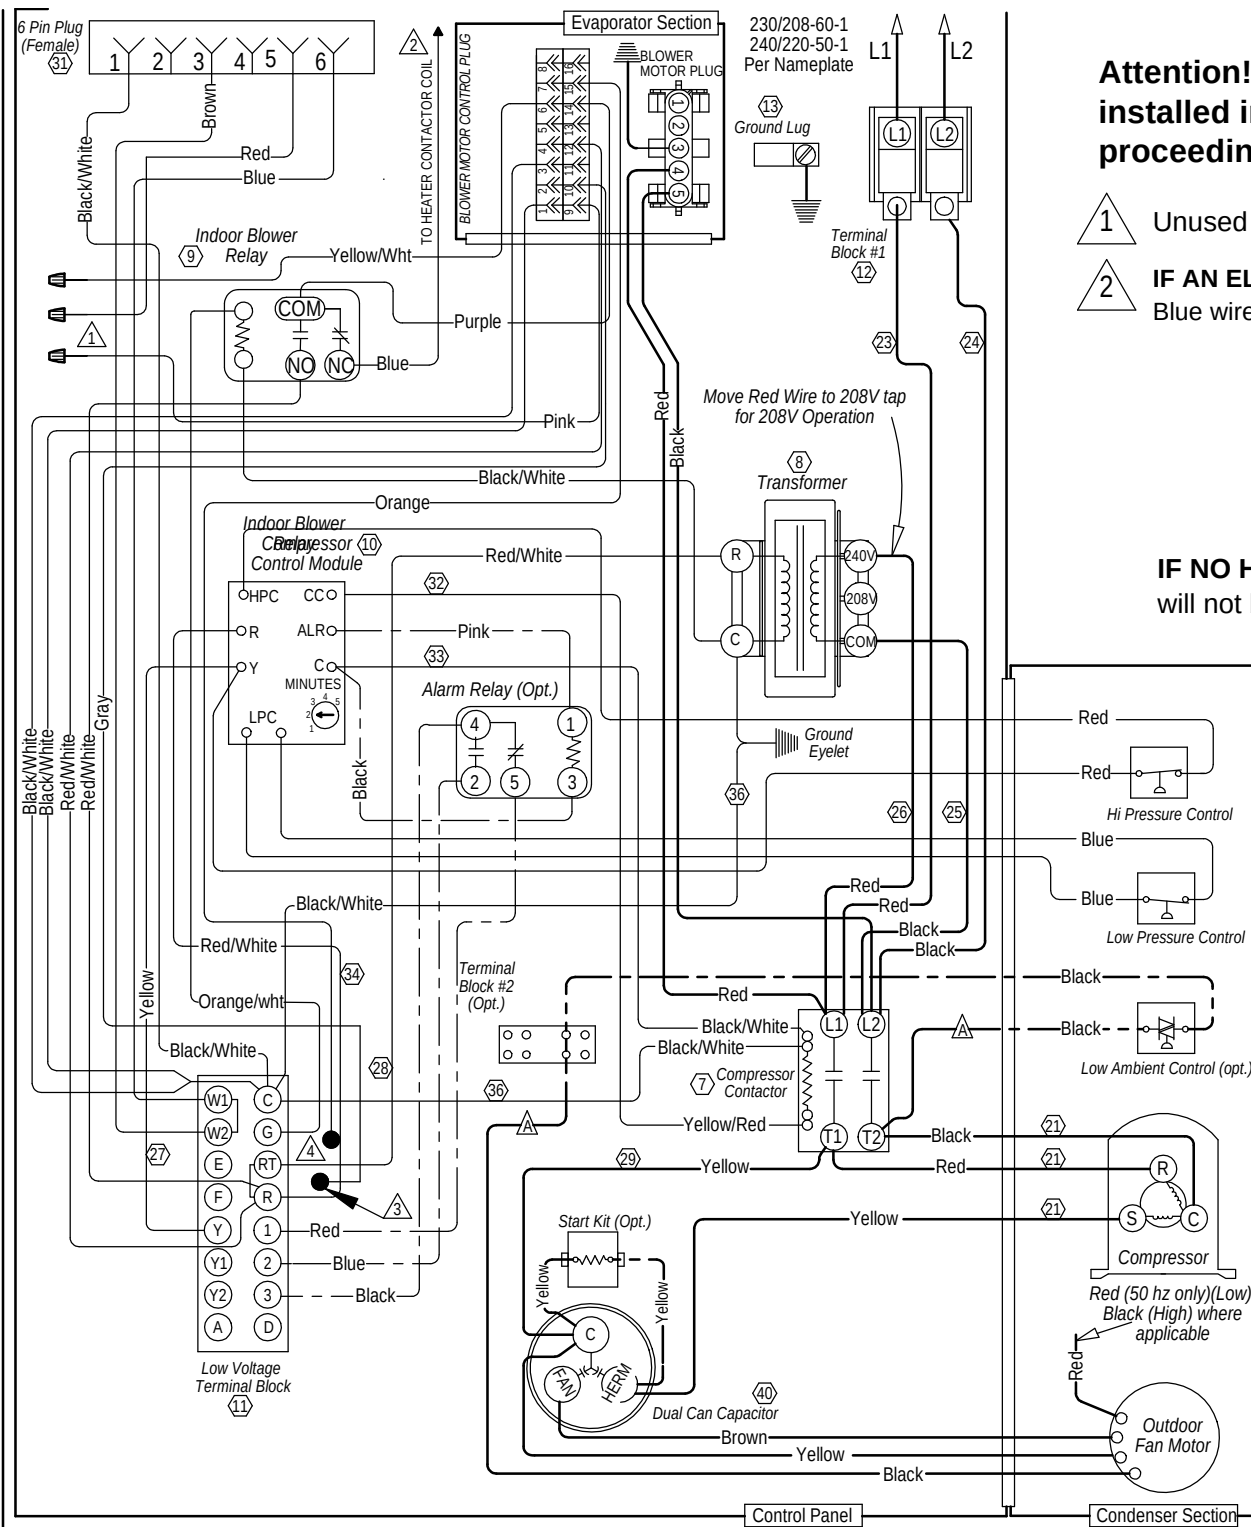

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

- 1 Unused wires. Ends should be capped with a wire nut.
- 2 **IF AN ELECTRIC HEATER PACKAGE IS INSTALLED IN THIS UNIT**
Blue wire is connected to the (+) side of the heater contactor coil.

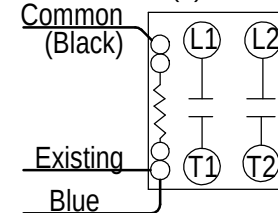

IF NO HEATER PACKAGE IS INSTALLED - Blue wire will not be present in the unit.

- 3 **Blower Airflow Select Wires**
- Connect Gray wire to R in W36, W48 or W60 Units
- Tape off Gray wire for ALL OTHER UNITS

- 4 **Single/Dual speed operation**
- For single-speed operation, connect as shown
- For dual (full/vent) speed operation move orange/White wire from G to Y. land orange wire on G

* 9 was high voltage blower relay. Replaced with pilot duty low voltage relay*

Wires Connect if Option Not Used	Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

4213-116 A