


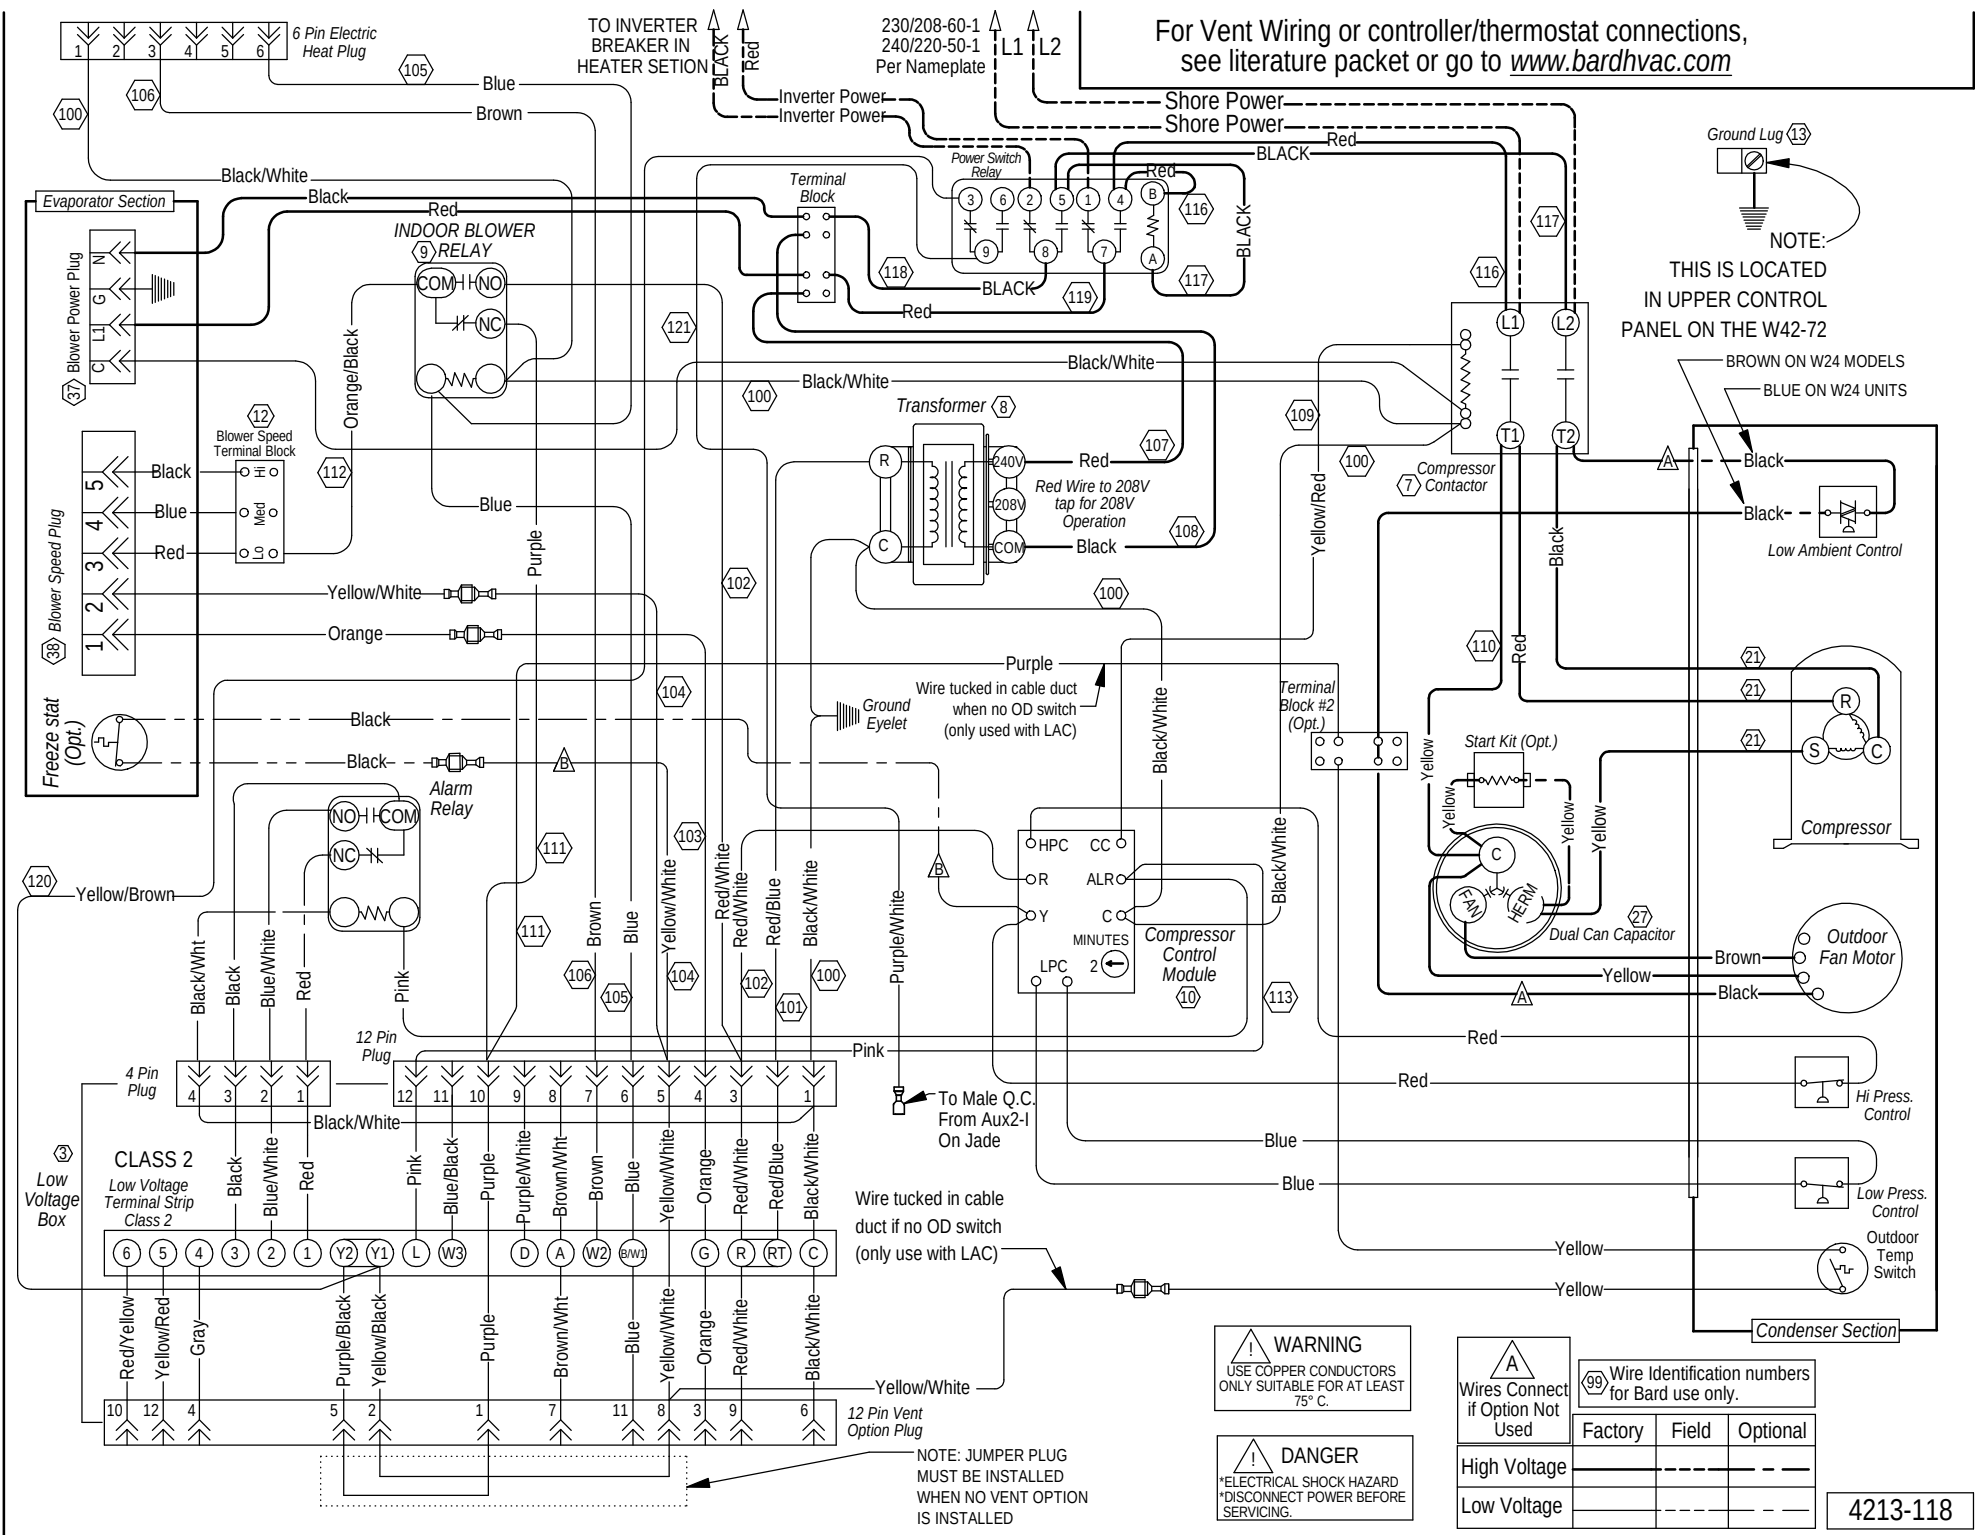

For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

**WARNING**  
USE COPPER CONDUCTORS  
ONLY SUITABLE FOR AT LEAST  
75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD  
DISCONNECT POWER BEFORE  
SERVICING.

|                                        |                                                   |       |          |
|----------------------------------------|---------------------------------------------------|-------|----------|
| Wires Connect<br>if Option Not<br>Used | Wire Identification numbers<br>for Bard use only. |       |          |
|                                        | Factory                                           | Field | Optional |
| High Voltage                           |                                                   |       |          |
| Low Voltage                            |                                                   |       |          |