


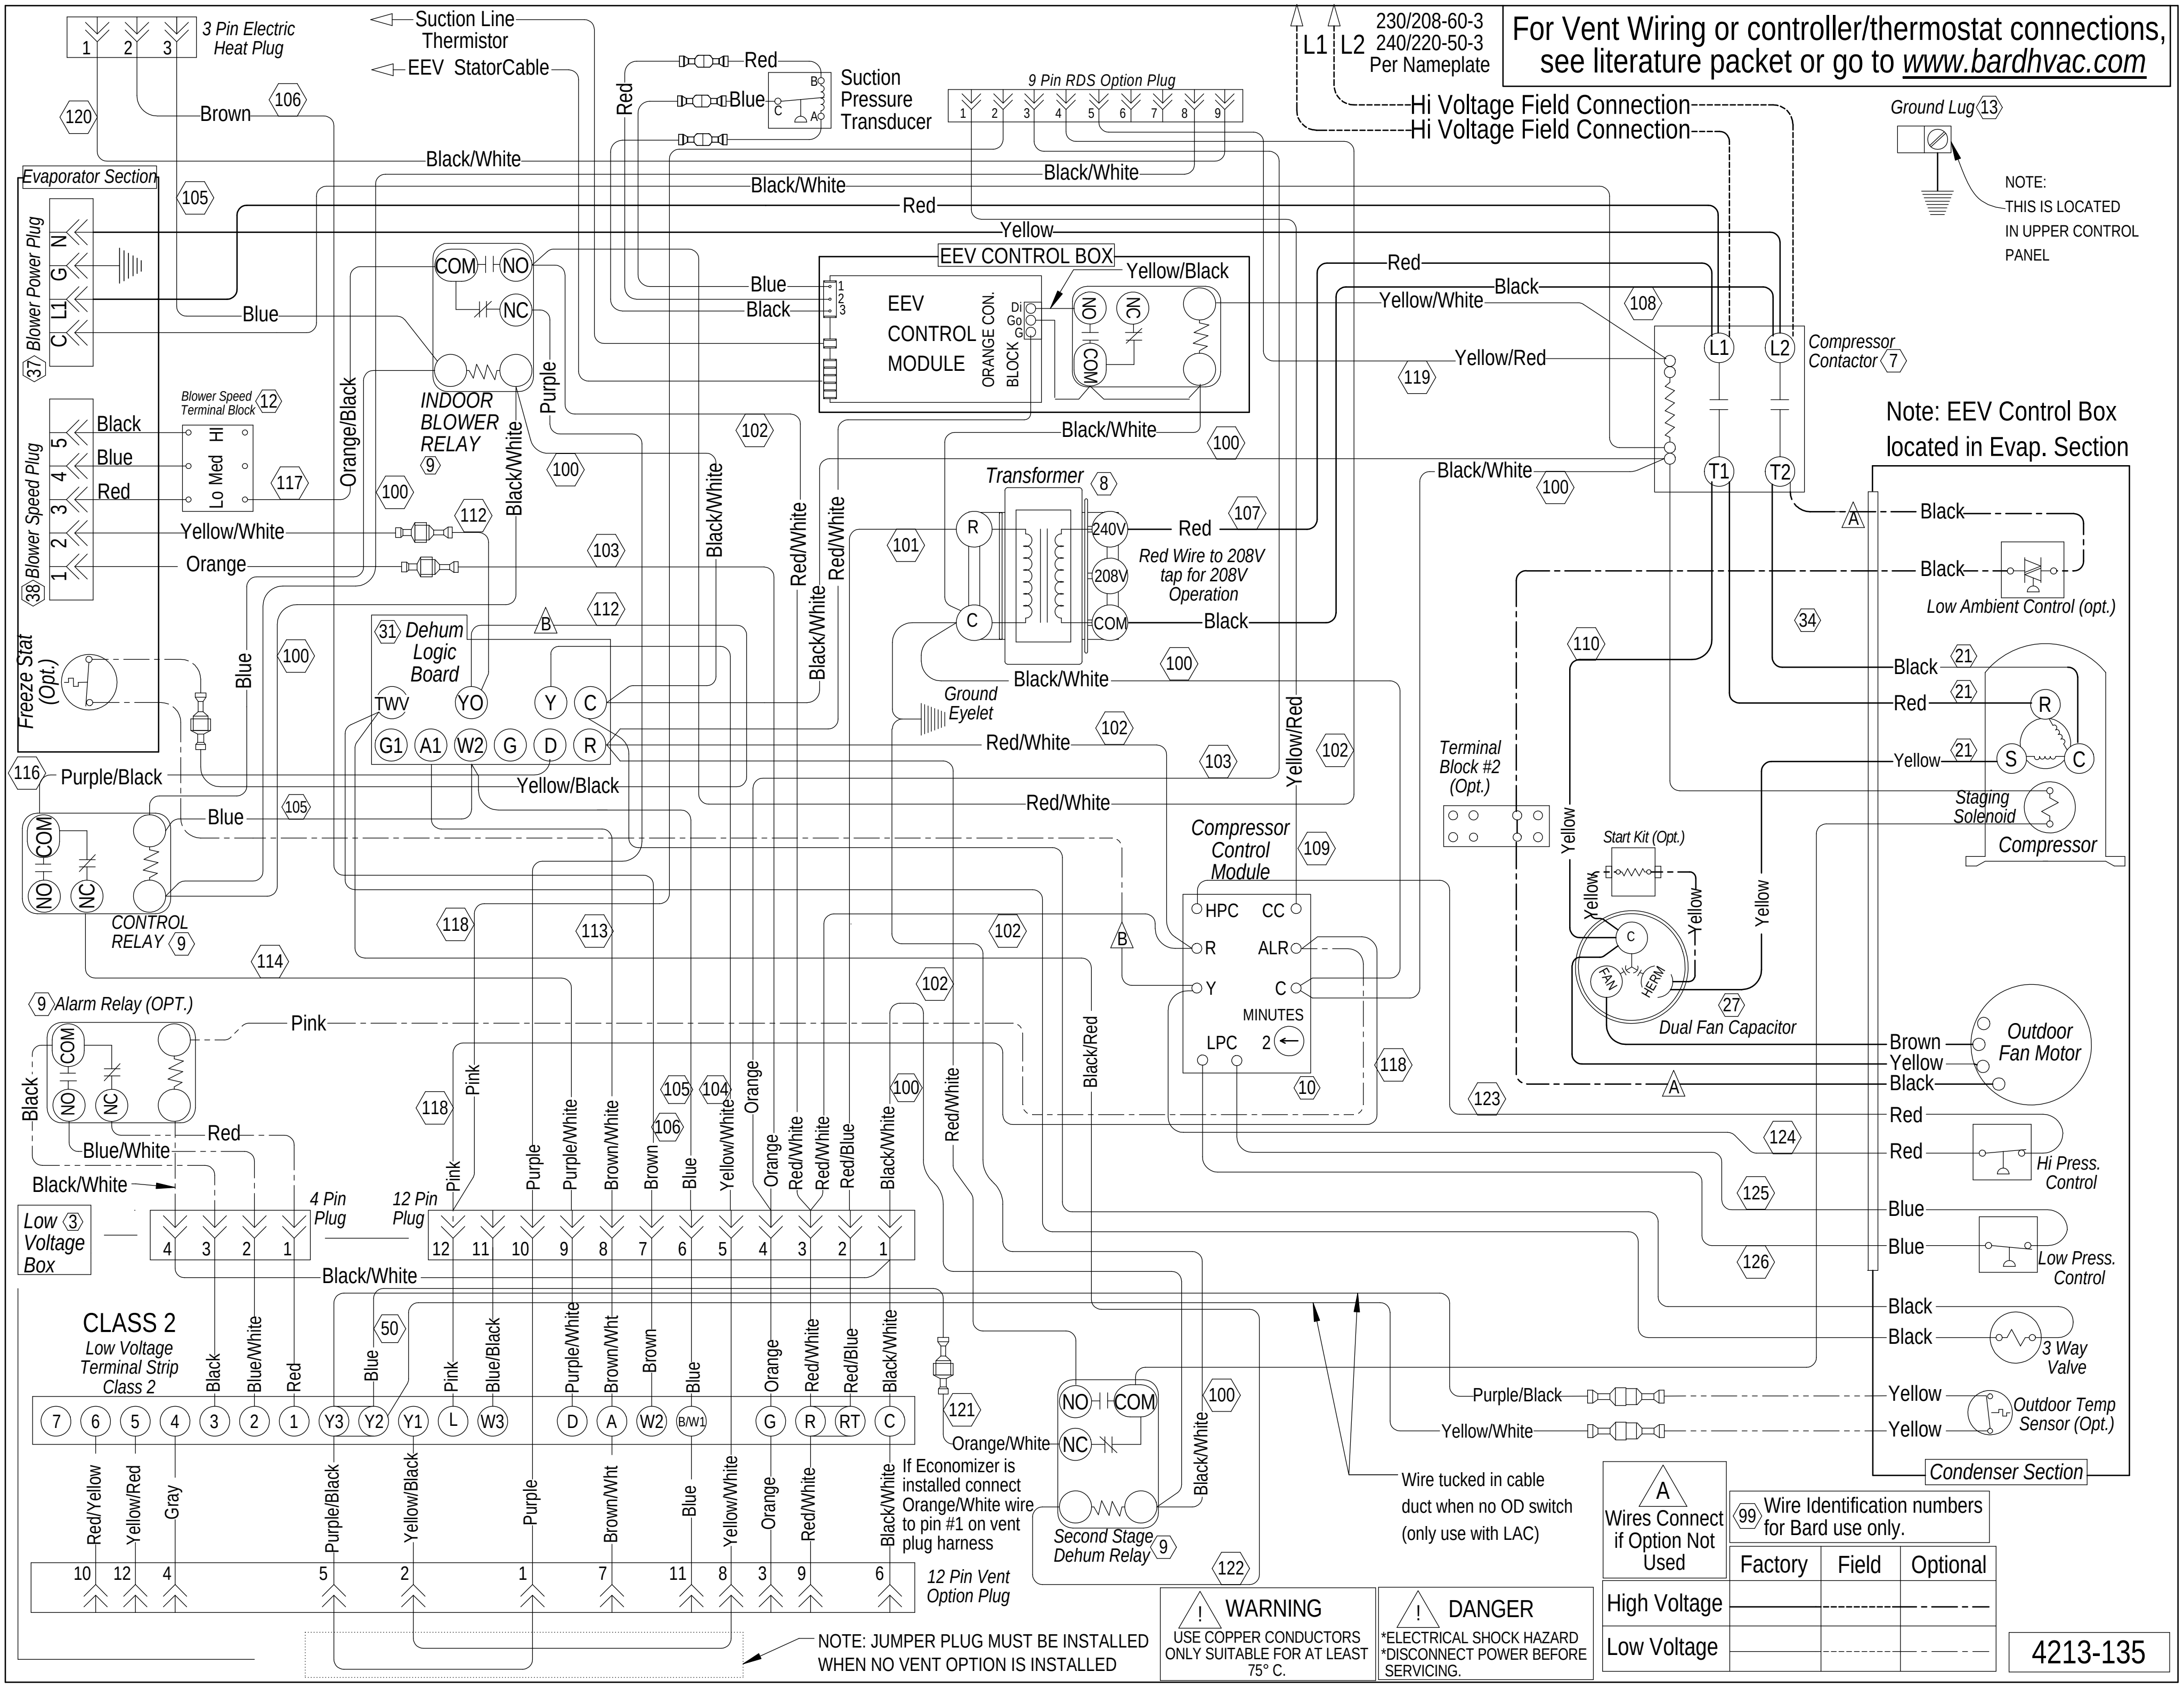

For Vent Wiring or controller/thermostat connections, see literature packet or go to [www.bardhvac.com](http://www.bardhvac.com)

NOTE: THIS IS LOCATED IN UPPER CONTROL PANEL

Note: EEV Control Box located in Evap. Section

**WARNING**  
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**  
ELECTRICAL SHOCK HAZARD  
\*DISCONNECT POWER BEFORE SERVICING.

| Wires Connect if Option Not Used | Wire Identification numbers for Bard use only. |       |          |
|----------------------------------|------------------------------------------------|-------|----------|
|                                  | Factory                                        | Field | Optional |
| High Voltage                     |                                                |       |          |
| Low Voltage                      |                                                |       |          |