



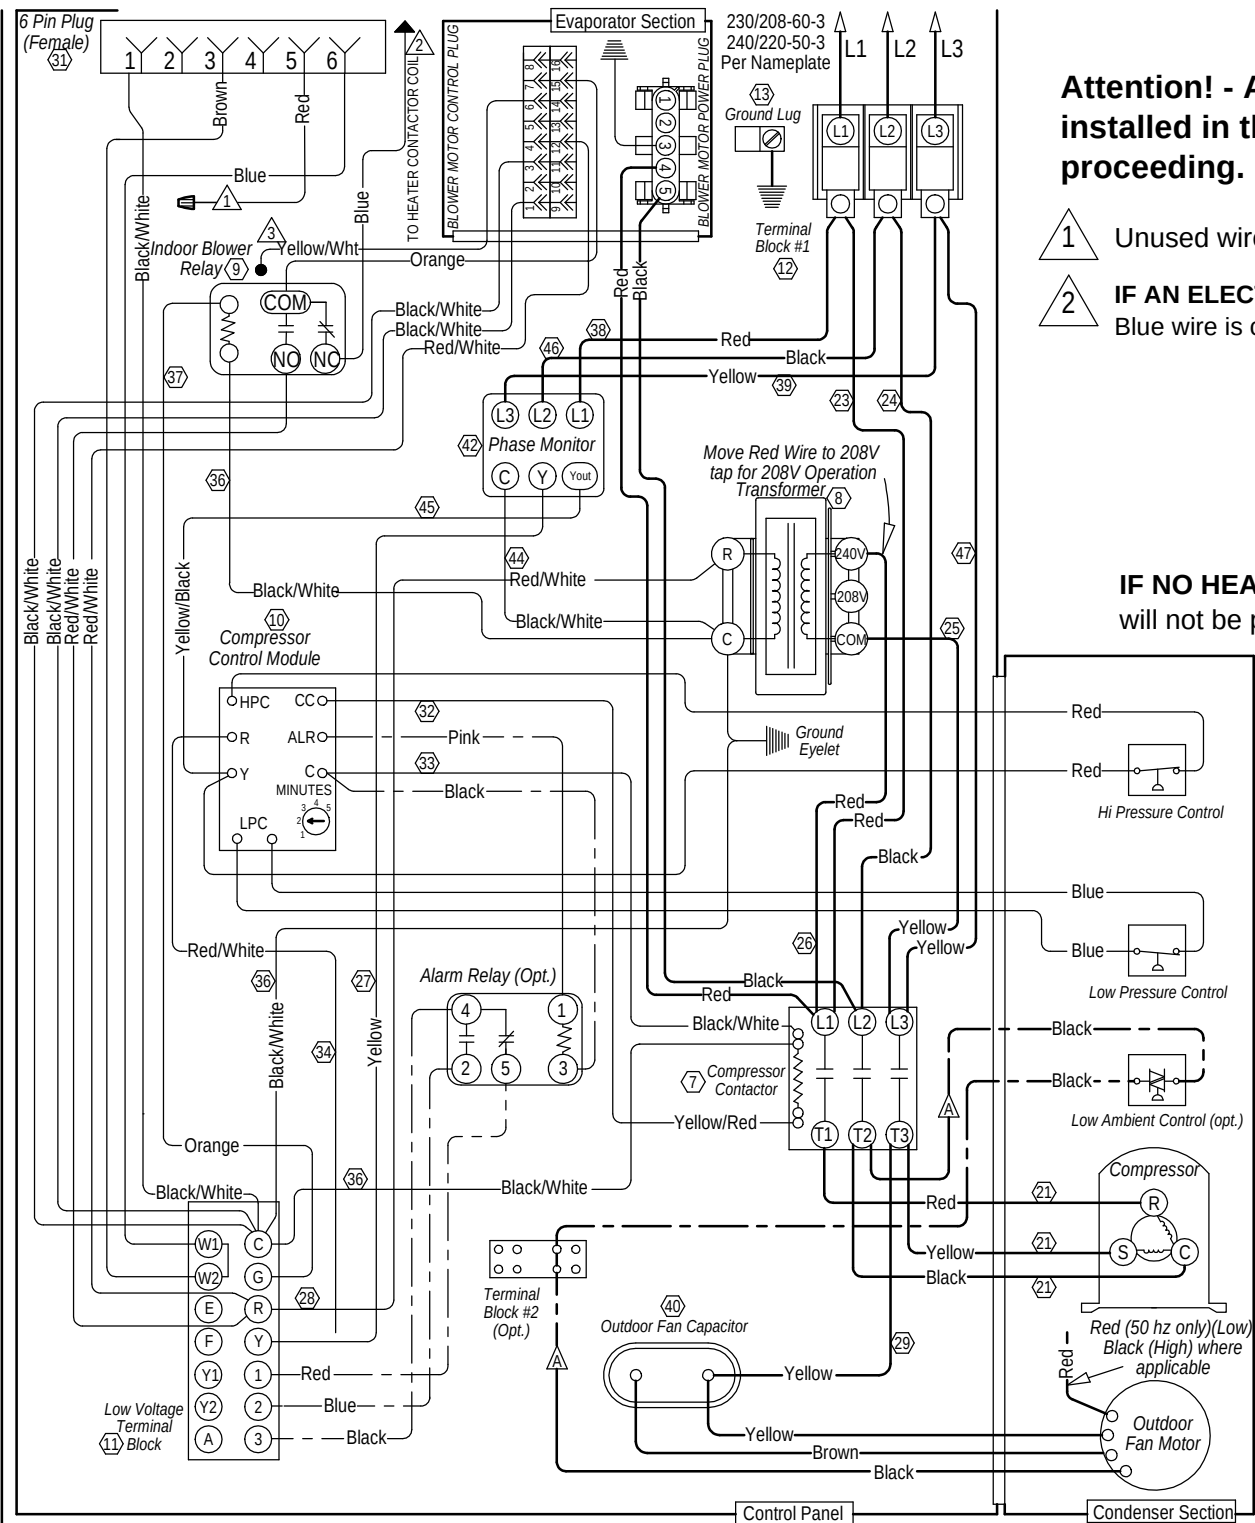

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

- 1 Unused wire. End should be covered with a wire nut.
- 2 **IF AN ELECTRIC HEATER PACKAGE IS INSTALLED IN THIS UNIT**
Blue wire is connected to the (+) side of the heater contactor coil.

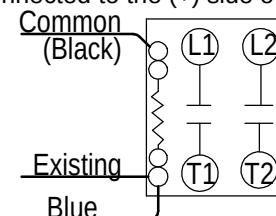

IF NO HEATER PACKAGE IS INSTALLED - Blue wire will not be present in the unit.

- 3 **Blower Airflow Select Wires** - The appropriate airflow selection wire will be connected to the **COM** contact on the *Indoor Blower Relay* (9)

* (9) was high voltage blower relay. Replaced with pilot duty low voltage relay*

-Yellow/White wire for **W30 units ONLY**.
-Orange wire for **All Other Units**

Wires Connect if Option Not Used	Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE
SERVICING.

4213-212