



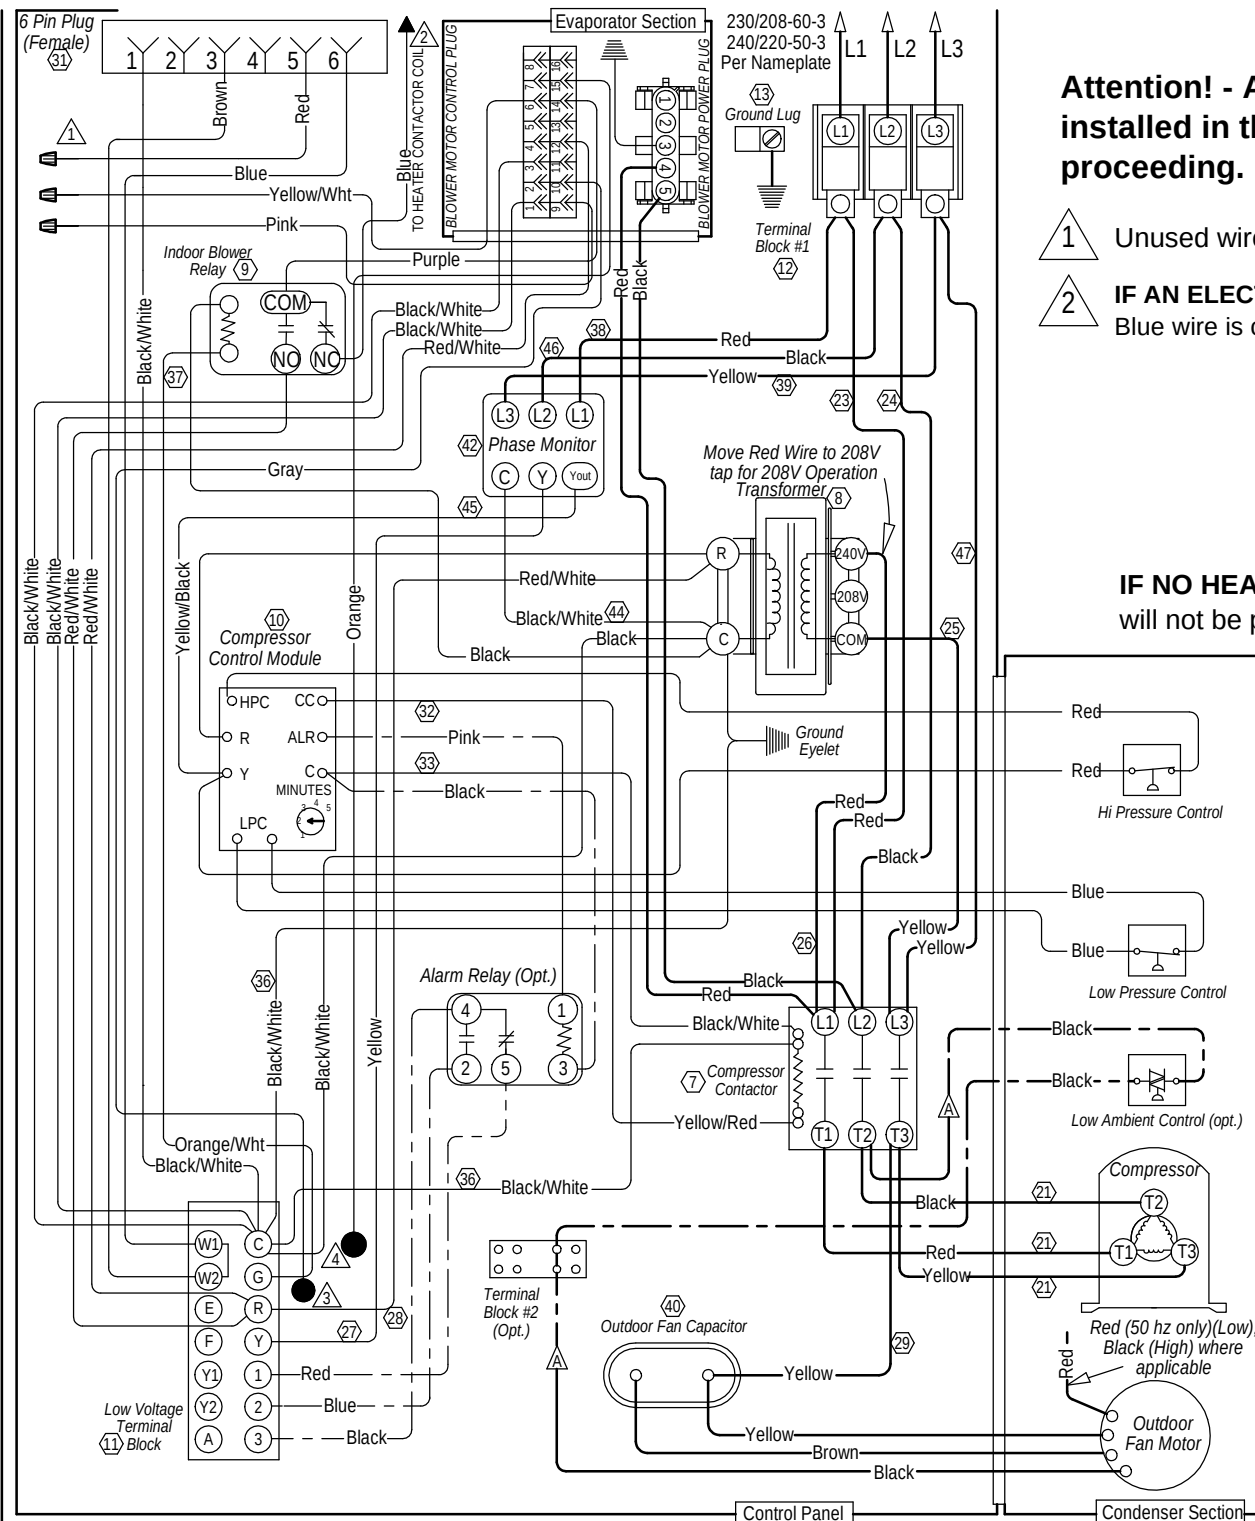

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

- 1 Unused wires. Ends should be capped with a wire nut.
- 2 **IF AN ELECTRIC HEATER PACKAGE IS INSTALLED IN THIS UNIT**
 Blue wire is connected to the (+) side of the heater contactor coil.

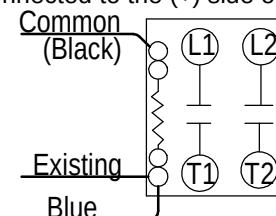

IF NO HEATER PACKAGE IS INSTALLED - Blue wire will not be present in the unit.

- 3 **Blower Airflow Select Wires**
 - Connect Gray wire to R in W36, W48, or W60 Units
 - Tape off Gray wire for ALL OTHER UNITS
 - 4 **Single/Dual speed operation**
 - For single-speed operation, connect as shown
 - For dual (full/vent) speed operation move orange/White wire from G to Y. and orange wire on G
- * 9 was high voltage blower relay. Replaced with pilot duty low voltage relay*

Wires Connect if Option Not Used	Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			

WARNING
 USE COPPER CONDUCTORS
 ONLY SUITABLE FOR AT LEAST
 75° C.

DANGER
 *ELECTRICAL SHOCK HAZARD
 *DISCONNECT POWER BEFORE
 SERVICING.

4213-214 A