

For Vent Wiring or controller/thermostat connections,
see literature packet or go to www.bardhvac.com

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

A FULL LOAD SPEED SELECTION:


- W60 AND W36 UNITS - LAND GRAY WIRE ON "R", CAP OFF PINK WIRE WITH WIRE NUT
- W48 UNITS - LAND PINK WIRE ON "R", CAP OFF GRAY WIRE WITH WIRE NUT
- ALL OTHER UNITS - CAP OFF BOTH WIRES WITH WIRE NUTS

A FULL LOAD SPEED SELECTION:


- W60 AND W36 UNITS - LAND GRAY WIRE ON "R", CAP OFF PINK WIRE WITH WIRE NUT
- W48 UNITS - LAND PINK WIRE ON "R", CAP OFF GRAY WIRE WITH WIRE NUT
- ALL OTHER UNITS - CAP OFF BOTH WIRES WITH WIRE NUTS

-W60 AND W36 UNITS - LAND GRAY WIRE ON "R", CAP OFF PINK WIRE WITH WIRE NUT
-W48 UNITS - LAND PINK WIRE ON "R", CAP OFF GRAY WIRE WITH WIRE NUT
-ALL OTHER UNITS - CAP OFF BOTH WIRES WITH WIRE NUTS

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL ON THE W42-72

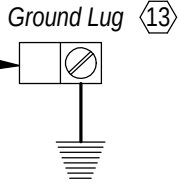

Hi Voltage Field Connection -----> L1
Hi Voltage Field Connection -----> L2
Hi Voltage Field Connection -----> L3

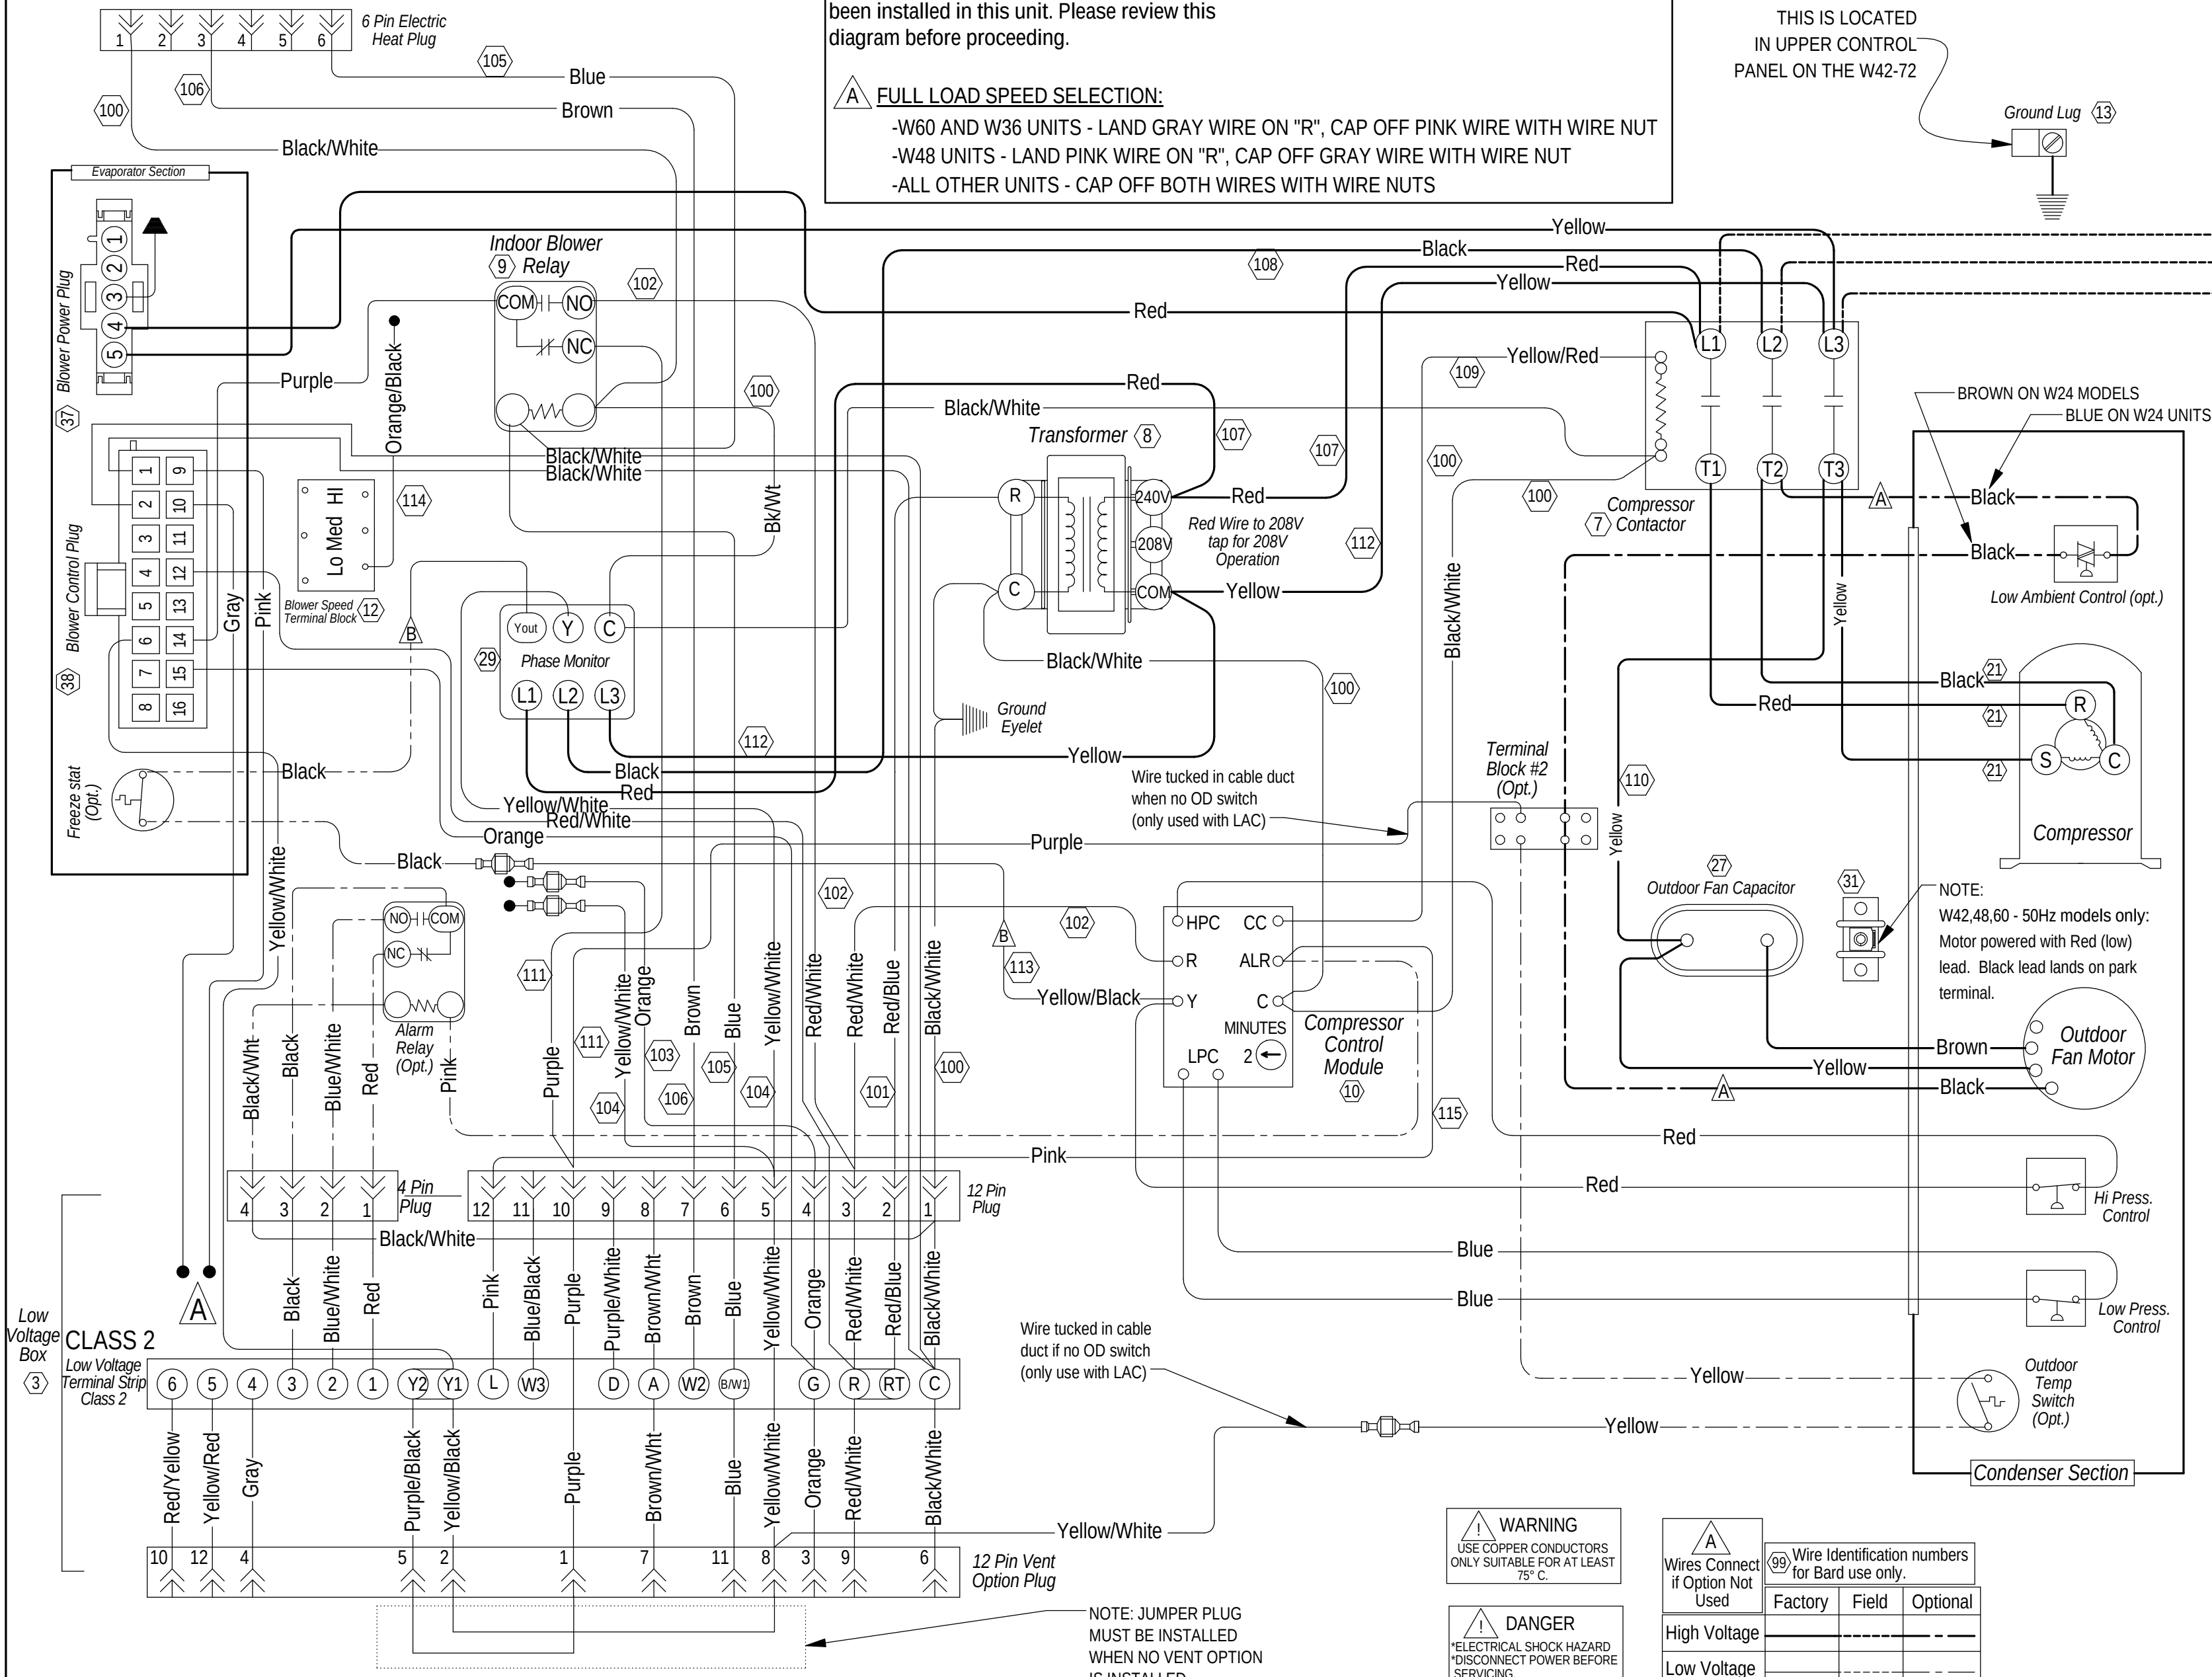

— NOTE: JUMPER PLUG
MUST BE INSTALLED
WHEN NO VENT OPTION
IS INSTALLED

 **DANGER**
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING

A
Wires Connect
if Option Not
Used

99 Wire Identification numbers for Bard use only.

if Option Not Used	Factory	Field	Optional
High Voltage		-----	- - - - -
Low Voltage		-----	- - - - -