
INSTALLATION INSTRUCTIONS

Electric Heat Packages

Models:

EHCH036A-A05	EHCH042A-A05	EHCH048A-B05	EHCH060A-A15
EHCH036A-A10	EHCH042A-A10	EHCH048A-B09	EHCH060A-A20
EHCH036A-A15	EHCH042A-B05	EHCH048A-B15	EHCH060A-B05
EHCH036A-B05	EHCH042A-B09	EHCH048A-C05	EHCH060A-B09
EHCH036A-B09	EHCH042A-B15	EHCH048A-C09	EHCH060A-B15
EHCH036A-B15	EHCH048A-A05	EHCH048A-C15	EHCH060A-C05
EHCH036A-C05	EHCH048A-A10	EHCH060A-A05	EHCH060A-C09
EHCH036A-C09	EHCH048A-A15	EHCH060A-A10	EHCH060A-C15
EHCH036A-C15			

For Use with Large Cabinet
Wall-Mounted Heat Pumps



Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 2100-781
Supersedes: **NEW**
Date: 2-24-23

CONTENTS

General Information3		Installation7	
Description of Equipment.....3		Installation of Heater Package	7
Important.....3			
Shipping Damage	3		
Unpacking Electric Heat Package.....3			
Wiring Main Power.....5			
Figures		Tables	
Figure 1	Electrical Connections.....6	Table 1	Electrical Data and BTU Output.....4
Figure 2	Electric Heater Access Panel and	Table 2	References to Figures 3 and 4
	Control Panel Cover Locations.....8		by Model Number
Figure 3	Rod Support and Screw		
	Mounting Positions		
Figure 4	A through D		
Figure 4	E and F		
Figure 5	Installing Heater Base and		
	Connecting Wiring		
Figure 6	Serial Plate Label		

GENERAL INFORMATION

Description

The EHCH series electric heater packages are field-installable heater packages suitable for use with Bard wall mount heat pumps. The packages consist of the electric heat strip, the heater control base (which includes the heat contactors and circuit breaker or toggle or rotary disconnects), installation instructions and wiring diagrams. See Table 1 on page 4 for nominal electrical data and BTU output. **Before installation, check unit serial plate to ensure the heater package model to be installed is a listed heater package that is suitable for use with the Bard wall mount unit** (see Figure 6 on page 14).

Important

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

Shipping Damage

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

Unpacking the Electric Heat Package

Remove the heat package from the shipping carton. The heat package must consist of the following:

1. Basic heater.
2. Electric heat control base and wiring.
3. Installation instructions.
4. Two wiring diagrams, one to be applied to unit.
5. Adhesive label to re-mark serial plate to indicate new model number. This is attached to the front of these instructions.

TABLE 1
Electrical Data and BTU Output

Heater Package Model	Volts	Phase	Nominal KW	Nominal BTU
EHCH036A-A05	230/208	1	4.6/3.8	15,700/12,800
EHCH036A-A10	230/208	1	9.2/7.5	31,400/25,600
EHCH036A-A15	230/208	1	13.8/11.3	47,100/38,400
EHCH036A-B05	230/208	3	4.6/3.8	15,700/12,800
EHCH036A-B09	230/208	3	8.3/6.8	28,300/23,000
EHCH036A-B15	230/208	3	13.8/11.3	47,100/38,400
EHCH036A-C05	460	3	4.6	15,700
EHCH036A-C09	460	3	8.3	28,300
EHCH036A-C15	460	3	13.8	47,100
EHCH042A-A05	230/208	1	4.6/3.8	15,700/12,800
EHCH042A-A10	230/208	1	9.2/7.5	31,400/25,600
EHCH042A-B05	230/208	3	4.6/3.8	15,700/12,800
EHCH042A-B09	230/208	3	8.3/6.8	28,300/23,000
EHCH042A-B15	230/208	3	13.8/11.3	47,100/38,400
EHCH048A-A05	230/208	1	4.6/3.8	15,700/12,800
EHCH048A-A10	230/208	1	9.2/7.5	31,400/25,600
EHCH048A-A15	230/208	1	13.8/11.3	47,100/38,400
EHCH048A-B05	230/208	3	4.6/3.8	15,700/12,800
EHCH048A-B09	230/208	3	8.3/6.8	28,300/23,000
EHCH048A-B15	230/208	3	13.8/11.3	47,100/38,400
EHCH048A-C05	460	3	4.6	15,700
EHCH048A-C09	460	3	8.3	28,300
EHCH048A-C15	460	3	13.8	47,100
EHCH060A-A05	230/208	1	4.6/3.8	15,700/12,800
EHCH060A-A10	230/208	1	9.2/7.5	31,400/25,600
EHCH060A-A15	230/208	1	13.8/11.3	47,100/38,400
EHCH060A-A20	230/208	1	18.4/15.0	62,800/51,200
EHCH060A-B05	230/208	3	4.6/3.8	15,700/12,800
EHCH060A-B09	230/208	3	8.3/6.8	28,300/23,000
EHCH060A-B15	230/208	3	13.8/11.3	47,100/38,400
EHCH060A-C05	460	3	4.6	15,700
EHCH060A-C09	460	3	8.3	28,300
EHCH060A-C15	460	3	13.8	47,100

Wiring Main Power

1. On all installations, size unit power supply wiring for the minimum circuit ampacity requirement for the unit and heater package combination listed on the unit serial plate.

For existing installations, addition or upgrading of a heater package may require that larger supply wires be run to the unit. Resize all power supply wires for the minimum circuit ampacity rating listed on the unit serial plate that is applicable for the combination of unit and heater package.

WARNING

Install properly sized power supply leads for the unit/heater combination minimum circuit ampacity as listed on the unit serial plate. Hazard of fire. Failure to install properly sized conductors could result in fire causing damage, bodily injury or death.


2. **All heater packages covered by this manual are factory wired for single supply circuit.** The following heater packages are field convertible to a dual supply circuit if required or desired:

EHCH036A-A10	EHCH036A-A15
EHCH042A-A10	EHCH042A-A15
EHCH048A-A10	EHCH048A-A15
EHCH060A-A05	EHCH060A-A10
EHCH060A-A15	EHCH060A-A20

To convert the above heater package to dual circuit configuration before installation, loosen four (4) screws holding jumper bar in place and remove jumper bar (see Figure 1 on page 6). Circuits A + B are now identified on the heater package.

Wire should be sized to the minimum circuit ampacity as specified on the serial plates of units that accept this heater package for circuits A + B.

FIGURE 1
Electrical Connections

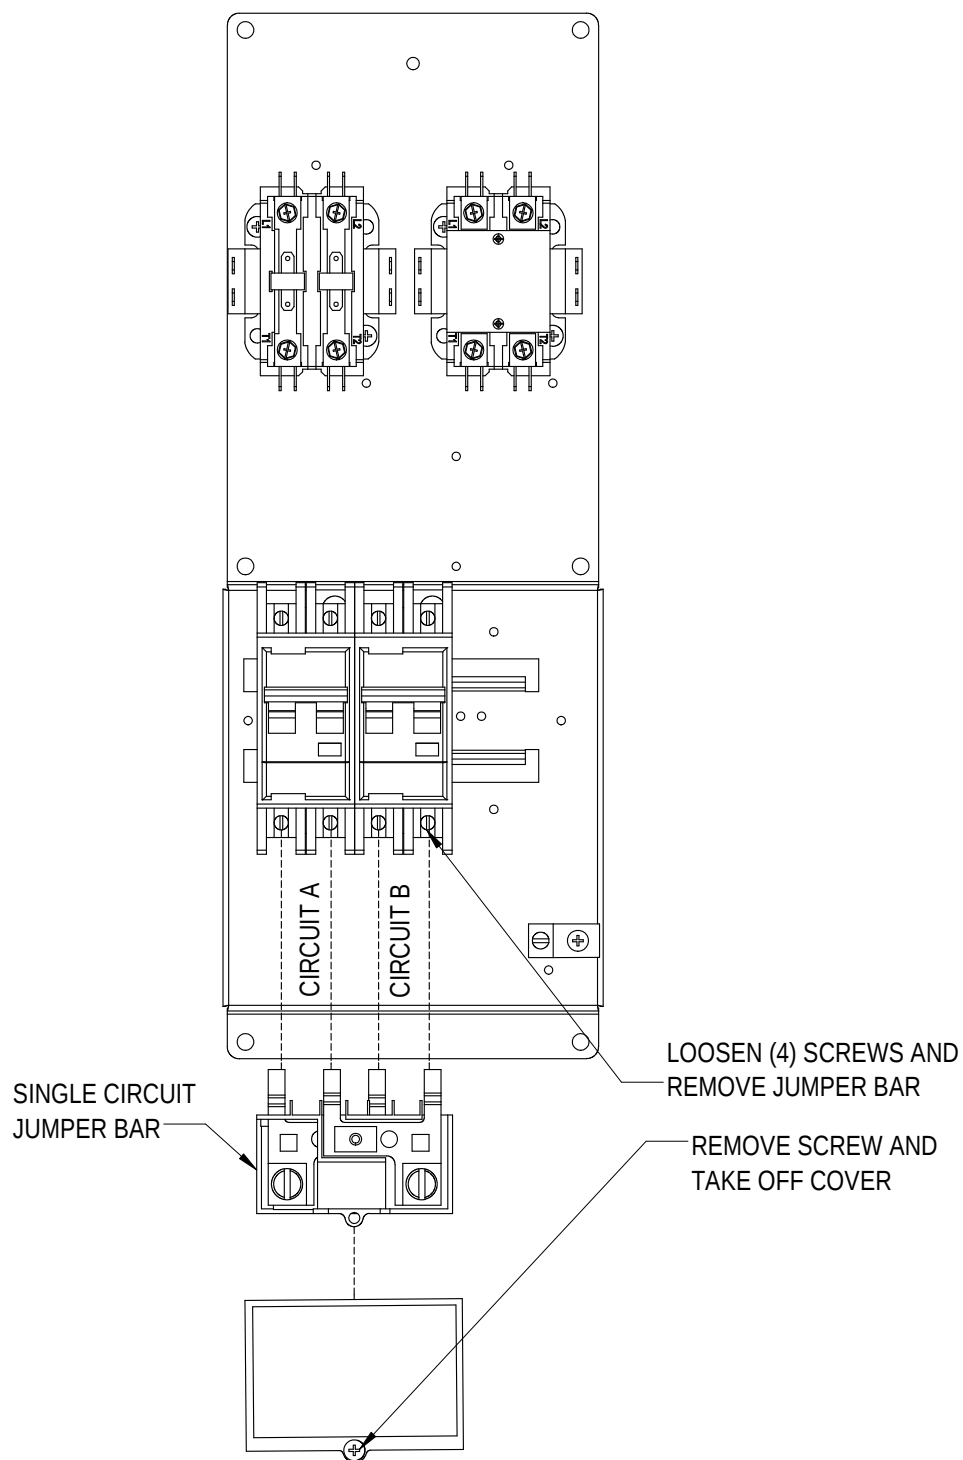

MIS-4421

Installation of Heater Package

1. Disconnect all power to unit before installation.

WARNING

Disconnect all power to unit before installing heater package. Hazard of electrical shock. Failure to disconnect power could result in injury or death.

2. Before installation, check unit serial plate to ensure that the heater package model to be installed is listed as a heater package suitable for use with the unit.

Under no circumstance shall a heater package be installed in a unit if the model number of the heater package does not appear on the unit serial plate.

WARNING


Install only heater packages listed on unit serial plate. Hazard of fire or electrical shock. Failure to install listed heater package could result in fire, injury or death.

3. Remove upper front door, electric heater access panel and control panel cover, both inner and outer (see Figure 2 on page 8).
4. All heaters are installed with the thermal cutoffs positioned to the top of the unit. Install heat strip(s) through heater access opening. Position heat strip support rod in heater support hole 1, 2 or 3 as indicated in Table 2 on page 9 and Figure 3 on page 10. Secure in place with two (2) sheet metal screws in mounting holes.

On heater packages with two heat strips, install 9KW or 10KW heater first in position closest to the outlet air frame (see Figures 4E or 4F on page 12).
5. Install heater control base into heating control area above control panel as shown in Figure 5 on page 13. Secure with four (4) sheet metal screws provided.
6. Plug male 6-pin connector into mating connector mounted in control panel (see Figure 5).

7. Connect red compressor supply lead to L1 of terminal block. Connect black compressor supply lead to L2 of terminal block. If three phase, connect yellow supply lead to L3 of terminal block. See Figure 5 and wiring diagram.
8. Route wires from heater control base up through raceway in top right corner of control panel to the heaters (see Figure 5).
9. Wire heater package per wiring diagram supplied with the heater package. All wires are stamped with wire numbers that correspond with terminal numbers on the wiring diagram and stamped numbers on the heat strip. Limit switch wires are terminated with insulated quick connect terminals. See Figure 5.
10. Attach adhesive wiring diagram directly above unit wiring diagram on inner control panel cover.
11. Recheck all wiring. Break out appropriate circuit breaker tabs on inner control panel cover to allow trip lever to protrude. Replace control panel and heater access panels.
12. Resupply power to the unit and check for proper operation.
13. Re-mark serial plate with self-adhesive label attached to the front of this manual (see Figure 6 on page 14).

FIGURE 2
Electric Heater Access Panel and Control Panel Cover Locations

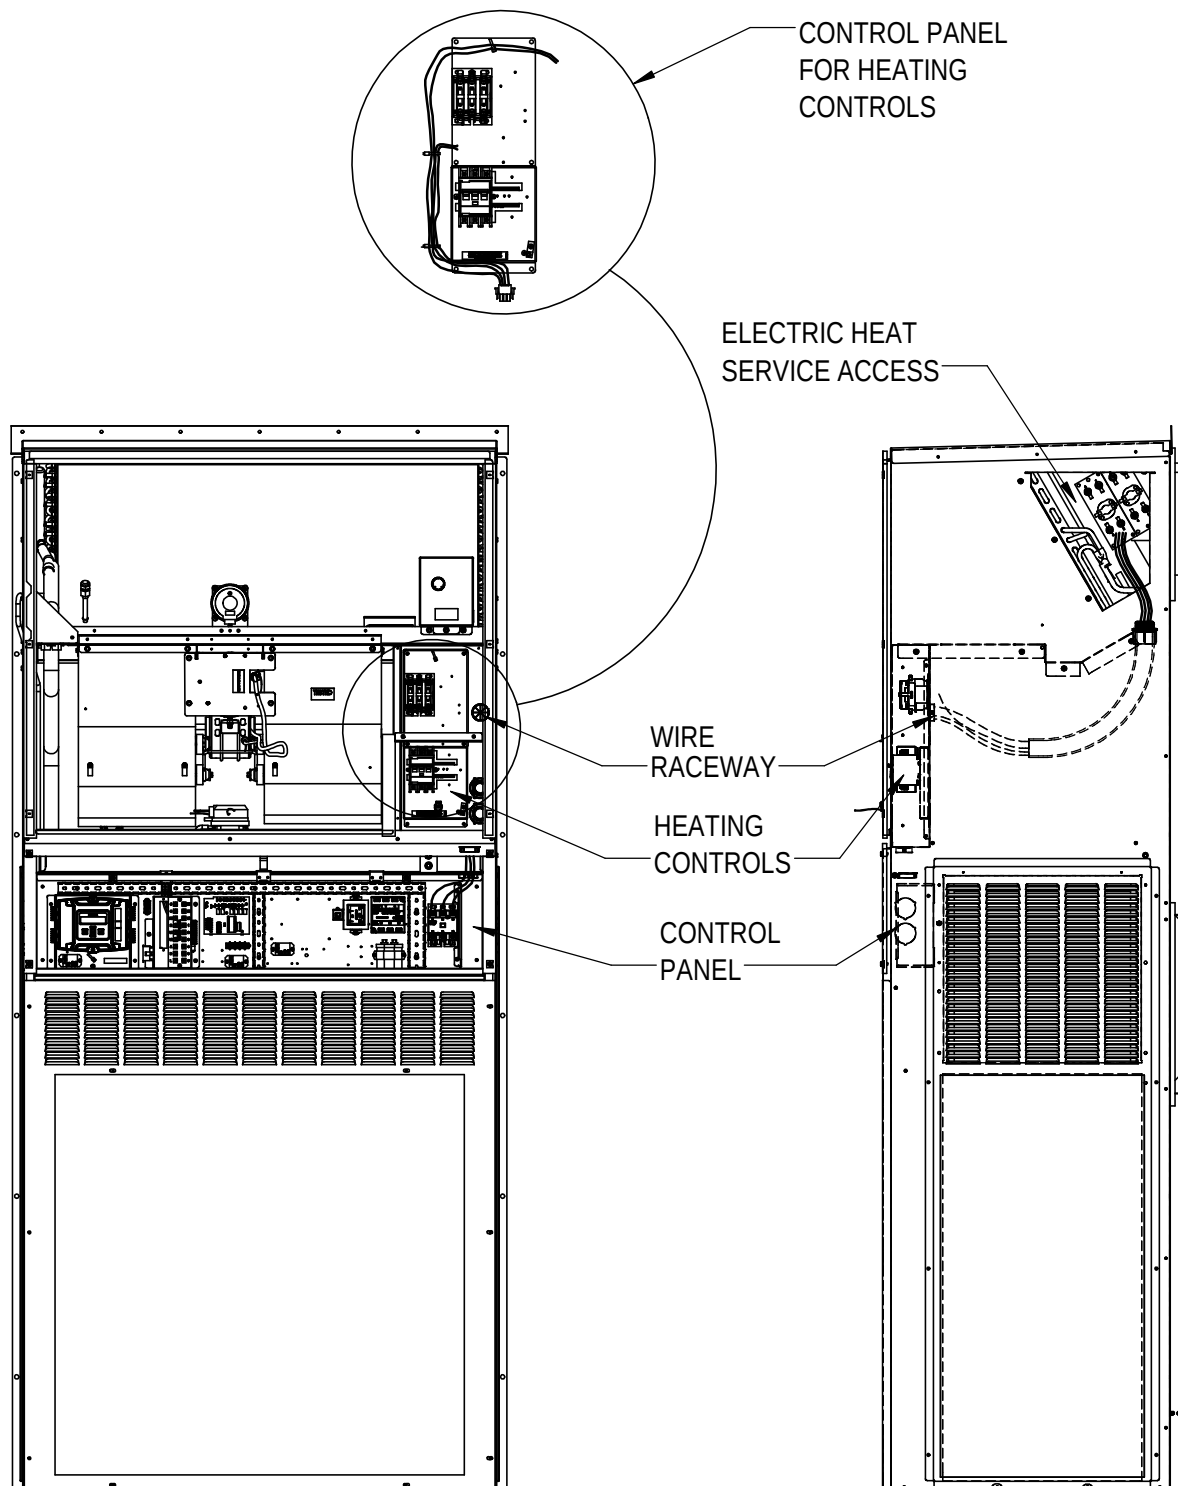

MIS-4099

TABLE 2
References to Figures 3 and 4 by Model Number

Heater Package Model Number	Figure 3 Rod Support and Screw Mounting Position	Figure 4 Heater Terminal Identification Drawing
EHCH036A-A05	1	4A
EHCH036A-A10	1	4C
EHCH036A-A15	1 + 3	4D
EHCH036A-B05	1	4B
EHCH036A-B09	1	4B
EHCH036A-B15	1 + 3	4E
EHCH036A-C05	1	4B
EHCH036A-C09	1	4B
EHCH036A-C15	1 + 3	4E
EHCH042A-A05	1	4A
EHCH042A-A10	1	4C
EHCH042A-B05	1	4B
EHCH042A-B09	1	4B
EHCH042A-B15	1 + 3	4E
EHCH048A-A05	1	4A
EHCH048A-A10	1	4C
EHCH048A-A15	1 + 3	4D
EHCH048A-B05	1	4B
EHCH048A-B09	1	4B
EHCH048A-B15	1 + 3	4E
EHCH048A-C05	1	4B
EHCH048A-C09	1	4B
EHCH048A-C15	1 + 3	4E
EHCH060A-A05	1	4A
EHCH060A-A10	1	4C
EHCH060A-A15	1 + 3	4D
EHCH060A-A20	1 + 3	4F
EHCH060A-B05	1	4B
EHCH060A-B09	1	4B
EHCH060A-B15	1 + 3	4E
EHCH060A-C05	1	4B
EHCH060A-C09	1	4B
EHCH060A-C15	1 + 3	4E

FIGURE 3
Screw Mounting Holes



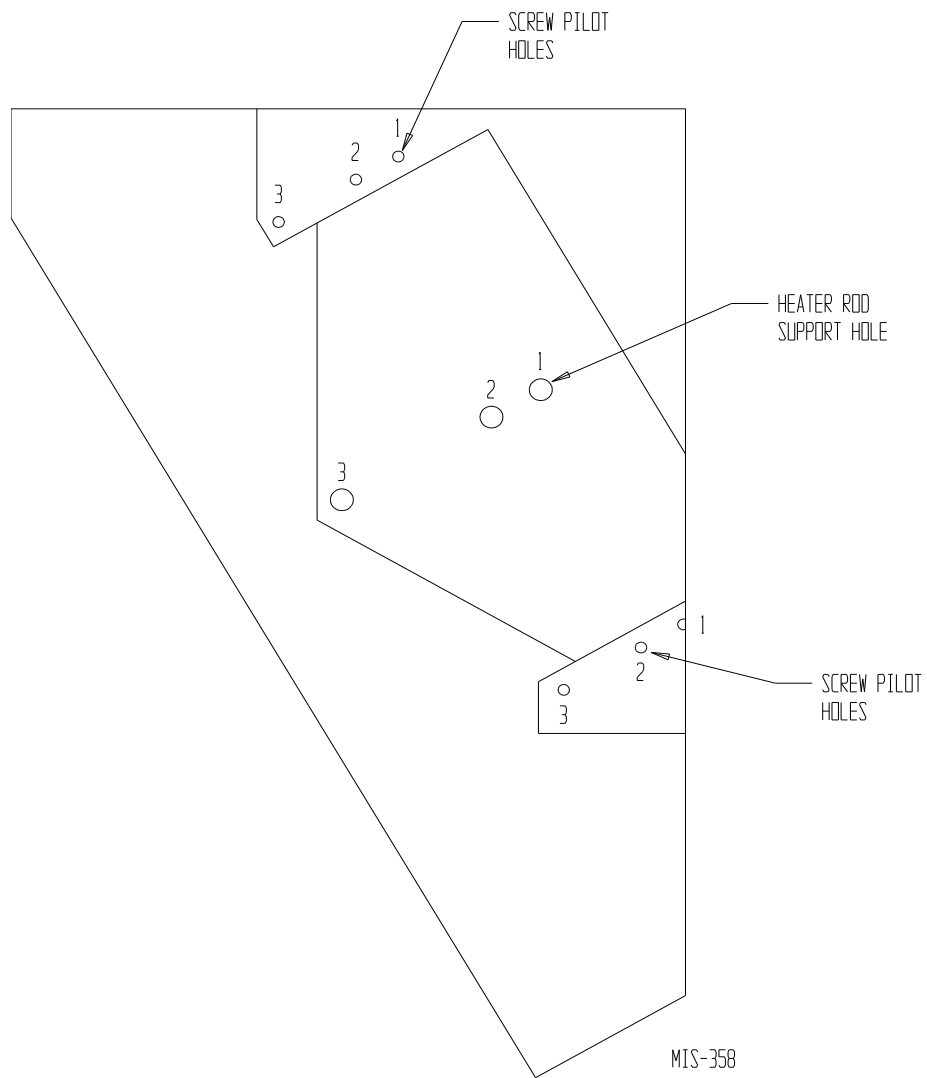


FIGURE 4
A Through D

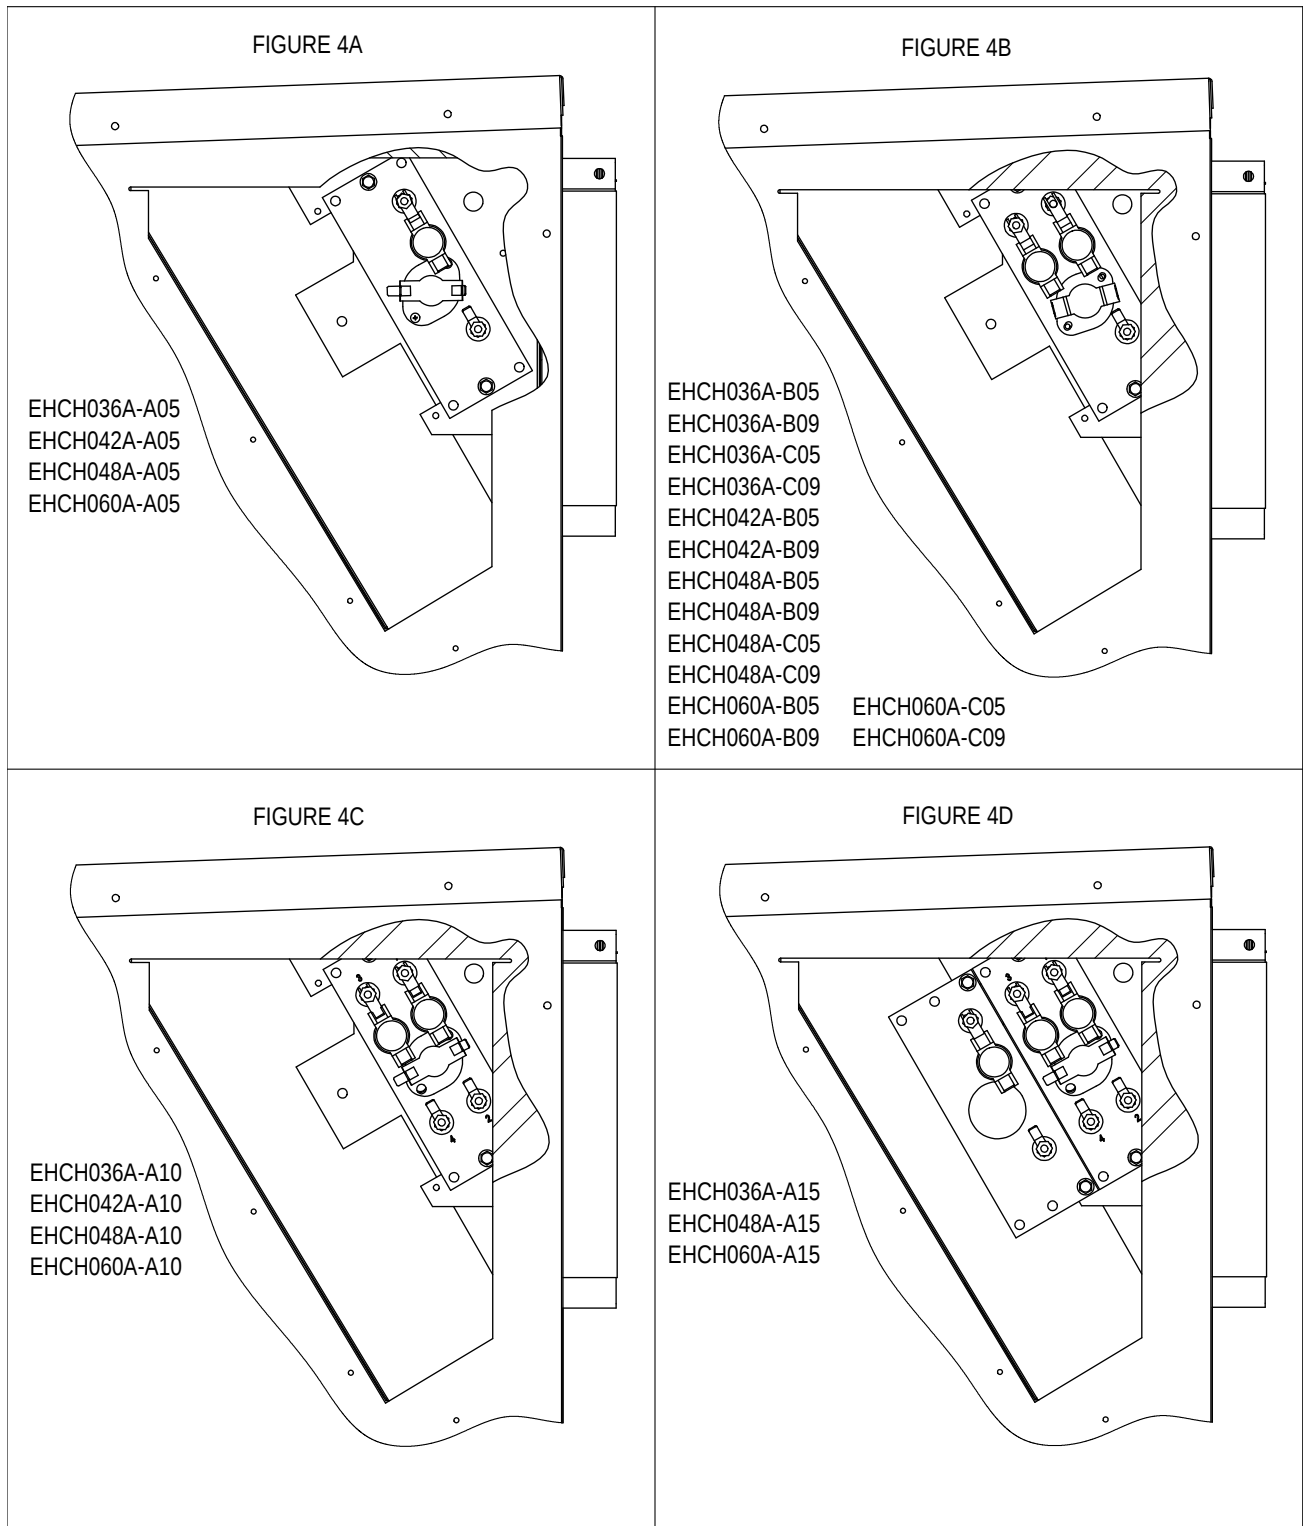


MIS-4422

FIGURE 4
E and F

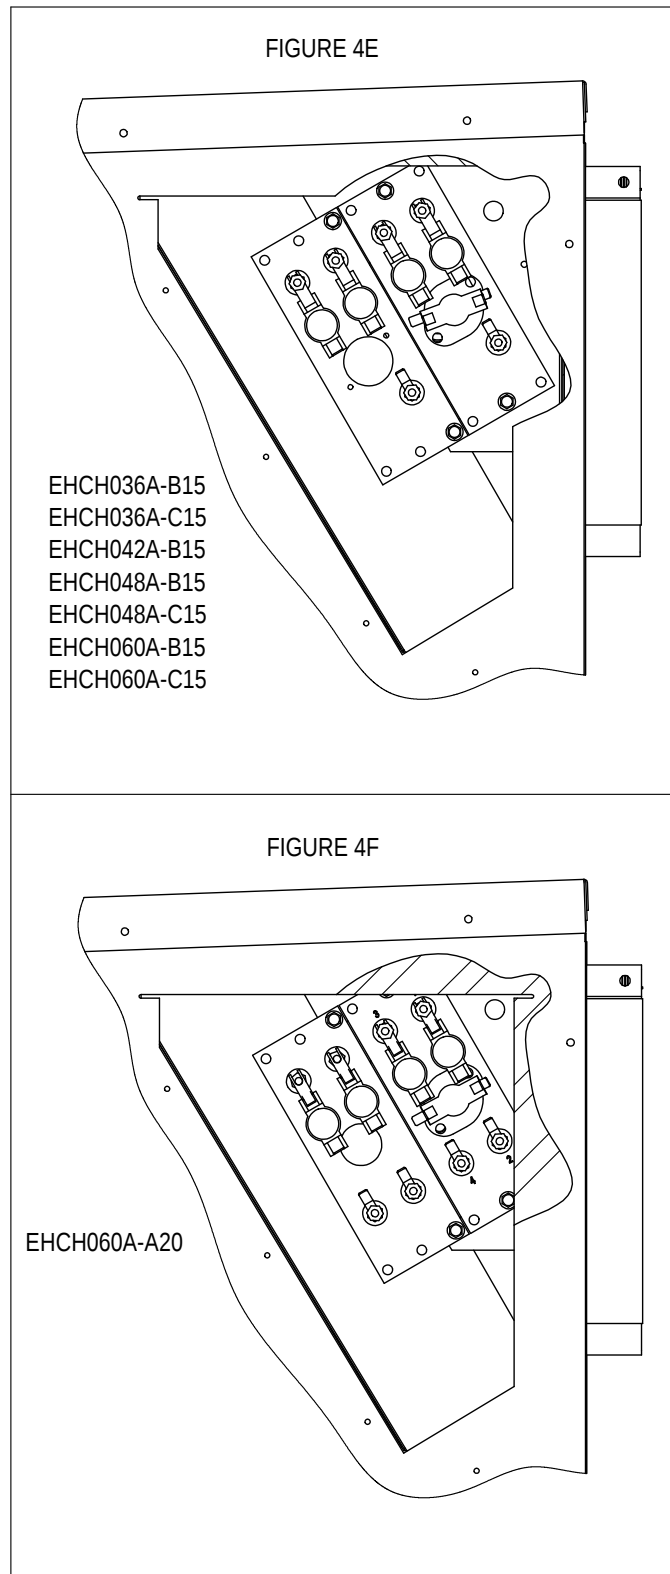

MIS-4423

FIGURE 5
Installing Heater Base
and Connecting Wiring

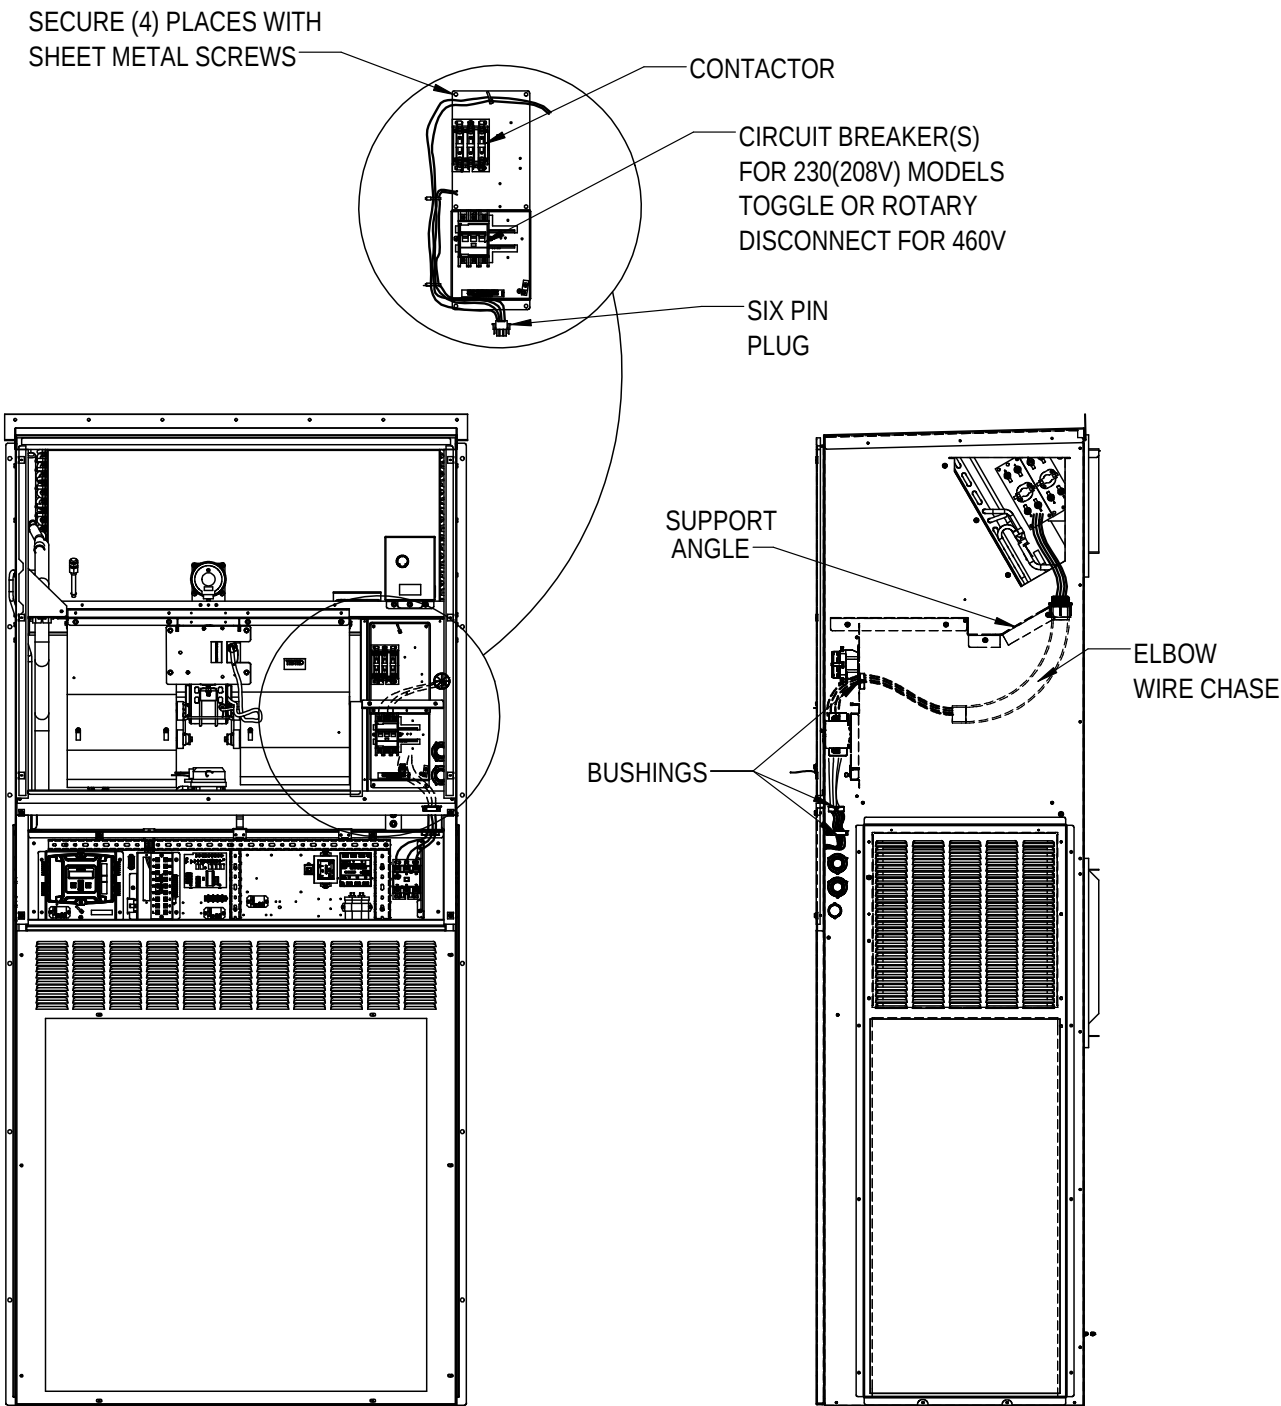

MIS-4098

FIGURE 6

INSTALL ONLY HEATER PACKAGES LISTED HERE

BARD MANUFACTURING CO. INC., 1914 RANDOLPH DRIVE,

(1)
APPROVED
HEATER

MODEL

[illegible]

ASSURE THAT SERIAL PLATE IS CLEAN AND DRY. REMOVE APPROPRIATE LABEL STRIP FOR KW REQUIRED AND REMARK SERIAL PLATE AS SHOWN FOR THE HEATER PACKAGE THAT IS INSTALLED

SHORT-CIRCUIT CURRENT
BRANCH CIRCUIT SELECT CURRENT 14.1A OPER

SERIAL NUMBER XXXXXXXXXXXXXXX-XX

SUITABLE FOR PARTIAL OUTDOOR EXPOSURE IN THROUGH THE WALL
ALL MOTORS ARE THERMALLY PROTECTED

	VAC	HZ	PH	HP	FLA	- ELECT
COMPRESSOR	230/208	60	1			
OUTDOOR MOTOR	230/208	60	1	1/3	1.9	
INDOOR MOTOR	230/208	60	1	1/2	1.4	
ERV	230/208	60	1		2.2 (C	
HEATER PACKAGE				KW	FLA	
EHCH036A-A05	230/208	60	1	4.6/3.8	20.0/18	
EHCH036A-A10	230/208	60	1	9.2/7.5	40.0/34	
EHCH036A-A15	230/208	60	1	13.8/11.3	60.0/5	

MIS-384 A