
REPLACEMENT PARTS MANUAL

GROUND SOURCE HEATER PACKAGE

MODEL: EH3GSVA
EH5GSVA

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Contents

<i>Description</i>	<i>Page</i>
Functional Components	
♦ Exploded View	2
♦ Usage List	3

Important


- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.



Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
Since 1914...Moving ahead, just as planned.

Manual: 2110-154E
Supersedes: 2110-154D
File: Tab 7
Date: 11-12-09

FUNCTIONAL COMPONENTS

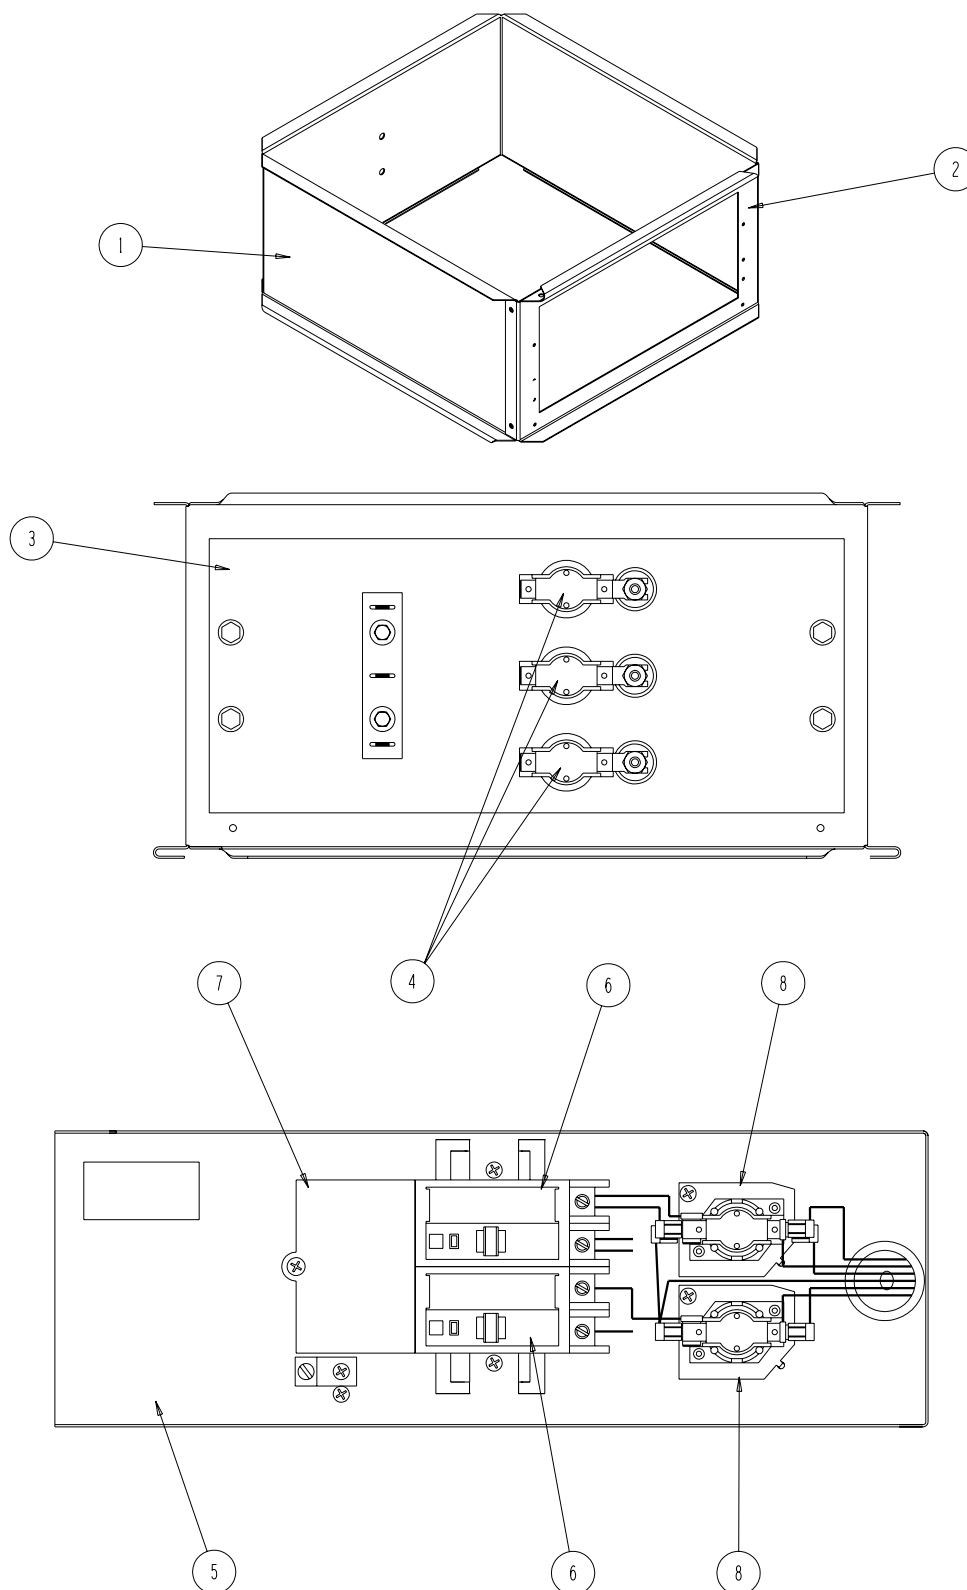

MIS-1244

FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	EH3GSVA-A05C	EH3GSVA-A09C	EH3GSVA-A14C	EH5GSVA-A09C	EH5GSVA-A14C	EH5GSVA-A18C
1	116-223	Heater Package Wrapper	X	X	X			
1	116-256	Heater Package Wrapper				X	X	X
2	116-225	Heater Package Front	X	X	X			
2	116-255	Heater Package Front				X	X	X
3	8604-092	4.5 KW Heat Strip 240V	X					
3	8604-093	9KW Heat Strip 240V		X		X		2
3	8604-114	14KW Heat Strip 240V			X		X	
4	8402-056	Limit Control L150-3.5	1	2	3			
4	8402-155	Limit Control L180-3.5				2	3	4
5	116-228	Heater Package Control Panel	X	X	X	X	X	X
6	8615-036	Circuit Breaker	X		X		X	
6	8615-040	Circuit Breaker		X	X	X	X	2
7	8615-047	Circuit Breaker Terminal Block			X		X	X
8	8201-057	Time Delay Relay H30-75 C1-40	X		X		X	
8	8201-058	Time Delay Relay H1-30 C45-70		X	X	X	X	
8	8201-059	Time Delay Relay H30-75 C1-40						X
NS	142-069	Fill Plate	X	X			X	
NS	142-097	Fill Plate				X		
NS	4106-100	Wiring Diagram	X					
NS	4106-110	Wiring Diagram		X		X		
NS	4106-120	Wiring Diagram			X		X	
NS	4106-130	Wiring Diagram						X

NS – Not Shown