
REPLACEMENT PARTS MANUAL

PACKAGE AIR CONDITIONER

Models:

PA13421-A

PA13421-B

PA13481-A

PA13481-B

PA13601-A

PA13601-B

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.

Contents

Description	Page
Cabinet Components	
♦ Exploded View	2
♦ Usage List	3
Functional Components	
♦ Exploded View	4
♦ Usage List	5
Control Panels	
♦ Exploded View 1-Phase	6
♦ Usage List 1-Phase	7
♦ Exploded View 3-Phase	8
♦ Usage List 3-Phase	9




CLIMATE CONTROL SOLUTIONS

Bard Manufacturing Company, Inc.
Bryan, Ohio 43506

Since 1914...Moving, ahead just as planned.

Manual: 2110-217
Supersedes: NEW
File: Tab 10
Date: 05-08-06

CABINET COMPONENTS

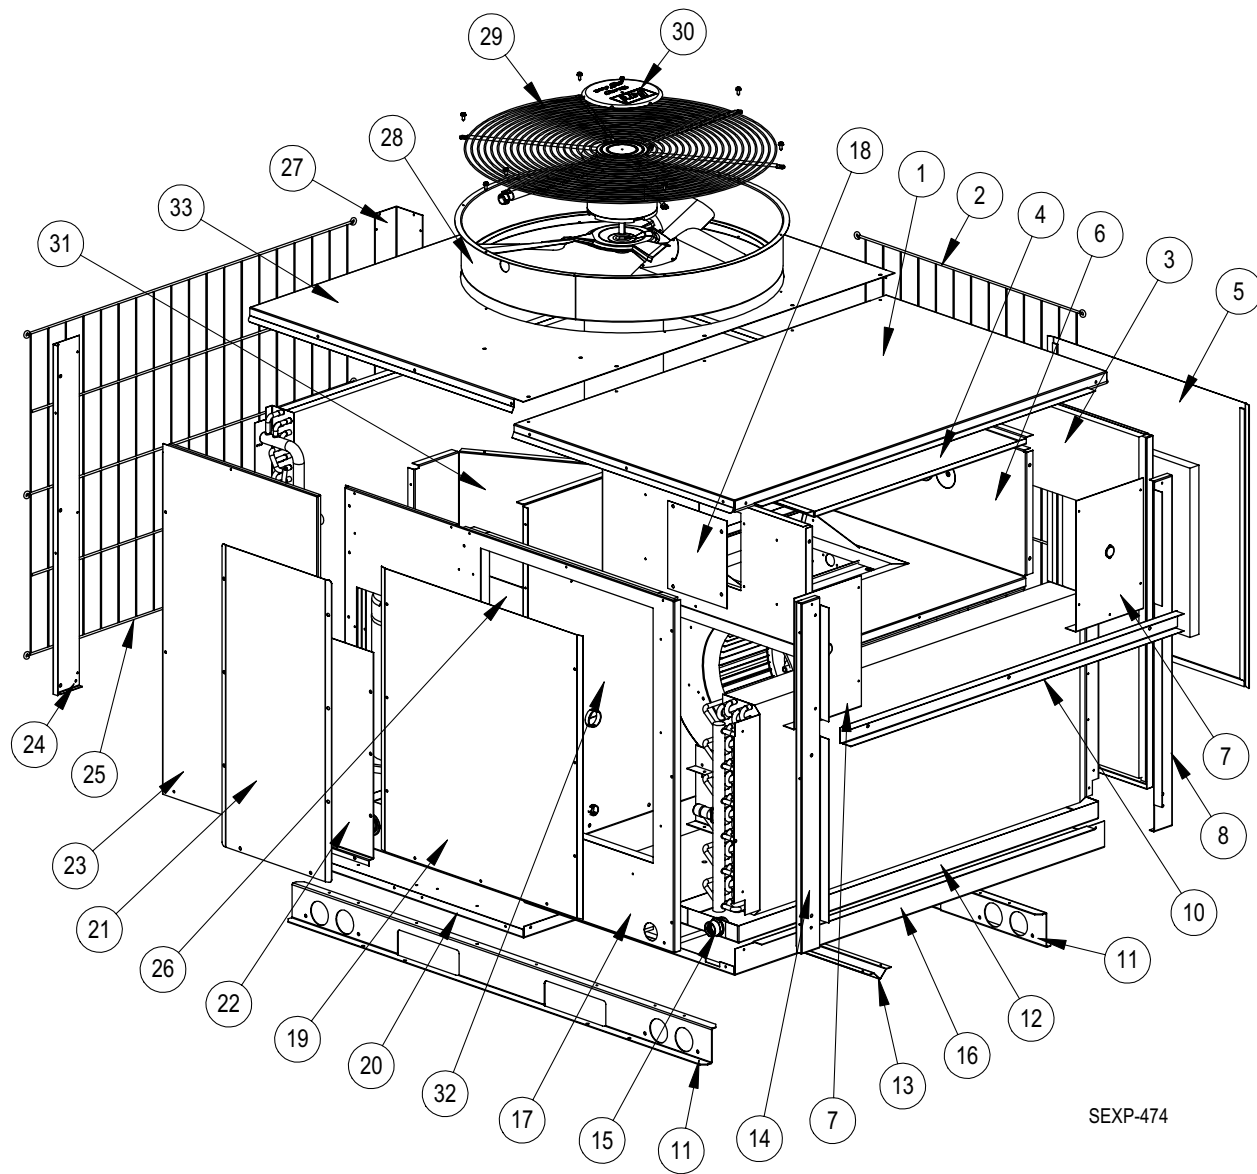


SEXP-474

CABINET COMPONENTS

Drawing No.	Part No.	Description	PA13421-A	PA13421-B	PA13481-A	PA13481-B	PA13601-A	PA13601-B
1	S107-255-X	Indoor Top	X	X	X	X	X	X
2	7051-054	Side Condenser Grille	X	X	X	X	X	X
3	S101-474-X	Left Side	X	X	X	X	X	X
4	134-134	Heat Strip Shield	X	X	X	X	X	X
5	S153-400-X	Heater Access Door	X	X	X	X	X	X
6	S120-400	Blower Partition	X	X	X	X	X	X
7	137-513	Blower Partition Side Fill	2	2	2	2	2	2
8	S149-106-X	Left Rear Corner	X	X	X	X	X	X
10	165-590-X	Plenum Channel	X	X	X	X	X	X
11	102-460	Base Rail	2	2	2	2	2	2
12	S123-114	Drain Pan with Fitting	X	X	X	X	X	X
13	140-321-X	Center Base Rail	X	X	X	X	X	X
14	S149-103-X	Right Rear Corner	X	X	X	X	X	X
15	6094-003	Drain Pan Fitting	X	X	X	X	X	X
16	S126-350-X	Indoor Base	X	X	X	X	X	X
17	S101-473-X	Right Side	X	X	X	X	X	X
18	142-045	OKW Cover Plate	X	X	X	X	X	X
19	S153-409-X	Blower Access Door	X	X	X	X	X	X
20	126-349-X	Outdoor Base	X	X	X	X	X	X
21	S153-399-X	Outer Control Panel Door	X	X	X	X	X	X
22	S153-397	Inner Control Panel Door	X	X	X	X	X	X
23	S153-398-X	Compressor Access Door	X	X	X	X	X	X
24	149-104-X	Right Front Corner	X	X	X	X	X	X
25	7051-053	Front Condenser Grille	X	X	X	X	X	X
26	Control Panel Assembly - See Drawing		X	X	X	X	X	X
27	149-105-X	Left Front Corner	X	X	X	X	X	X
28	S167-014-X	Fan Venturi	X	X	X	X	X	X
29	7051-018	Fan and Motor Mount Grille	X	X	X	X	X	X
30	5252-009	Bard Nameplate	X	X	X	X	X	X
31	135-223	Control Panel Rain Shield	X	X	X	X	X	X
32	S121-399	Condenser Partition	X	X	X	X	X	X
33	107-254-X	Outdoor Top	X	X	X	X	X	X

FUNCTIONAL COMPONENTS

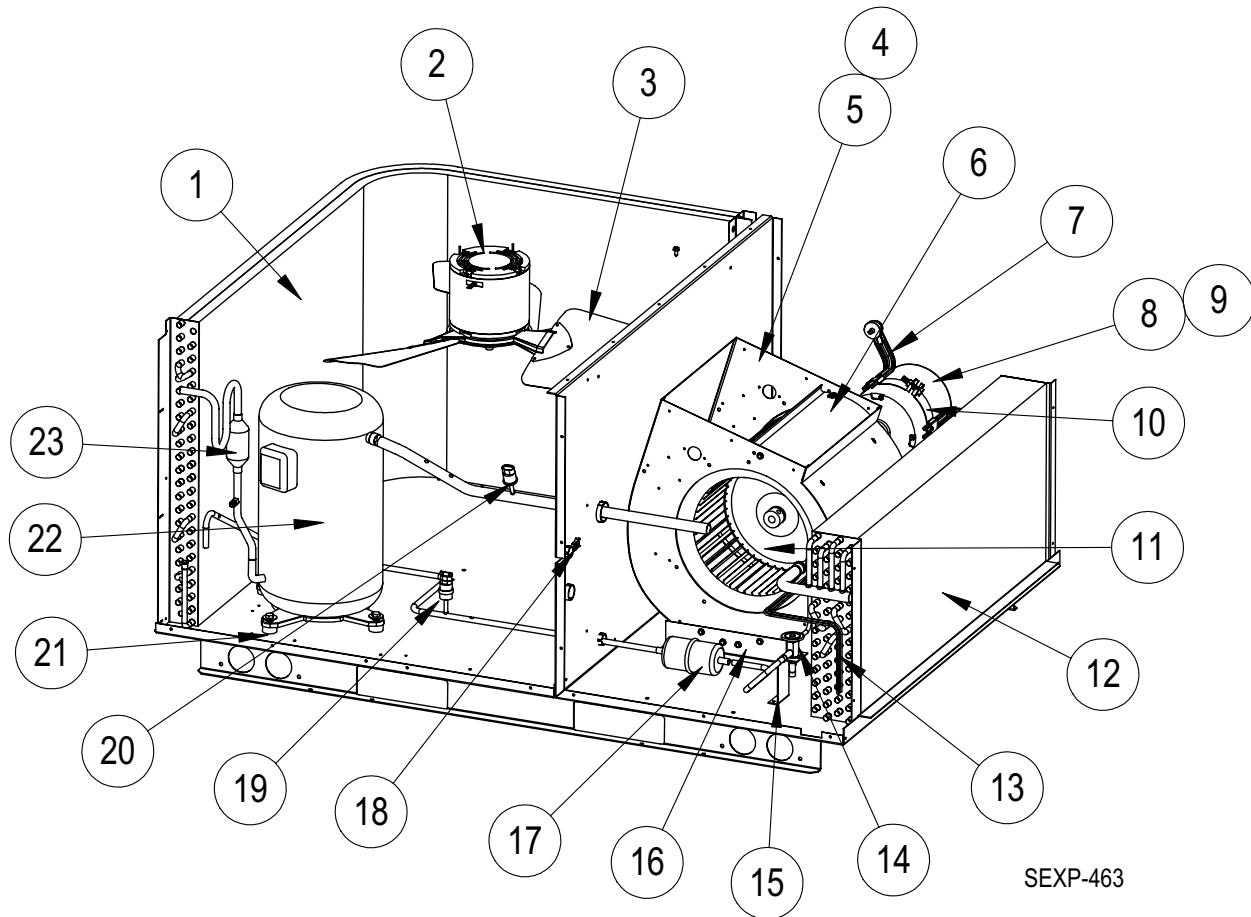


FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	PA13421-A	PA13421-B	PA13481-A	PA13481-B	PA13601-A	PA13601-B
1	5051-138BX	Condenser Coil	X	X	X	X	X	X
2	8104-019	Outdoor Motor	X	X	X	X	X	X
3	5151-057	Fan Blade	X	X	X	X	X	X
4	900-244-001	Complete Blower Assembly	X	X				
4	900-245-001				X	X		
4	900-245-002						X	X
5	151-097	Blower Housing	X	X	X	X	X	X
6	144-130	Diffuser	X	X	X	X	X	X
7	8620-034	Motor Mount Kit	X	X	X	X	X	X
8	8106-035-0018	Programmed 1/2 HP Motor w/Control	X	X				
8	8107-009-0019	Programmed 3/4 HP Motor w/Control			X	X		
8	8107-009-0044	Programmed 3/4 HP Motor w/Control					X	X
9	C8106-035-0018	Programmed 1/2 HP Control Only	X	X				
9	C8107-009-0019	Programmed 3/4 HP Control Only			X	X		
9	C8107-009-0044	Programmed 3/4 HP Control Only					X	X
10	8620-034	Motor Mount Kit	X	X	X	X	X	X
11	5152-049	Blower Wheel	X	X	X	X	X	X
12	5060-128BX	Evaporator Coil	X	X	X	X	X	X
13	S800-0351	Cooling Distributor 4 Outlet	X	X	X	X	X	X
14	5651-180	Expansion Valve	X	X	X	X	X	X
15	113-325	Cooling TXV Mounting Bracket	X	X	X	X	X	X
16	104-795	Blower Leg	2	2	2	2	2	2
17	5201-002	Filter Drier	X	X	X	X	X	X
18	3000-1245	6 Pin Plug for Heater Package	X	X	X	X	X	X
19	1804-0327	High Pressure Switch	X	X	X	X	X	X
20	1804-0338	Low Pressure Switch	X	X	X	X	X	X
21	1012-217	Cage Nut	4	4	4	4	4	4
22	8000-287	Compressor	X					
22	8000-290			X				
22	8000-288				X			
22	8000-291					X		
22	8000-289						X	
22	8000-292							X

Reference SEXP-463

CONTROL PANEL — 1-PHASE

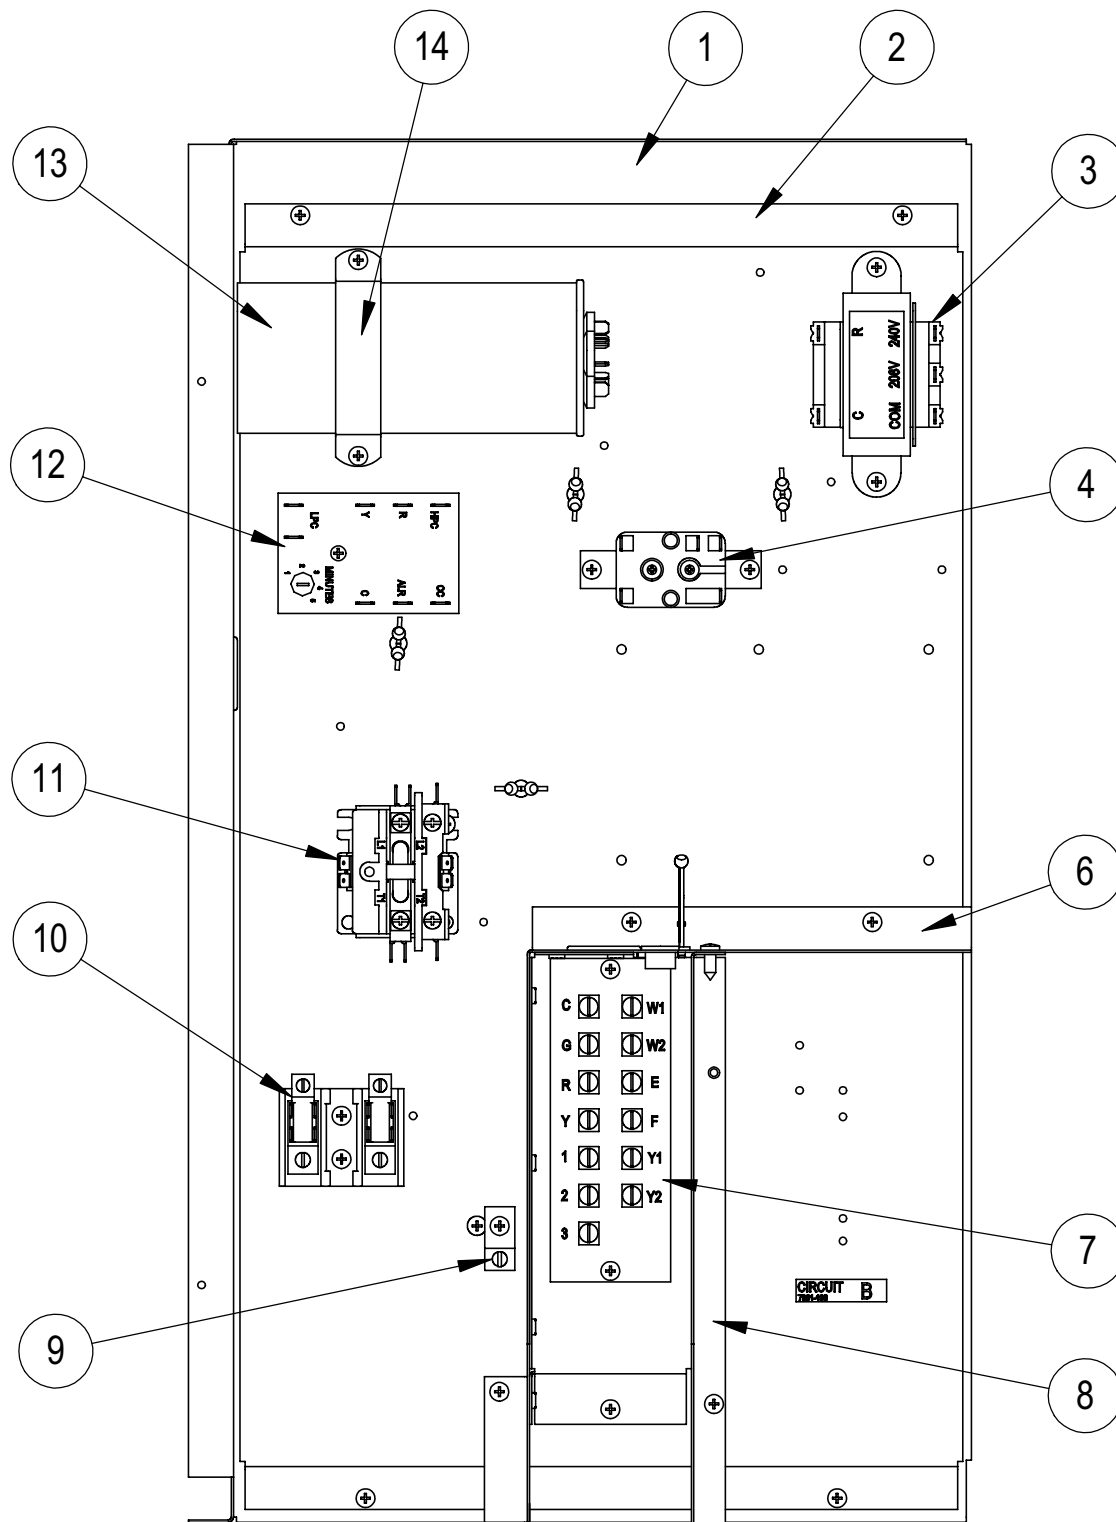

SEXP-466


CONTROL PANEL 1-PHASE

Drawing No.	Part No.	Description	PA13421-A	PA13481-A	PA13601-A
1	117-262	Control Panel	X	X	X
2	117-261	Control Mounting Plate	X	X	X
3	8407-035	Transformer	X	X	X
4	8201-062	Relay	X	X	X
6	117-263	Low Voltage Box Assembly	X	X	X
7	8607-024	Terminal Strip	X	X	X
8	135-218	Terminal Shield	X	X	X
9	8611-006	Ground Terminal	X	X	X
10	8607-013	Terminal Block	X	X	X
11	8401-007	Contactor	X	X	X
12	8201-088	Compressor Control Module	X	X	X
13	8552-062	Capacitor 60/5 MFD 370V	X		
13	8552-081	Capacitor 70/5 MFD 370V		X	
13	8552-061	Capacitor 80/5 MFD 370V			X
14	8550-008	Capacitor Bracket	X	X	X
NS	4109A100	Wiring Diagram	X	X	X
NS	4109A101	Ladder Diagram	X	X	X

NS = Not Shown

Reference SEXP-466

CONTROL PANEL — 3-PHASE

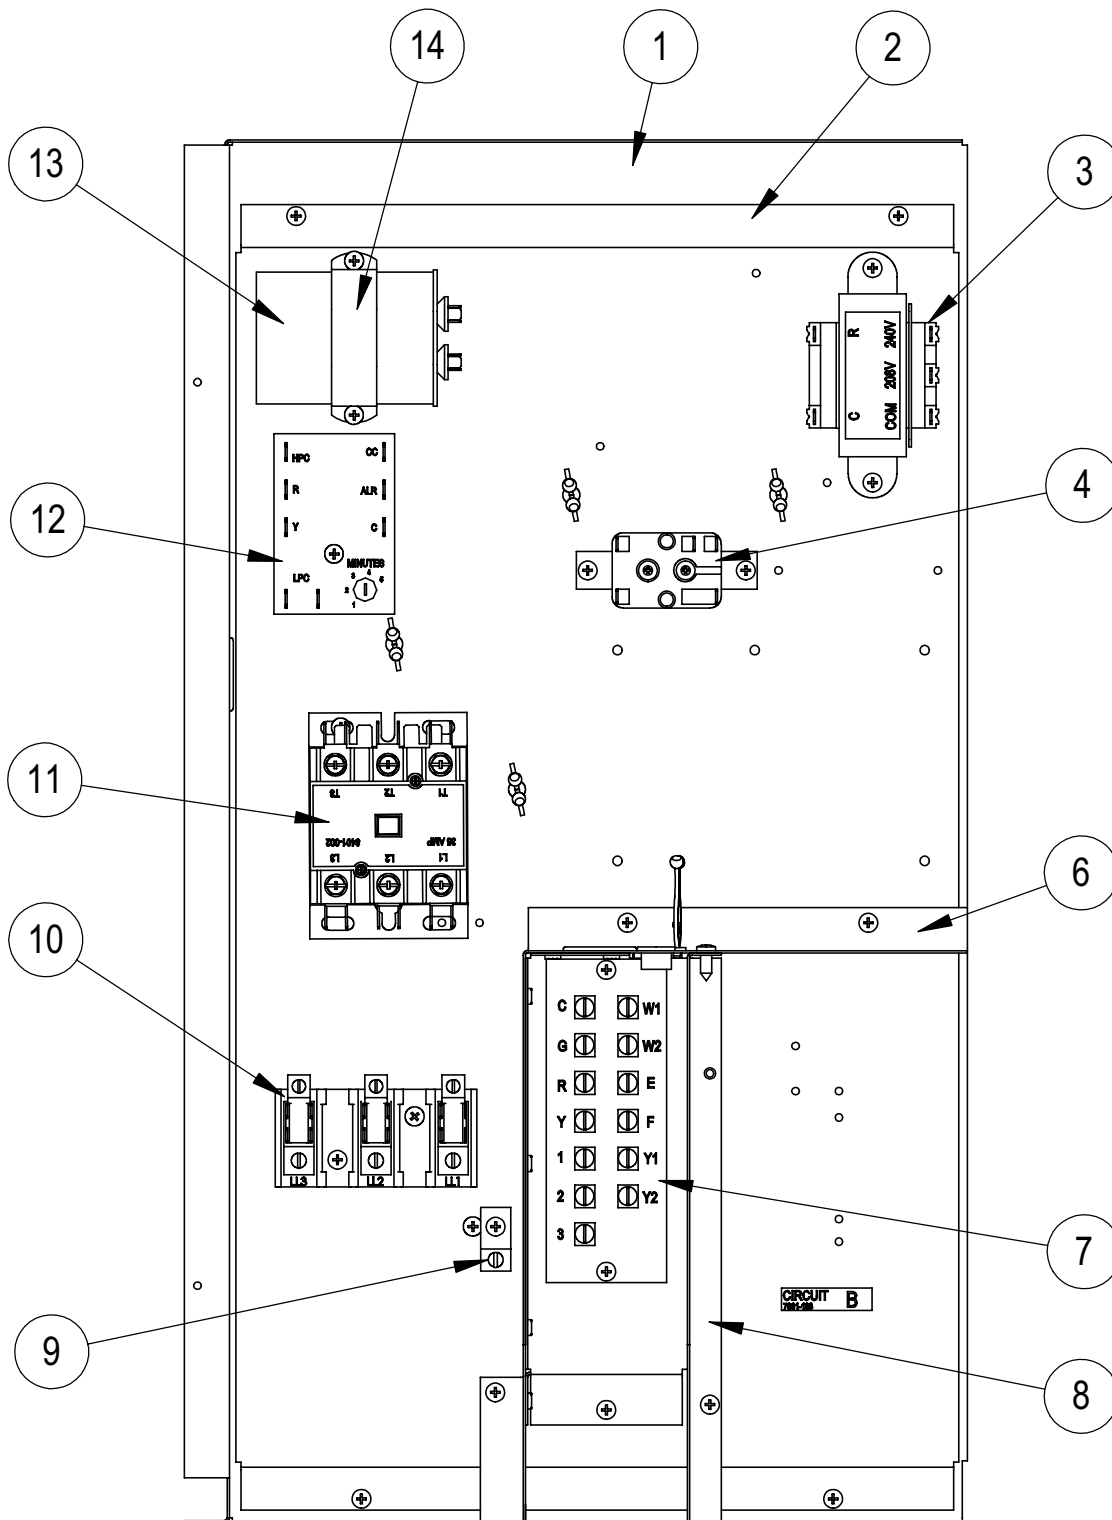

SEXP-468

CONTROL PANEL 3-PHASE

Drawing No.	Part No.	Description	PA13421-B	PA13481-B	PA13601-B
1	117-262	Control Panel	X	X	X
2	117-261	Control Mounting Plate	X	X	X
3	8407-035	Transformer	X	X	X
4	8201-062	Relay	X	X	X
6	117-263	Low Voltage Box Assembly	X	X	X
7	8607-024	Terminal Strip	X	X	X
8	135-218	Terminal Shield	X	X	X
9	8611-006	Ground Terminal	X	X	X
10	8607-014	Terminal Block	X	X	X
11	8401-002	Contactor	X	X	X
12	8201-088	Compressor Control Module	X	X	X
13	8552-002	Capacitor 5 MFD 370V	X	X	X
14	8550-003	Capacitor Bracket	X	X	X
NS	4109A202	Wiring Diagram	X	X	
NS	4109A203	Wiring Diagram			X
NS	4109A204	Ladder Diagram	X	X	X

NS = Not Shown

Reference SEXP-468