


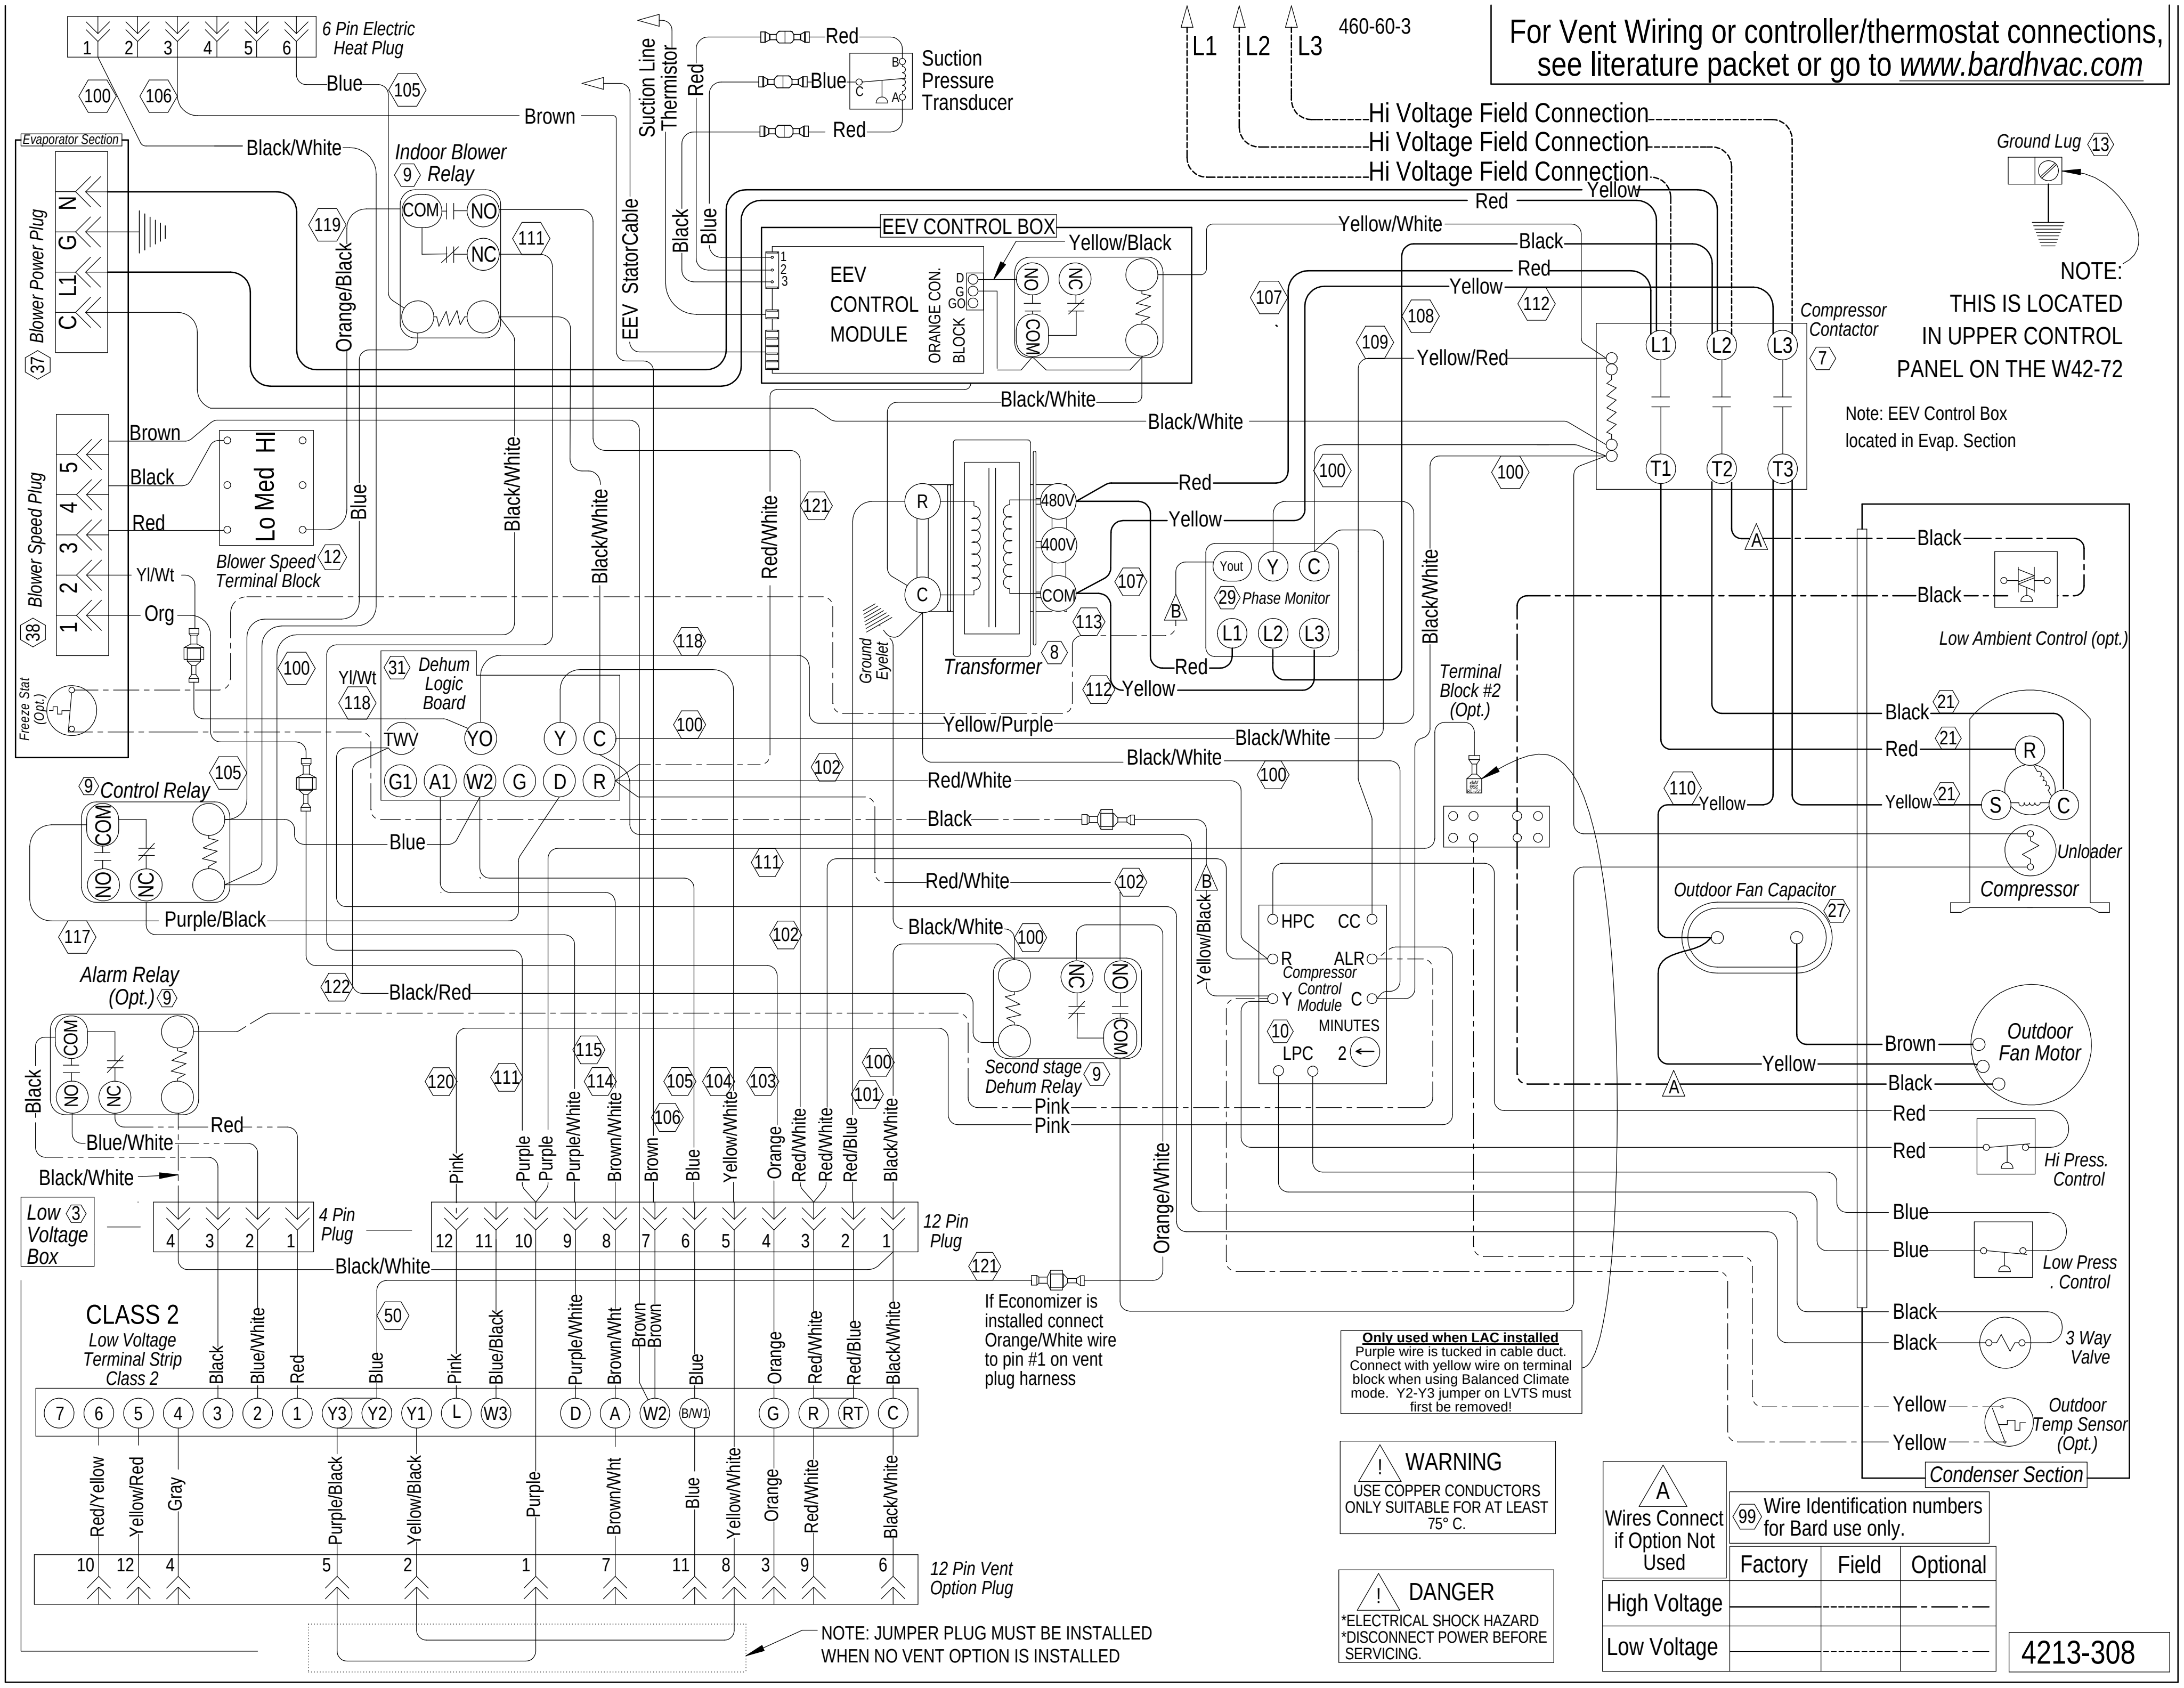

For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL ON THE W42-72

Note: EEV Control Box
located in Evap. Section

Only used when LAC installed
Purple wire is tucked in cable duct.
Connect with yellow wire on terminal
block when using Balanced Climate
mode. Y2-Y3 jumper on LVTS must
first be removed!

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

A
Wires Connect
if Option Not
Used

High Voltage			
Low Voltage			

Wire Identification numbers for Bard use only.		
Factory	Field	Optional