
INSTALLATION INSTRUCTIONS

MOTORIZED FRESH AIR DAMPER

Models
MFAD-2
MFAD-3



CLIMATE CONTROL SOLUTIONS

Bard Manufacturing Company
Bryan, Ohio 43506

Since 1914 . . . Moving ahead just as planned.

Manual :	2100-225 D
Supersedes:	2100-225C
File:	Volume III Tab 19
Date:	07-23-02

Contents

MFAD General Information 1
Description 1
Application 1
Installation 3

Figures
Figure 1 3
Figure 2 3
Figure 3A 4
Figure 3B 4

Tables
Table 1 1
Table 2 1
Table 3 2
Table 4 2

GENERAL INFORMATION

DESCRIPTION

The motorized fresh air damper MFAD-2 and MFAD-3 are internally mounted dampers designed to bring up to 25% fresh air. The damper blade is powered by a 24 VAC motor with spring return on power loss. The damper is powered open anytime the unit blower motor is energized.

APPLICATION

The amount of outside fresh air brought into the structure is dependent on the supply and return duct static pressure present in the duct system. Refer to Table 2 for ventilation air that will be supplied at different duct static pressures.

For free blow applications with return air filter grille and supply grille use 0.00 supply air static pressure and 0.1 return air static pressure.

**TABLE 1
SUITABLE FOR THESE UNITS**

MFAD-2	MFAD-3	
WA182-A WA182-D WA242-A WA242-B WA242-D WA242-F	WA301-A WA301-B WA301-C WA301-D WA301-F	WA361-A WA361-B WA361-C WA361-D WA361-E WA361-F
WH181-A WH242-A WH242-B WH242-C	WH301-A WH301-B WH301-C	WH361-A WH361-B WH361-C
WH242LA	WH301LA WH301LB	WH361LA WH361LB
	SH311-A SH311-B SH311-C	SH381-A SH381-B SH381-C

**TABLE 2
MFAD-2
VENTILATION AIR SUPPLIED AT
STATIC PRESSURES**

Ventilation Air (CFM)	85	135	190	240	295
Return Air Static Pressure	.00	.05	.10	.15	.20

TABLE 3
MFAD-3
VENTILATION AIR SUPPLIED AT VARIOUS STATIC PRESSURES
FOR MODELS WA301, WA361, WH301 AND WH361

Blower Speed High	Ventilation Airflow (CFM)				
Non-ducted *	75	235	410	545	615
Return Air Static Pressure	0.00	0.05	0.10	0.15	0.20

Blower Speed Low	Ventilation Airflow (CFM)				
Non-ducted *	50	225	405	510	N/A
Return Air Static Pressure	0.00	0.05	0.10	0.15	0.20

* With supply grille installed

TABLE 4
MFAD-3
VENTILATION AIR SUPPLIED AT VARIOUS STATIC PRESSURES
FOR MODELS SH311 AND SH381

Blower Speed High	Ventilation Airflow (CFM)				
Non-ducted *	40	235	380	460	N/A
Return Air Static Pressure	0.00	0.05	0.10	0.15	0.20


Blower Speed Low	Ventilation Airflow (CFM)				
Non-ducted *	30	225	370	450	N/A
Return Air Static Pressure	0.00	0.05	0.10	0.15	0.20

* With supply grille installed

INSTALLATION


1. Disconnect all power to wall mount unit before installing MFAD.
2. Remove service door. (See Figure 1.) Remove fresh air damper or blank off plate if installed on service door. Remove 4 screws from top of front condenser grille. (See Figure 3A.)
3. The “exhaust cover plate” **must be** in place when an MFAD-2 or MFAD-3 is installed. (See Figure 2.)
4. Install MFAD with notch in front lip of MFAD centered over hole in condenser partition. (See Figure 3A.)
5. Position MFAD with front lip over condenser partition and under front grille. (See Figure 3B.) *This is important to insure proper drainage of any water entering damper assembly.*
6. Use a self drilling screw through hole provided in left mounting flange to secure MFAD in position.
7. Route wires as shown in Figure 3A into unit low voltage terminal strip area. For left hand units unclip 2 wire ties on right half of the MFAD. Reroute wire down the left side. Route wires into low voltage terminal strip area.
8. Connect black wire to C terminal of low voltage block. Connect red wire to G terminal of low voltage block. See wall mount low voltage connection diagram in the unit installation instructions for wiring diagram.
9. Check MFAD for proper operation. MFAD should open whenever the blower is energized.
10. Replace 4 screws in front condenser grille and replace service door. Plug 4 holes in service door with plastic plugs provided.

FIGURE 1

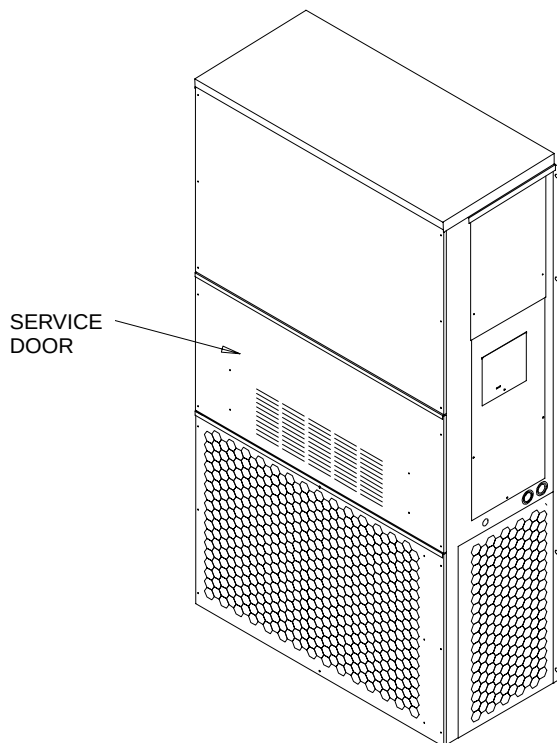


MIS-383

FIGURE 2

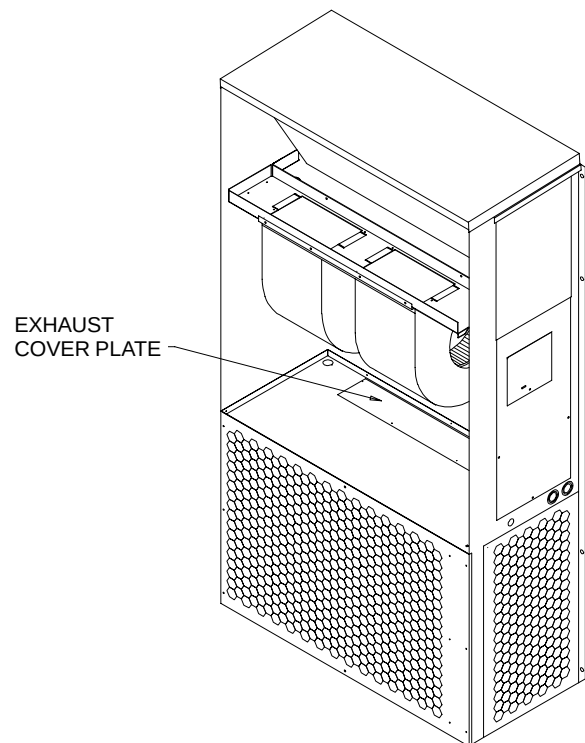

MIS-356

FIGURE 3A

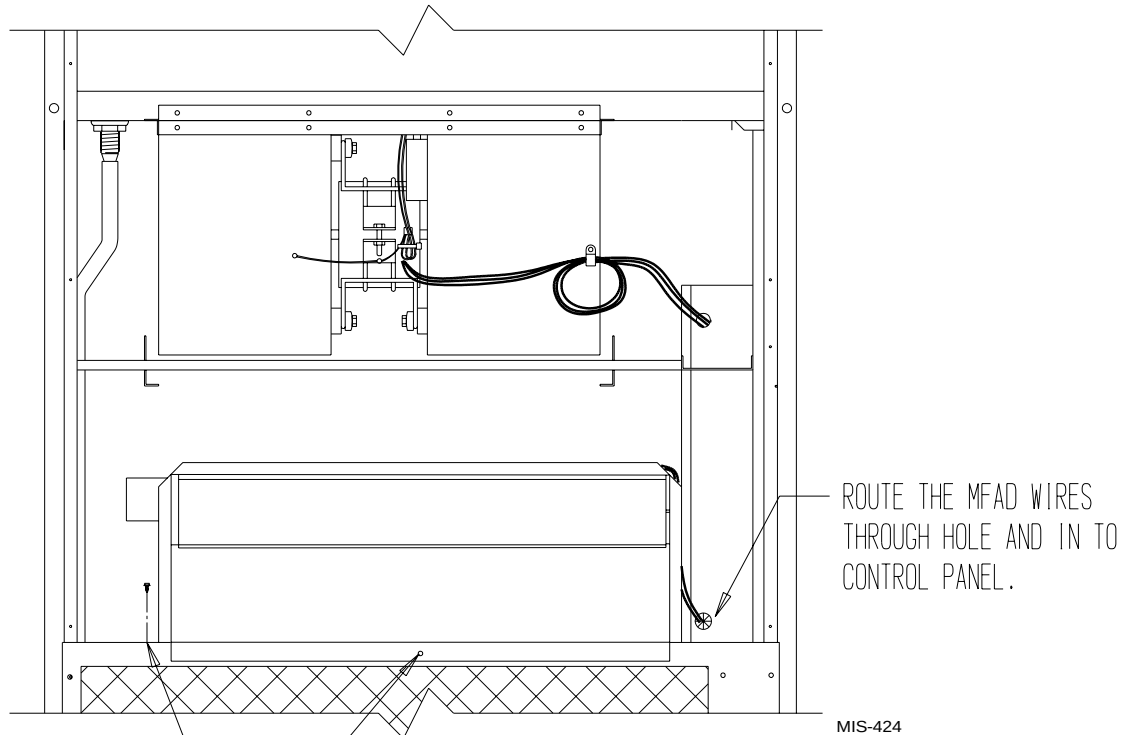

USE A SELF DRILLING SCREW TO FASTEN THE MFAD TO THE CONDENSER PARTITION.

CAUTION: HOLE IN MFAD MUST BE USED TO INSURE CLEARANCE FROM CONDENSER COIL TUBING.

WHEN INSTALLING MFD POSITION SO THAT HOLE IN FRONT LIP IS CENTERED OVER HOLE IN CONDENSER GRILLE TO INSERT A SELF DRILLING SCREW.

FIGURE 3B

