

---

# INSTALLATION INSTRUCTIONS

## QTEC SERIES PACKAGED HEAT PUMP

Models:

QH243D

QH302D


QH362D

QH422D

QH482D

QH602D

---

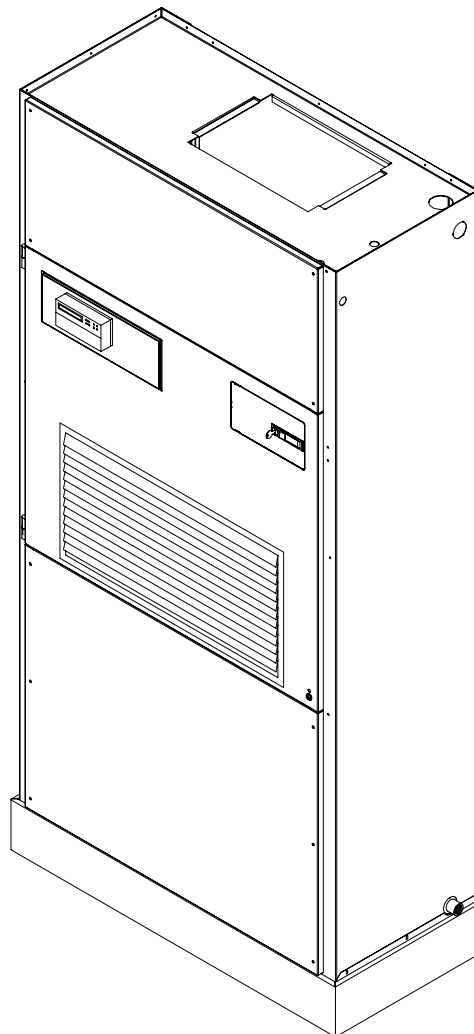

MIS-1554



Bard Manufacturing Company  
Bryan, Ohio 43506

*Since 1914 . . . Moving ahead, just as planned.*

Manual: 2100-421A  
Supersedes: 2100-421  
File: Vol II Tab 14  
Date: 02-14-03

# CONTENTS

---

## Getting Other Information and Publications

For more information, contact these publishers: ..... 1

## QTEC General Information

|                                             |    |
|---------------------------------------------|----|
| QTEC Model Nomenclature .....               | 2  |
| Shipping Damage .....                       | 6  |
| Unit Removal From Skid .....                | 6  |
| Handling Unit After Removal From Skid ..... | 7  |
| General .....                               | 7  |
| Minimum Installation Height .....           | 7  |
| Duct Work .....                             | 9  |
| Filters .....                               | 9  |
| Fresh Air Intake .....                      | 10 |
| Condensate Drain .....                      | 10 |
| Service Light .....                         | 11 |

## Installation Instructions

|                                   |    |
|-----------------------------------|----|
| Mounting the Unit .....           | 12 |
| Wiring — Main Power .....         | 13 |
| Wiring — Low Voltage Wiring ..... | 13 |
| Low Voltage Connections .....     | 14 |

## Figures

|                                                        |    |
|--------------------------------------------------------|----|
| Figure 1 Unit Dimensions .....                         | 5  |
| Figure 2 Air Seal on Bottom of Unit .....              | 6  |
| Figure 3 Removal of Unit From Skid .....               | 6  |
| Figure 4 Unit on Appliance Cart .....                  | 7  |
| Figure 5 Installation With Free Blow Plenum .....      | 8  |
| Figure 6 Ducted Application .....                      | 8  |
| Figure 7 Supply Duct Connections .....                 | 9  |
| Figure 8 Filter Location .....                         | 9  |
| Figure 9 Side Drain .....                              | 10 |
| Figure 10 Optional Rear Drain .....                    | 10 |
| Figure 11 Rear Drain (Top View) .....                  | 11 |
| Figure 12 Unit Mounting .....                          | 11 |
| Figure 13 Removing Locking Screws<br>From Wheels ..... | 12 |
| Figure 14 Component Location .....                     | 13 |
| Figure 15 Thermostat Plug Terminals .....              | 15 |
| Figure 16 Thermostat Wiring Diagram "X" Option .....   | 16 |
| Figure 16-1 Details on LVTB Connections .....          | 17 |
| Figure 16A Thermostat Wiring Diagram "E" Option .....  | 18 |
| Figure 16B Thermostat Wiring Diagram "F" Option .....  | 19 |
| Figure 16C Thermostat Wiring Diagram "G" Option .....  | 20 |
| Figure 17 Fresh Air Damper Removal .....               | 24 |
| Figure 18 QERV Removal .....                           | 25 |
| Figure 19 Dehumidification Mode Circuit .....          | 28 |
| Figure 20 Cooling Mode Circuit .....                   | 29 |
| Figure 21 Heat Pump Control Board .....                | 30 |
| Figure 22 Fan Blade Setting .....                      | 33 |

## Start Up

|                                                             |    |
|-------------------------------------------------------------|----|
| Description of Standard Equipment .....                     | 21 |
| Optional CFM .....                                          | 21 |
| Important Installer Note .....                              | 21 |
| Phase Monitor .....                                         | 21 |
| Three Phase Scroll Compressor Start Up<br>Information ..... | 21 |
| Service Hints .....                                         | 22 |
| Mist Eliminator Service .....                               | 22 |
| Vent Options .....                                          | 23 |
| Sequence of Operation .....                                 | 26 |
| Optional Climate Controls Sequence<br>of Operation .....    | 26 |
| Refrigerant Tube Schematic for Reheat Coil .....            | 27 |
| Pressure Service Ports .....                                | 27 |
| Defrost Cycle .....                                         | 30 |

## Troubleshooting

|                                                                  |       |
|------------------------------------------------------------------|-------|
| Solid State Heat Pump Control Troubleshooting<br>Procedure ..... | 32    |
| Checking Temperature Sensor .....                                | 32    |
| Fan Blade Setting Dimensions .....                               | 33    |
| Refrigerant Charge .....                                         | 33    |
| Pressure Charts .....                                            | 34-35 |

## Tables

|                                                                  |    |
|------------------------------------------------------------------|----|
| Table 1 Factory Built-In Electric Heat Table .....               | 2  |
| Table 2 Electrical Specifications .....                          | 3  |
| Table 2A Electrical Specifications .....                         | 4  |
| Table 3 Operating Voltage Range .....                            | 13 |
| Table 4 Wall Thermostats and Subbase<br>Combinations .....       | 15 |
| Table 5 Troubleshooting .....                                    | 31 |
| Table 6 Temperature vs Resistance of<br>Temperature Sensor ..... | 32 |
| Table 7 Fan Blade Dimensions .....                               | 33 |
| Table 8 Super Heat at Compressor .....                           | 33 |
| Table 9 Indoor Blower Performance .....                          | 33 |
| Table 10 Cooling Pressure .....                                  | 34 |
| Table 11 Heating Pressure .....                                  | 35 |

## GETTING OTHER INFORMATION AND PUBLICATIONS

---

These publications can help you install the air conditioner or heat pump. You can usually find these at your local library or purchase them directly from the publisher. Be sure to consult current edition of each standard.

National Electrical Code ..... ANSI/NFPA 70

Standard for the Installation ..... ANSI/NFPA 90A  
of Air Conditioning and  
Ventilating Systems

Standard for Warm Air ..... ANSI/NFPA 90B  
Heating and Air  
Conditioning Systems

Load Calculation for ..... ACCA Manual J or  
Winter and Summer                      Manual N  
Air Conditioning

Low Pressure, Low Velocity ..... ACCA Manual D or  
Duct System Design                      Manual Q  
Winter and Summer  
Air Conditioning

### FOR MORE INFORMATION, CONTACT THESE PUBLISHERS:

**ACCA      Air Conditioning Contractors of America**  
1712 New Hampshire Avenue  
Washington, DC 20009  
Telephone: (202) 483-9370  
Fax: (202) 234-4721


**ANSI      American National Standards Institute**  
11 West Street, 13th Floor  
New York, NY 10036  
Telephone: (212) 642-4900  
Fax: (212) 302-1286

**ASHRAE   American Society of Heating, Refrigeration,  
and Air Conditioning Engineers, Inc.**  
1791 Tullie Circle, N.E.  
Atlanta, GA 30329-2305  
Telephone: (404) 636-8400  
Fax: (404) 321-5478

**NFPA      National Fire Protection Association**  
Batterymarch Park  
P.O. Box 9101  
Quincy, MA 02269-9901  
Telephone: (800) 344-3555  
Fax: (617) 984-7057

# QTEC Series General Information

## QTEC MODEL NOMENCLATURE

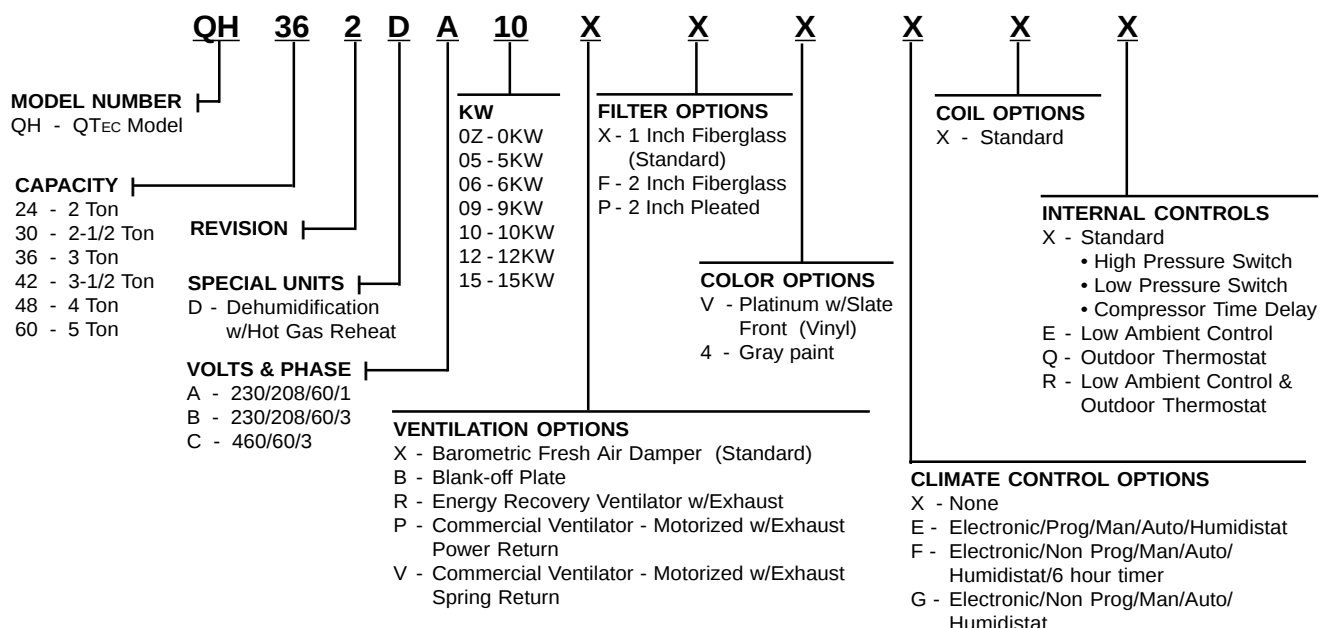

**TABLE 1**  
**FACTORY BUILT-IN ELECTRIC HEAT TABLE**

| Models | QH243DA<br>QH302DA |        | QH243DB |        | QH302DB |        | QH243DC | QH302DC | QH362DA<br>QH422DA<br>QH482DA<br>QH602DA |        | QH362DB<br>QH422DB<br>QH482DB<br>QH602DB |        | QH362DC<br>QH422DC<br>QH482DC<br>QH602DC |
|--------|--------------------|--------|---------|--------|---------|--------|---------|---------|------------------------------------------|--------|------------------------------------------|--------|------------------------------------------|
|        | 240V-1             | 208V-1 | 240V-1  | 208V-1 | 240V-1  | 208V-1 |         |         | 240V-1                                   | 208V-1 | 240V-1                                   | 208V-1 |                                          |
| KW     | BTUH               | BTUH   | BTUH    | BTUH   | BTUH    | BTUH   | BTUH    | BTUH    | BTUH                                     | BTUH   | BTUH                                     | BTUH   | BTUH                                     |
| 5.0    | 16,380             | 12,290 |         |        |         |        |         |         |                                          |        |                                          |        |                                          |
| 6.0    |                    |        | 20,500  | 15,360 | 20,500  | 15,360 | 20,500  | 20,500  |                                          |        | 20,500                                   | 15,360 | 20,500                                   |
| 9.0    |                    |        | 30,700  | 23,000 | 30,700  | 23,000 | 30,700  | 30,700  |                                          |        | 30,700                                   | 23,000 | 30,700                                   |
| 10.0   | 32,670             | 24,570 |         |        |         |        |         |         | 32,670                                   | 24,570 |                                          |        |                                          |
| 12.0   |                    |        |         |        | 41,000  | 30,700 |         | 41,000  |                                          |        |                                          |        |                                          |
| 15.0   |                    |        |         |        |         |        |         |         | 49,150                                   | 36,860 | 49,150                                   | 36,860 | 49,150                                   |

**TABLE 2  
ELECTRICAL SPECIFICATIONS**

| MODELS                              | RATED<br>VOLTS &<br>PHASES | SINGLE CIRCUIT                    |                                     |                                                           |                                     |                             | DUAL CIRCUIT                        |                      |                                                           |                      |                                     |                      |                             |                      |
|-------------------------------------|----------------------------|-----------------------------------|-------------------------------------|-----------------------------------------------------------|-------------------------------------|-----------------------------|-------------------------------------|----------------------|-----------------------------------------------------------|----------------------|-------------------------------------|----------------------|-----------------------------|----------------------|
|                                     |                            | NO.<br>FIELD<br>POWER<br>CIRCUITS | ③<br>MINIMUM<br>CIRCUIT<br>AMPACITY | ①<br>MAXIMUM<br>EXTERNAL<br>FUSE OR<br>CIRCUIT<br>BREAKER | ②<br>FIELD<br>POWER<br>WIRE<br>SIZE | ②<br>GROUND<br>WIRE<br>SIZE | ③<br>MINIMUM<br>CIRCUIT<br>AMPACITY |                      | ①<br>MAXIMUM<br>EXTERNAL<br>FUSE OR<br>CIRCUIT<br>BREAKER |                      | ②<br>FIELD<br>POWER<br>WIRE<br>SIZE |                      | ②<br>GROUND<br>WIRE<br>SIZE |                      |
|                                     |                            |                                   |                                     |                                                           |                                     |                             | CKT<br>A                            | CKT<br>B             | CKT<br>A                                                  | CKT<br>B             | CKT<br>A                            | CKT<br>B             | CKT<br>A                    | CKT<br>B             |
| QH243DA0Z<br>DA05<br>DA10           | 230/208-1                  | 1<br>1<br>1 OR 2                  | 22<br>47<br>72                      | 30<br>50<br>80                                            | 10<br>8<br>4                        | 10<br>10<br>8               | --<br>--<br>22                      | --<br>--<br>50       | --<br>--<br>30                                            | --<br>--<br>50       | --<br>--<br>10                      | --<br>--<br>8        | --<br>--<br>10              | --<br>--<br>10       |
| QH243DB0Z<br>DB06<br>DB09           | 230/208-3                  | 1<br>1<br>1                       | 17<br>35<br>44                      | 20<br>35<br>45                                            | 12<br>8<br>8                        | 12<br>10<br>10              | --<br>--<br>--                      | --<br>--<br>--       | --<br>--<br>--                                            | --<br>--<br>--       | --<br>--<br>--                      | --<br>--<br>--       | --<br>--<br>--              | --<br>--<br>--       |
| QH243DC0Z<br>DC06<br>DC09           | 460-3                      | 1<br>1<br>1                       | 8<br>17<br>22                       | 15<br>20<br>25                                            | 14<br>12<br>10                      | 14<br>12<br>10              | --<br>--<br>--                      | --<br>--<br>--       | --<br>--<br>--                                            | --<br>--<br>--       | --<br>--<br>--                      | --<br>--<br>--       | --<br>--<br>--              | --<br>--<br>--       |
| QH302DA0Z<br>DA05<br>DA10           | 230/208-1                  | 1<br>1<br>1 OR 2                  | 24<br>49<br>74                      | 35<br>50<br>80                                            | 8<br>8<br>4                         | 10<br>10<br>8               | --<br>--<br>24                      | --<br>--<br>50       | --<br>--<br>30                                            | --<br>--<br>50       | --<br>--<br>10                      | --<br>--<br>8        | --<br>--<br>10              | --<br>--<br>10       |
| QH302DB0Z<br>DB06<br>DB09<br>DB12   | 230/208-3                  | 1<br>1<br>1<br>1                  | 18<br>36<br>45<br>54                | 25<br>40<br>45<br>60                                      | 10<br>8<br>6<br>6                   | 10<br>10<br>10<br>10        | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                                      | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--        | --<br>--<br>--<br>-- |
| QH302DC0Z<br>DC06<br>DC09<br>DC12   | 460-3                      | 1<br>1<br>1<br>1                  | 9<br>18<br>23<br>27                 | 15<br>20<br>25<br>30                                      | 14<br>12<br>10<br>8                 | 14<br>12<br>10<br>10        | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                                      | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--        | --<br>--<br>--<br>-- |
| QH362DA0Z<br>DA05<br>DA10<br>④ DA15 | 230/208-3                  | 1<br>1<br>1 OR 2<br>1 OR 2        | 29<br>54<br>79<br>82                | 45<br>60<br>90<br>90                                      | 8<br>6<br>4<br>4                    | 10<br>10<br>8<br>8          | --<br>--<br>29<br>32                | --<br>--<br>50<br>50 | --<br>--<br>40<br>40                                      | --<br>--<br>50<br>50 | --<br>--<br>8<br>8                  | --<br>--<br>8<br>8   | --<br>--<br>10<br>10        | --<br>--<br>10<br>10 |
| QH362DB0Z<br>DB06<br>DB09<br>⑤ DB15 | 230/208-3                  | 1<br>1<br>1<br>1                  | 23<br>41<br>50<br>52                | 30<br>45<br>50<br>60                                      | 10<br>8<br>8<br>6                   | 10<br>10<br>10<br>10        | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                                      | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--        | --<br>--<br>--<br>-- |
| QH362DC0Z<br>DC06<br>DC09<br>⑤ DC15 | 460-3                      | 1<br>1<br>1<br>1                  | 11<br>20<br>24<br>26                | 15<br>20<br>30<br>30                                      | 14<br>10<br>10<br>10                | 14<br>10<br>10<br>10        | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                                      | --<br>--<br>--<br>-- | --<br>--<br>--<br>--                | --<br>--<br>--<br>-- | --<br>--<br>--<br>--        | --<br>--<br>--<br>-- |

① Maximum size of the time delay fuse or HACR type circuit breaker for protection of field wiring conductors.

② Based on 75° C copper wire. All wiring must conform to the National Electrical Code and all local codes.

③ These "Minimum Circuit Ampacity" values are to be used for sizing the field power conductors. Refer to the National Electric Code (latest revision), article 310 for power conductor sizing. CAUTION: When more than one field power conductor circuit is run through one conduit, the conductors must be derated. Pay special attention to Note 8 of Table 310 regarding Ampacity Adjustment Factors when more than three conductors are in a raceway.

④ Maximum KW that can operate with heat pump on is 10KW. Other 5KW energizes during emergency heating only.

⑤ Maximum KW that can operate with heat pump on is 9KW. Other 6KW energizes during emergency heating only.


**ELECTRICAL SPECIFICATIONS Continued on Page 4 TABLE 2A**

**TABLE 2A**  
**ELECTRICAL SPECIFICATIONS**  
(continued from Page 3)

| Model No. | Rated Volts & Phases | SINGLE CIRCUIT           |                               |                                               |                            |                       | DUAL CIRCUIT                  |       |                                               |       |                            |       |                       |       |
|-----------|----------------------|--------------------------|-------------------------------|-----------------------------------------------|----------------------------|-----------------------|-------------------------------|-------|-----------------------------------------------|-------|----------------------------|-------|-----------------------|-------|
|           |                      | No. Field Power Circuits | ③<br>Minimum Circuit Ampacity | ①<br>Maximum External Fuse or Circuit Breaker | ②<br>Field Power Wire Size | ②<br>Ground Wire Size | ③<br>Minimum Circuit Ampacity |       | ①<br>Maximum External Fuse or Circuit Breaker |       | ②<br>Field Power Wire Size |       | ②<br>Ground Wire Size |       |
|           |                      |                          |                               |                                               |                            |                       | CKT A                         | CKT B | CKT A                                         | CKT B | CKT A                      | CKT B | CKT A                 | CKT B |
| QH422DA0Z | 230/208-1            | 1                        | 33                            | 50                                            | 8                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DA05      |                      | 1                        | 58                            | 60                                            | 6                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DA10      |                      | 1 or 2                   | 83                            | 90                                            | 4                          | 8                     | 33                            | 50    | 40                                            | 50    | 8                          | 8     | 10                    | 10    |
| ④ DA15    |                      | 1 or 2                   | 83                            | 90                                            | 4                          | 8                     | 33                            | 50    | 40                                            | 50    | 8                          | 8     | 10                    | 10    |
| QH422DB0Z | 230/208-3            | 1                        | 24                            | 30                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DB06      |                      | 1                        | 43                            | 45                                            | 8                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DB09      |                      | 1                        | 52                            | 50                                            | 6                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| ⑤ DB15    |                      | 1                        | 52                            | 60                                            | 6                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| QH422DC0Z | 460-3                | 1                        | 16                            | 20                                            | 12                         | 12                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DC06      |                      | 1                        | 25                            | 25                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DC09      |                      | 1                        | 30                            | 30                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| ⑤ DC15    |                      | 1                        | 30                            | 30                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| QH428DA0Z | 230/208-1            | 1                        | 36                            | 60                                            | 8                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DA05      |                      | 1                        | 61                            | 70                                            | 6                          | 8                     | 36                            | 25    | 60                                            | 25    | 8                          | 10    | 10                    | 10    |
| DA10      |                      | 1 or 2                   | 86                            | 100                                           | 3                          | 8                     | 36                            | 50    | 60                                            | 50    | 8                          | 8     | 10                    | 10    |
| ④ DA15    |                      | 1 or 2                   | 86                            | 100                                           | 3                          | 8                     | 36                            | 50    | 60                                            | 50    | 8                          | 8     | 10                    | 10    |
| QH482DB0Z | 230/208-3            | 1                        | 26                            | 40                                            | 8                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DB05      |                      | 1                        | 44                            | 50                                            | 8                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DB10      |                      | 1                        | 53                            | 60                                            | 6                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| ⑤ DB15    |                      | 1                        | 53                            | 60                                            | 6                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| QH482DC0Z | 460-3                | 1                        | 14                            | 15                                            | 14                         | 14                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DC06      |                      | 1                        | 23                            | 25                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DC09      |                      | 1                        | 27                            | 30                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| ⑤ DC15    |                      | 1                        | 27                            | 30                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| QH602DA0Z | 230/208-1            | 1                        | 48                            | 60                                            | 8                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DA05      |                      | 1 or 2                   | 73                            | 90                                            | 4                          | 8                     | 48                            | 25    | 60                                            | 25    | 8                          | 10    | 10                    | 10    |
| DA10      |                      | 1 or 2                   | 98                            | 110                                           | 3                          | 6                     | 48                            | 50    | 60                                            | 50    | 8                          | 8     | 10                    | 10    |
| DA15      |                      | 1 or 2                   | 98                            | 110                                           | 3                          | 6                     | 48                            | 50    | 60                                            | 50    | 8                          | 8     | 10                    | 10    |
| QH602DB0Z | 230/208-3            | 1                        | 32                            | 45                                            | 8                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DB09      |                      | 1                        | 59                            | 70                                            | 6                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DB15      |                      | 1                        | 59                            | 70                                            | 6                          | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| QH602DC0Z | 460-3                | 1                        | 18                            | 25                                            | 10                         | 10                    | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DC09      |                      | 1                        | 31                            | 35                                            | 8                          | 8                     | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |
| DC15      |                      | 1                        | 31                            | 35                                            | 8                          | 8                     | —                             | —     | —                                             | —     | —                          | —     | —                     | —     |

- ① Maximum size of the time delay fuse or HACR type circuit breaker for protection of field wiring conductors.  
 ② Based on 75° C copper wire. All wiring must conform to the National Electrical Code and all local codes.  
 ③ These "Minimum Circuit Ampacity" values are to be used for sizing the field power conductors. Refer to the National Electric Code (latest revision), article 310 for power conductor sizing. CAUTION: When more than one field power conductor circuit is run through one conduit, the conductors must be derated. Pay special attention to Note 8 of Table 310 regarding Ampacity Adjustment Factors when more than three conductors are in a raceway.  
 ④ Maximum KW that can operate with heat pump on is 10KW. Other 5KW energizes during emergency heating only.  
 ⑤ Maximum KW that can operate with heat pump on is 9KW. Other 6KW energizes during emergency heating only.

**FIGURE 1**  
**UNIT DIMENSIONS**

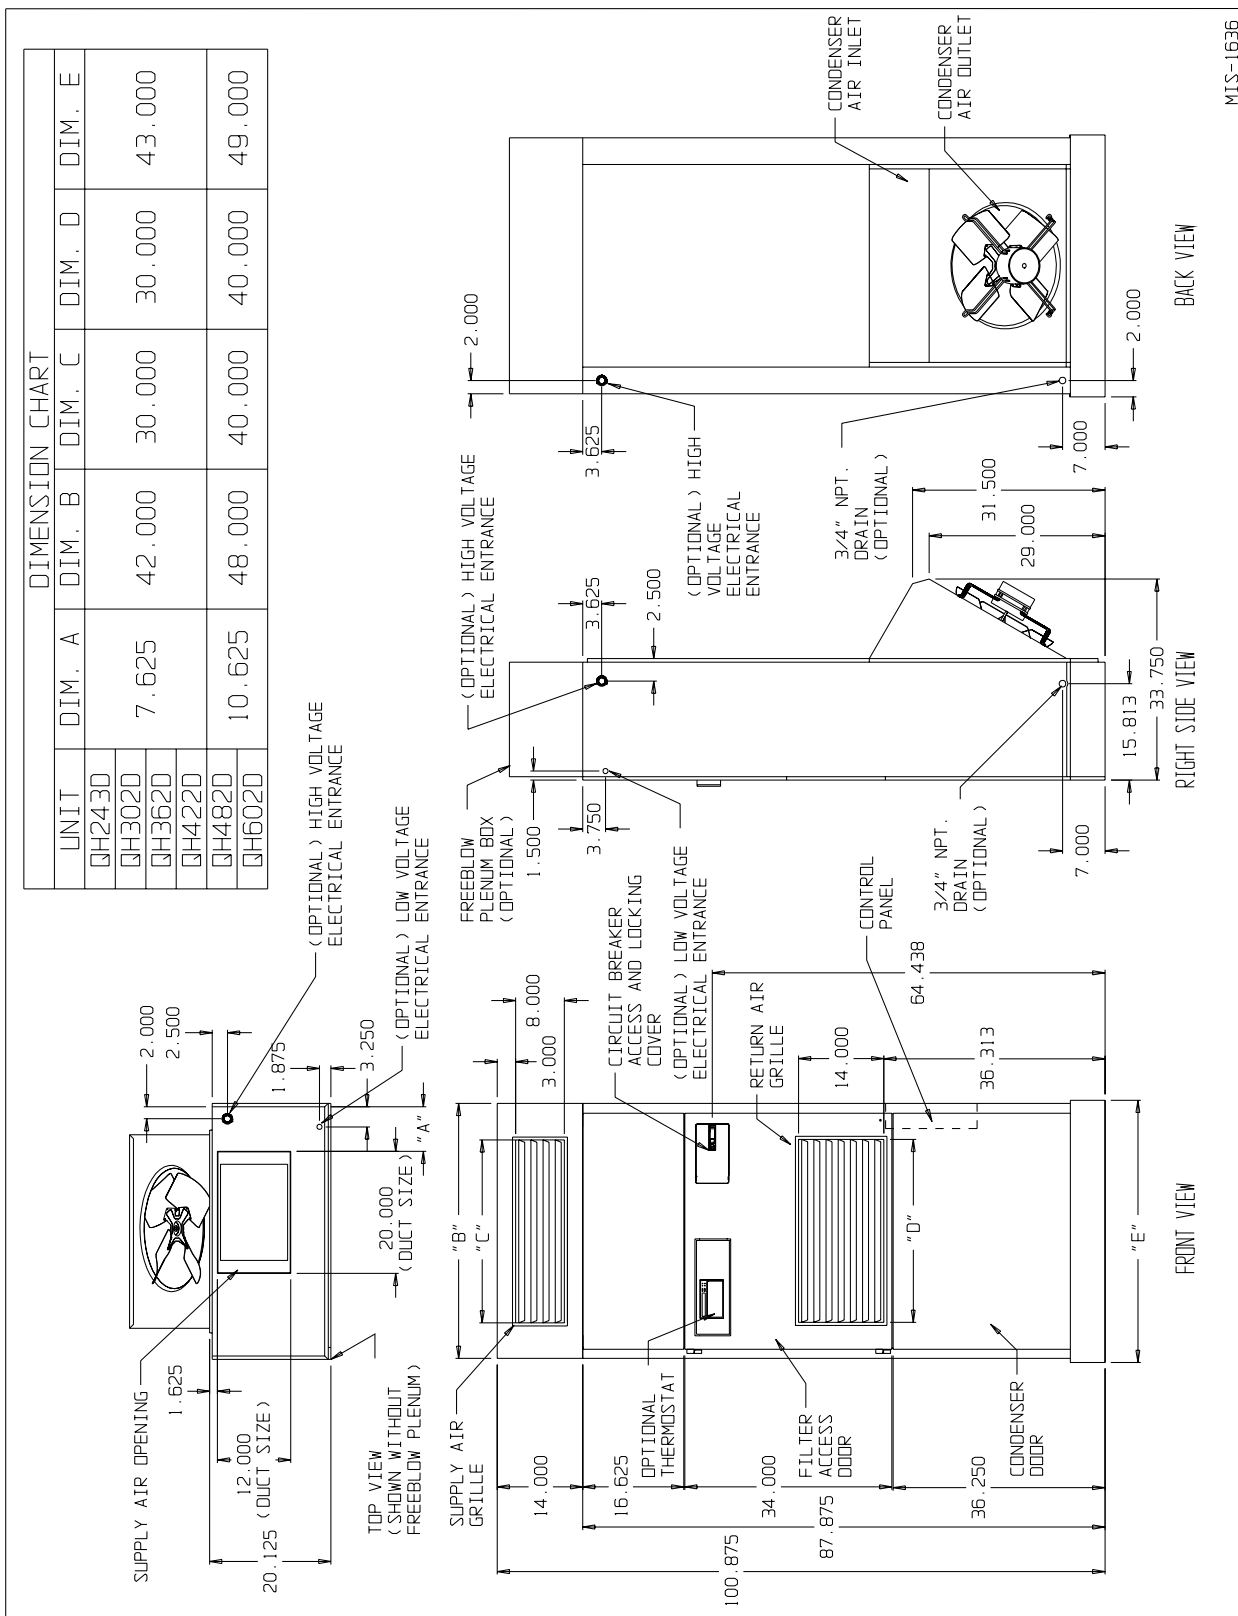

MIS-1636

## SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. The skid must remain attached to the unit until the unit is ready for installation. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

## UNIT REMOVAL FROM SKID


### **WARNING**

This unit is heavy and requires more than one person to handle and remove from the skid. Check unit wheels to ensure that wheels are locked before removing from skid. Extreme caution must be taken to prevent injury to personnel and damage to the unit.

It is recommended that the unit not be removed from the skid with a fork lift since the air seal under the unit could be damaged. See Figure 2.


The shipping brackets on each side of the unit must be removed and discarded. See Figure 3-A. The return air grille panel can be removed to provide a place to hold

**FIGURE 2**  
**AIR SEAL UNDER QT<sub>EC</sub> UNIT**

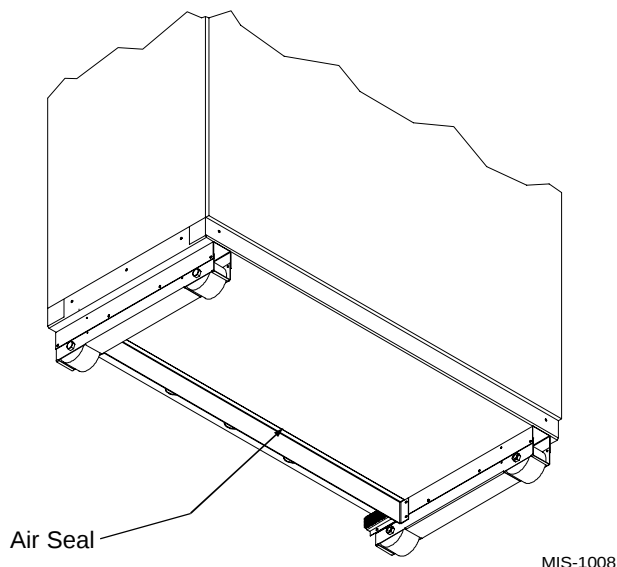

the unit. The unit can be slid forward on the skid until the front wheels hang over the edge of the skid. See Figure 3-B. The unit can be tipped forward and slid down the edge of the skid until the front wheels touch the ground. See Figure 3-C. The wheels will not roll. They are shipped from the factory locked so they will not roll. The back of the skid will have to be held down to keep it from tipping up. The skid can be slid out from under the unit. The unit can then be set upright.

**FIGURE 3**  
**REMOVAL OF UNIT FROM SKID**

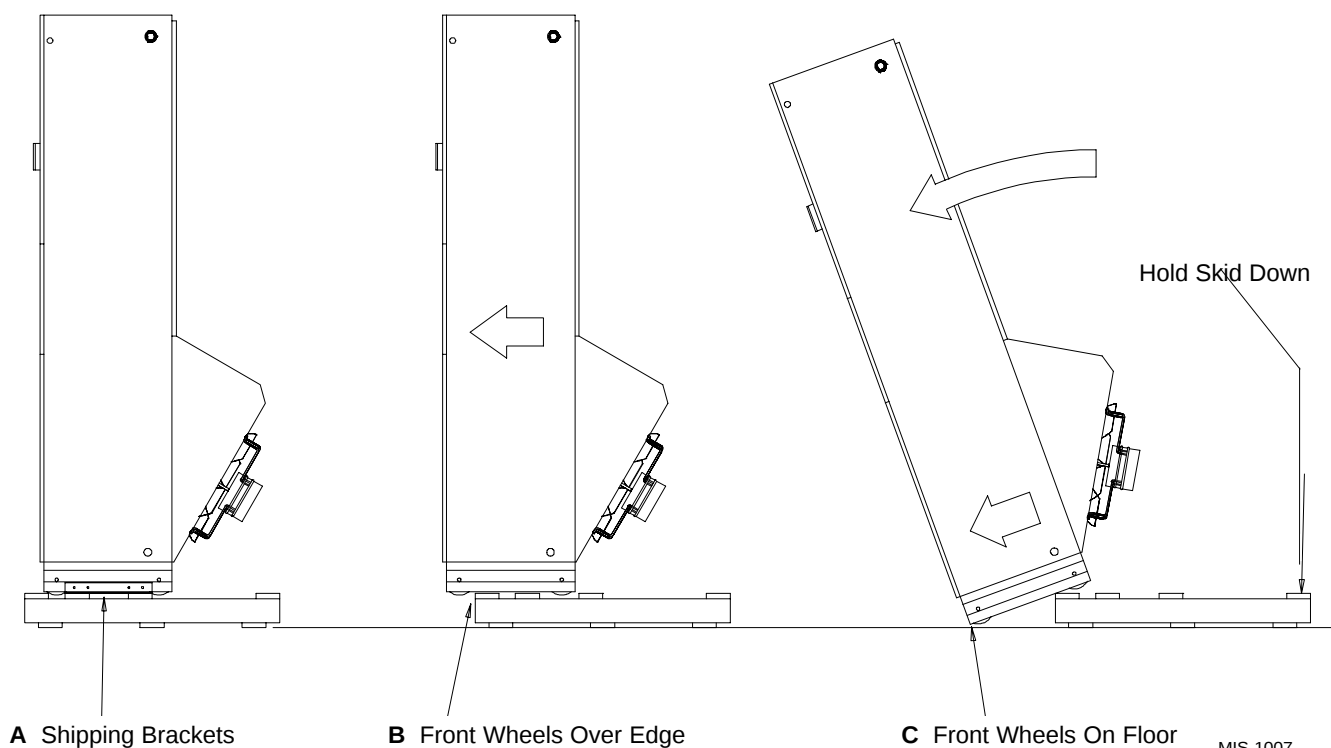

## HANDLING UNIT AFTER REMOVAL FROM SKID


### WARNING

Exercise extreme caution when pushing the unit on the rollers. Handle and push from the lower 1/3 of the unit. Insure that debris is not on the floor where the unit is to be moved on the rollers. Failure to do so could result in the unit tipping over and causing bodily injury and/or damage to the unit.

The unit will have to be turned sideways and removed from the skid to fit through a 36" doorway. If the door height allows, the unit can be slid sideways through the door.

If the unit can not be slid through the door, then the unit will have to be put on a cart and tipped down to roll through the door. It is recommended that an appliance cart be used with a strap to hold the unit on the cart.

**FIGURE 4  
UNIT ON APPLIANCE CART**

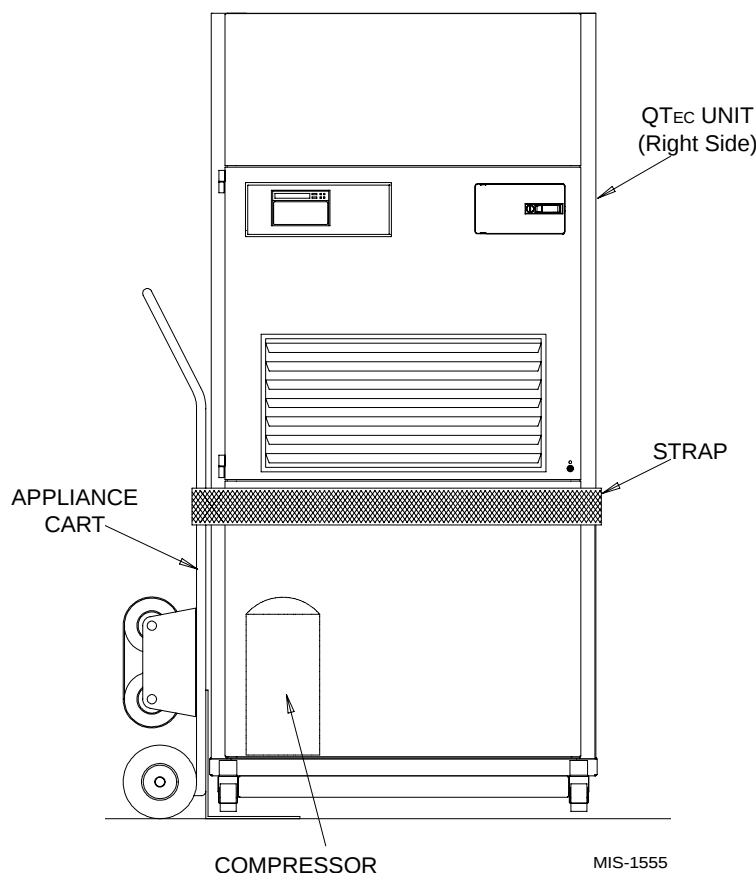

The wheels of the unit **must be locked**. If the wheels were allowed to roll, the unit could roll off the cart. **The unit should always be carted from the left side.** This is the side where the compressor is located. See Figure 4. The blade of the appliance cart should be slid under the wheels of the unit. The strap of the appliance cart should be placed around the unit and strapped tightly. Help will be required to tip the unit back onto the cart. The unit can be leaned far enough back to be rolled through the door. Be careful when setting the unit back up to keep from damaging the unit.

## GENERAL

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

The unit is designed for use with or without duct work. For use without duct work, Plenum Box QPB42 is recommended.

These instructions explain the recommended method to install the air cooled self-contained unit and the electrical wiring connections to the unit.

These instructions and any instructions packaged with any separate equipment required to make up the entire air conditioning system should be carefully read before beginning the installation. Note particularly "Start Procedure" and any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not supersede any national and/or local codes in any way. Authorities having jurisdiction should be consulted before the installation is made. See Page 1 for information on codes and standards.


Size of unit for a proposed installation should be based on heat loss calculation made according to methods of Air Conditioning Contractors of America (ACCA). The air duct should be installed in accordance with the Standards of the National Fire Protection Systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

## MINIMUM INSTALLATION HEIGHT


The minimum installation height of the unit with a Free Blow Plenum is 8 ft. 6 in. This provides enough clearance for the plenum to be removed. See Figure 5.

The minimum installation height for ducted applications is 8 ft. 4-1/2 in. This provides enough clearance to install the duct work. See Figure 6.

**FIGURE 5  
INSTALLATION WITH FREE BLOW PLENUM**

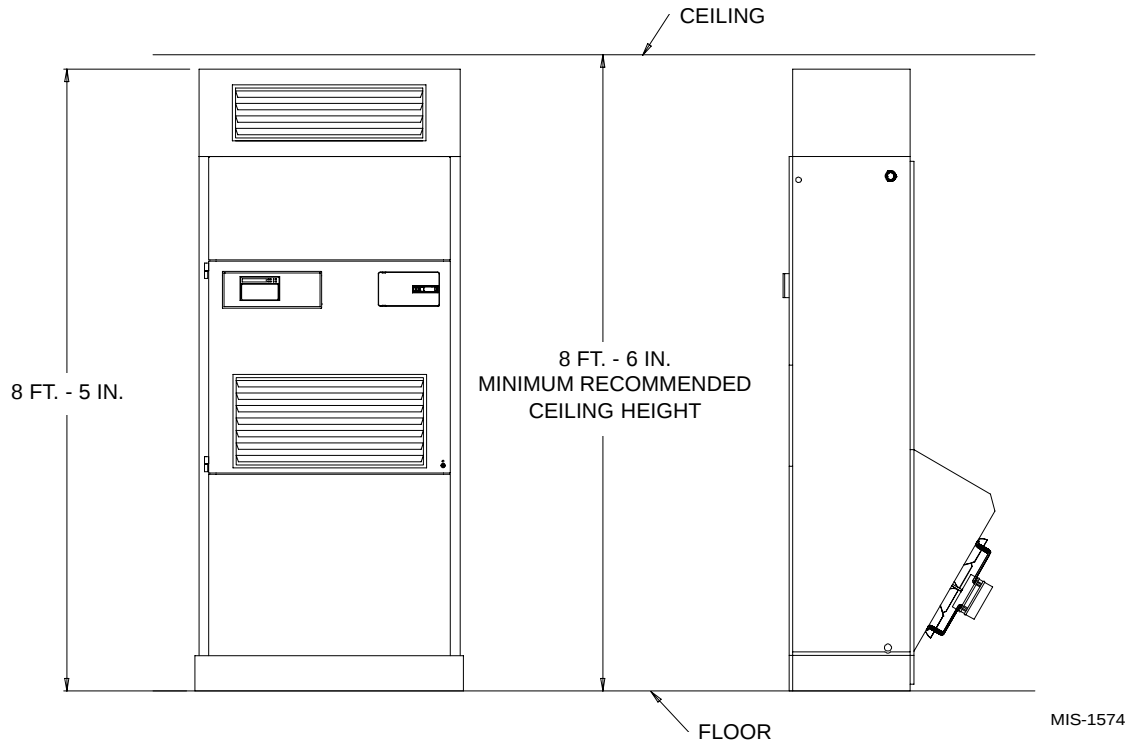


**FIGURE 6  
DUCTED APPLICATION**

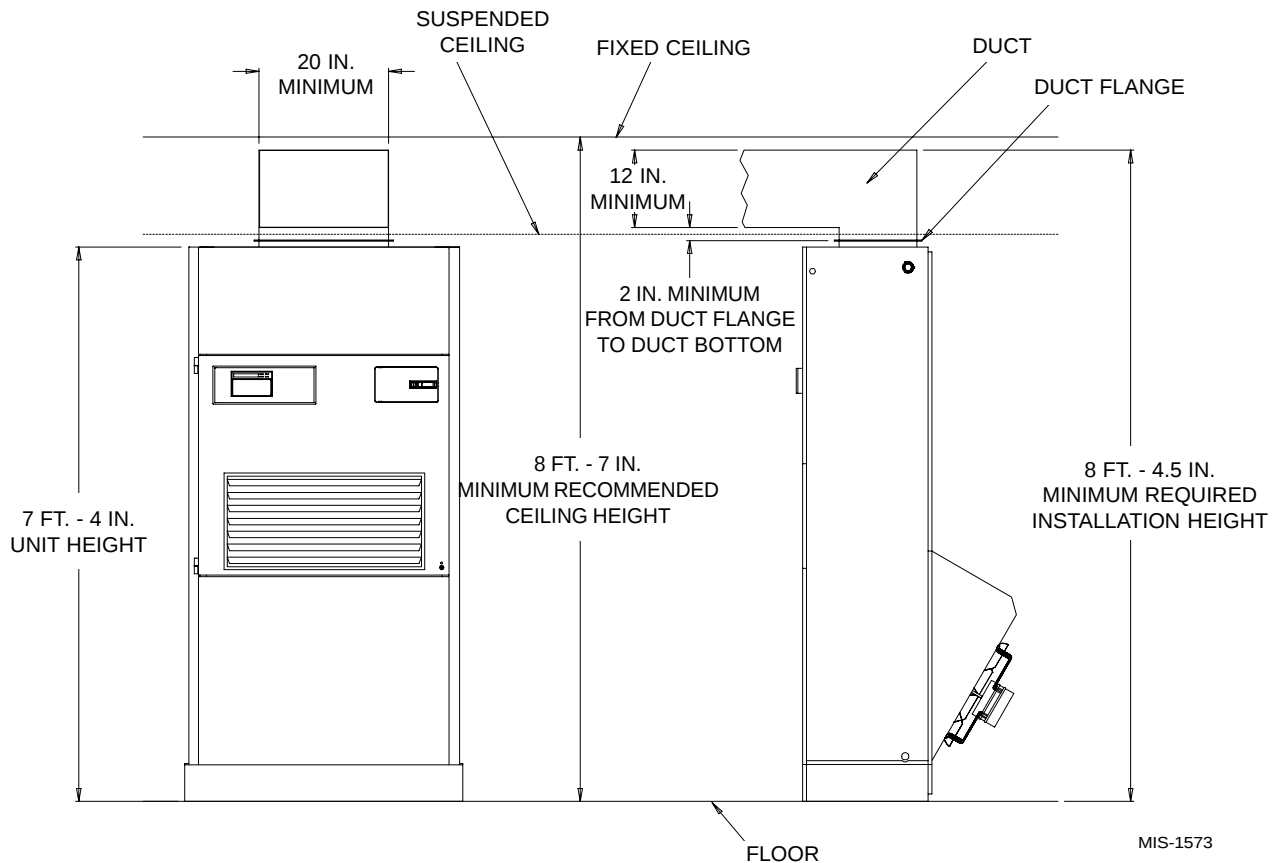

## DUCT WORK

Any heat pump is more critical of proper operating charge and an adequate duct system than a straight air conditioning unit. All duct work must be properly sized for the design air flow requirement of the equipment. Air Conditioning Contractors of America (ACCA) is an excellent guide to proper sizing. All duct work or portions thereof not in the conditioned space should be properly insulated in order to both conserve energy and prevent condensation or moisture damage. When duct runs through unheated spaces, it should be insulated with a minimum of one inch of insulation. Use insulation with a vapor barrier on the outside of the insulation. Flexible joints should be used to connect the duct work to the equipment in order to keep the noise transmission to a minimum.

The QTEC series heat pump has provision to attach a supply air duct to the top of the unit. Duct connection size is 12 inches x 20 inches. The duct work is field supplied and must be attached in a manner to allow for ease of removal when it becomes necessary to slide the unit out from the wall for service. See Figure 7 for suggested attachment method.

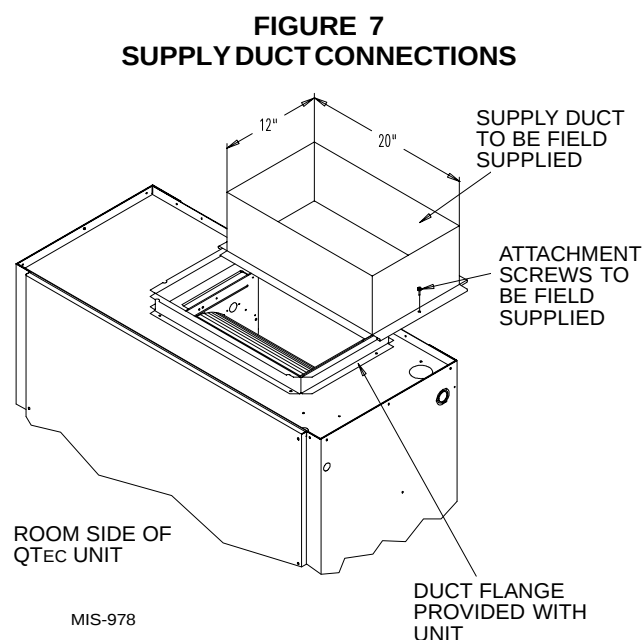

**NOTE:** Unit cabinet, supply air duct and free blow plenum are approved for "0" clearance to combustible material.

The QTEC series heat pumps are designed for use with free return (non-ducted) and either free blow with the use of QPB Plenum Box or a duct supply air system. For hot water coil options a QPBHW\*\*-F for free blow or QPBHW\*\*-D for ducted airflow is used.

The QPB and QPBHW Plenum Box mounts on top of the unit and has both vertically and horizontally adjustable louvers on the front discharge grille.


When used with a ducted supply, a QCX Cabinet Extension can be used to conceal the duct work above the unit to the ceiling. This extends 20" above the unit for a total height above the floor of 10'-7/8". The unit is equipped with a variable speed indoor blower motor which increases in speed with an increase in duct static pressure. The unit will therefore deliver proper rated air flow up to the maximum ESP shown in Table 8. However, for quiet operation of the air system, the duct static should be kept as low as practical, within the guidelines of good duct design.

## FILTERS

Two 1 inch throw away filters [(1) 16x16 and (1) 16x20] are supplied with each unit. The filters slide into filter brackets. Refer to Figure 8.

The filters are serviced from the inside of the building by opening the hinged door. This door is attached by 1/4 turn fasteners and one locking latch.

The internal filter brackets are adjustable to accommodate 2 inch filters. The tabs for the 1 inch filters must be bent down to allow the 2 inch filters to slide in place.

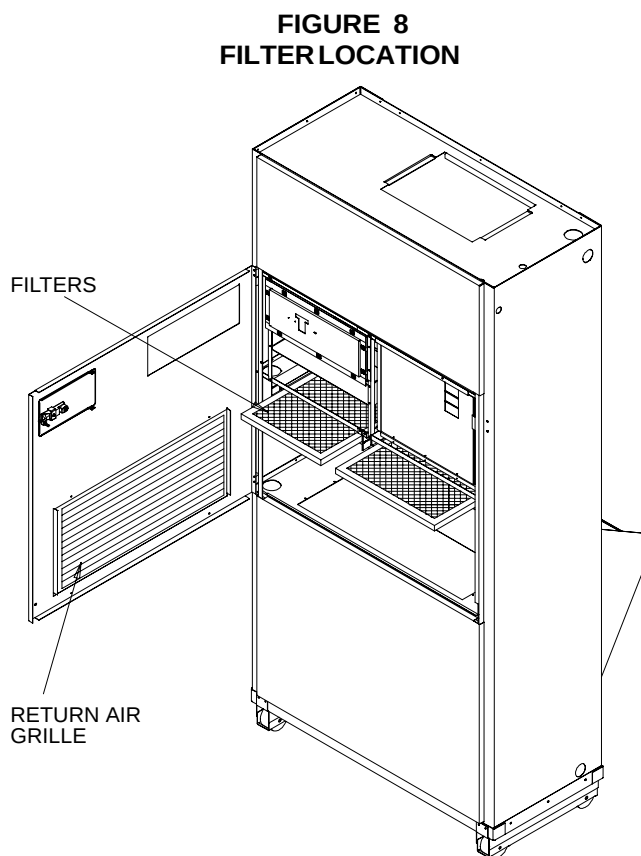

## FRESH AIR INTAKE

This unit is equipped with a fresh air damper assembly. The damper blade is locked in the closed position when the unit is shipped from the Factory. To allow the damper to operate remove the two plastic locking pins, one on each end of the blade. This will allow for maximum fresh air flow. The Damper blade will now open when the indoor blower is operating. If less than maximum fresh air flow is required, reinsert the plastic pins to limit damper blade opening to desired level. Two extra pins are provided (taped to the inside of the assembly) which may be used to hold the blade in some position other than minimum or maximum position. This fresh air assembly is located in the rear of the unit and to gain access to make these adjustments remove the air filter service door.

All capacity, efficiency and cost of operation information as required for Department of Energy "Energyguide" Fact Sheets are based upon the fresh air blank-off plate in place and is recommended for maximum energy efficiency.

The blank-off plate is available upon request from the factory and is installed in place of the fresh air damper shipped with each unit.

For details on energy recovery ventilation see separate section.

## CONDENSATE DRAIN


There are two drain connections on the unit. The rear drain is the primary drain, and is located on the right lower rear panel of the unit. The optional side drain is located on the bottom right side of the unit. The side drain is shipped with a plug installed.

The **side drain** requires a water trap for proper drainage. See Figure 9. The drain can be routed through the floor or through the wall. ***If the drain is to be routed through an unconditioned space, it must be protected from freezing.*** The drain line must be able to be removed from the unit if it is necessary to remove the unit from the wall.

The **rear drain** can be used with wall thickness of up to 10 inches where a water trap can be installed between the unit and the interior wall. See Figure 10. The trap cannot extend beyond the edge of the unit or it will interfere with the wall mounting bracket. When the rear drain is used, the plug must be removed and installed in the side drain. The drain can be routed through the floor or through the wall. If the drain is routed through the wall, the drain line must be positioned such that it will not interfere with the sleeve flange or the grille. See Figure 11. ***If the drain is to be routed through an unconditioned space, it must be protected from freezing.***


Optional rear drain kits, both standard and heated versions, are available to facilitate easy installation, and also removability of heat pump for service.

**FIGURE 9  
SIDE DRAIN (SIDE VIEW)**

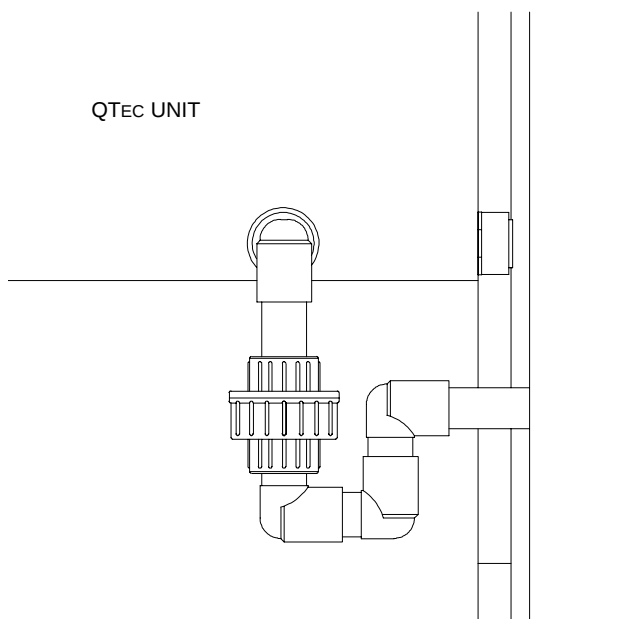


MIS-976

**FIGURE 10  
OPTIONAL REAR DRAIN**

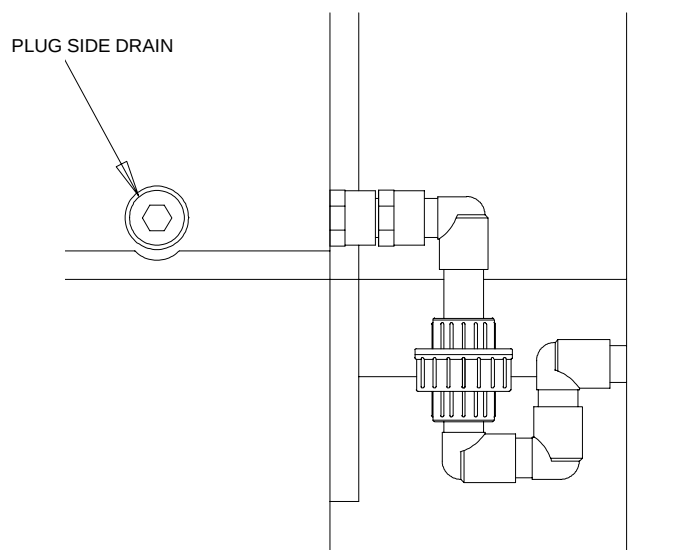

MIS-975

**FIGURE 11  
REAR DRAIN (TOP VIEW)**

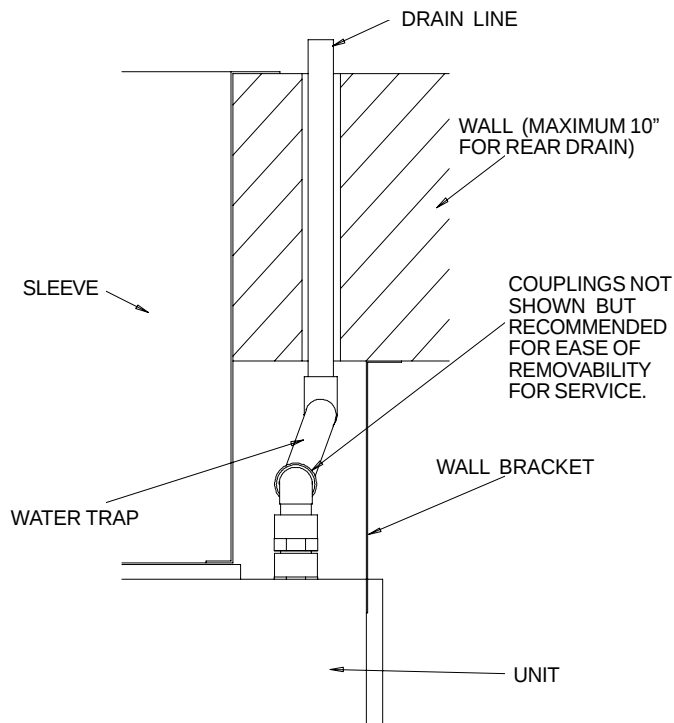


MIS-977

## SERVICE LIGHT

The unit is equipped with a service light which signals the user that service is required. The light is located in the upper control panel and is visible only when the hinged service/filter access door is open.

The **Service Unit** light indicates that the unit has been shut off by a high or low pressure device. This indicates that the unit needs to be serviced.

**FIGURE 12  
UNIT MOUNTING**

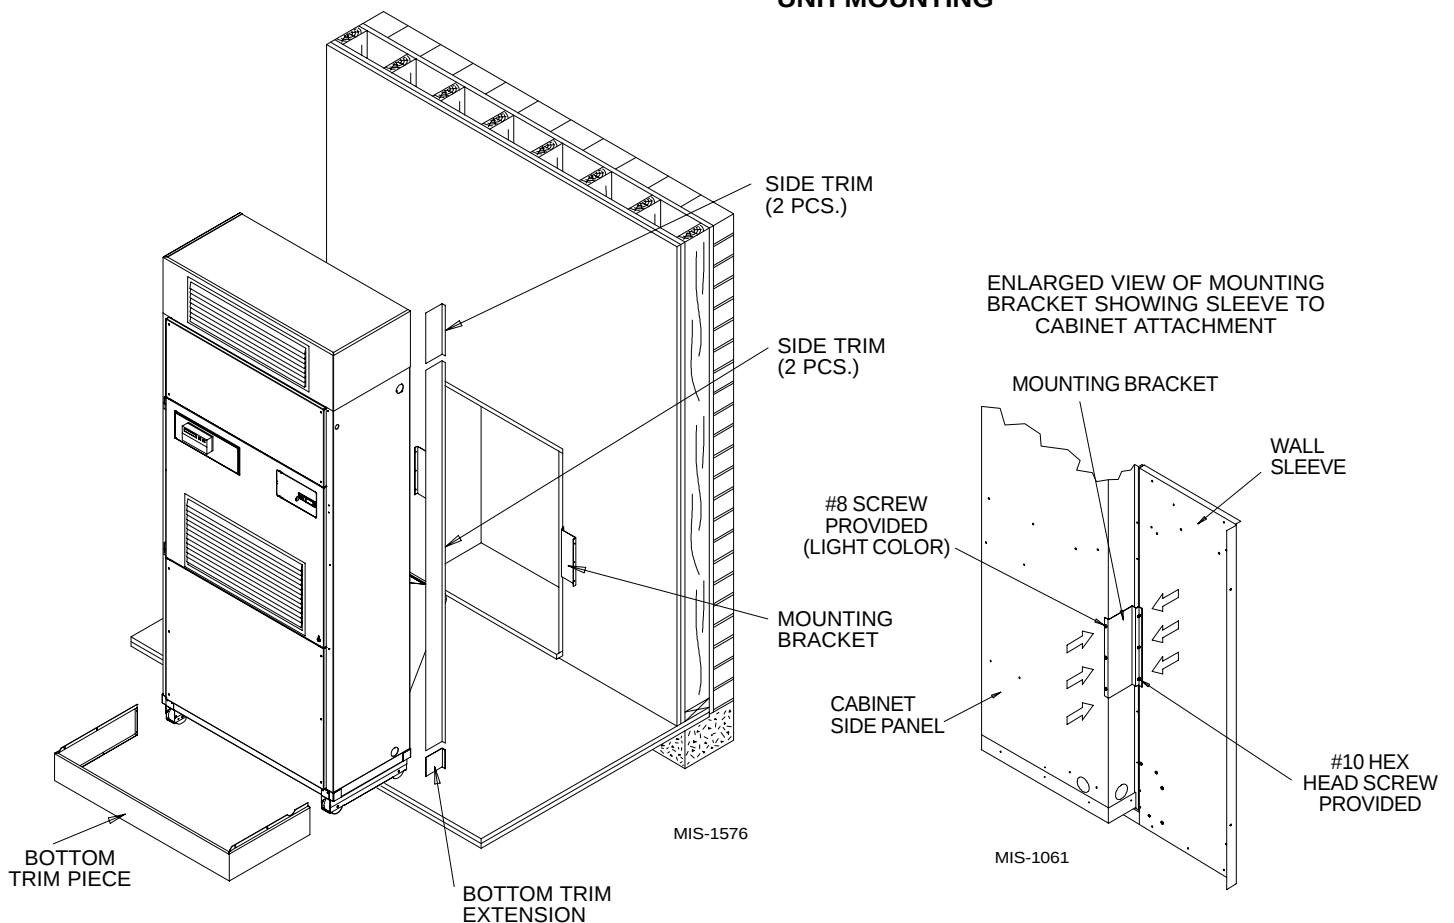

MIS-1576

MIS-1061

# INSTALLATION INSTRUCTIONS

## MOUNTING THE UNIT

When installing a QTEC unit near an interior wall on the left side, a minimum of 8 inches is required; 12 inches is preferred.

When installing a QTEC unit near an interior wall on the right side, a minimum of 18 inches is required as additional space is required to connect the side drain. If the rear condensate drain kit QCDS48 is used the minimum can be reduced to 8 inches.

This clearance is required to allow for the attachment of the unit to the sleeve and side trim pieces to the wall.

This unit is to be secured to the wall sleeve with mounting brackets provided. The unit itself, the supply duct and the free blow plenum are suitable of "0" clearance to combustible material.

Following are the steps for mounting the QTEC, for reference see Figure 12 (page 11).


1. Attach mounting brackets to the wall sleeve with screws provided.
2. Position the unit in front of the sleeve with the condenser section toward the sleeve.
3. Remove the locking screws from the wheels. Refer to Figure 13.
4. Roll the unit into the sleeve. Make sure to check both sides of the unit as it is being rolled to keep it centered in the sleeve. Also check the

alignment to the mounting brackets. This unit must be level from side to side. If adjustments are necessary, shim up under the rollers with sheets of steel or any substance that is not affected by moisture.

5. Make sure the gasket on the rear of the unit is touching the sleeve across the top and down both sides. This is a rain water seal.
6. Secure the mounting brackets to the unit with screws provided, #10 hex head sheet metal screws.
7. Bottom trim extensions are provided for use when wall is less than 14 inches but greater than 10.5 inches. Secure to wall with screws (not provided).
8. Attach the bottom trim piece to the unit with the screws provided (dark colored).
9. Position side trim pieces to wall and attach with field supplied screws. There are two long pieces and two short pieces supplied. The long pieces are to enclose the gap behind the unit. The short pieces are to fill the gap behind the cabinet extension or the free blow plenum box. The may be cut to suit your ceiling height or overlap the unit side trim. There is sufficient length to trip up to a 10'2" ceiling.

**NOTE:** If the exterior wall thickness is between 5 inches to 10.5 inches, a side trim extension piece kit, model QSTX42, is available.

**FIGURE 13  
REMOVING LOCKING SCREWS FROM WHEELS**

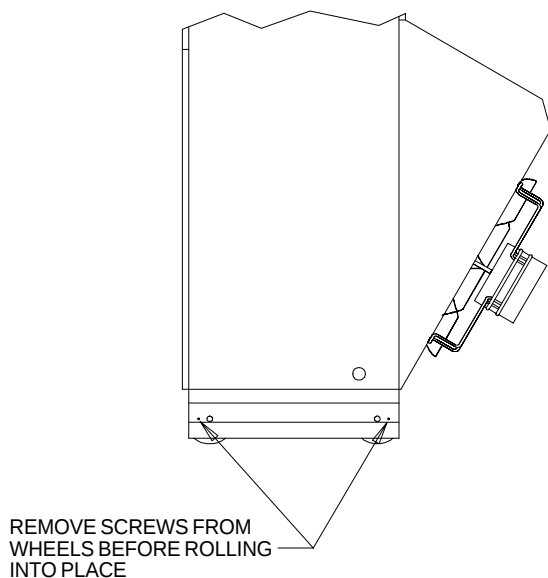

MIS-1018


## WIRING – MAIN POWER

Refer to the unit rating plate and/or Table 2 for wire sizing information and maximum fuse or “HACR Type” circuit breaker size. Each unit is marked with a “Minimum Circuit Ampacity”. This means that the field wiring used must be sized to carry that amount of current. Depending on the installed KW of electric heat, there may be two field power circuits required. If this is the case, the unit serial plate will so indicate. All models are suitable only for connection with copper wire. Each unit and/or wiring diagram will be marked “Use Copper Conductors Only”. These instructions **MUST BE** adhered to. Refer to the National Electrical Code (NEC) for complete current carrying capacity data on the various insulation grades of wiring material. All wiring must conform to NEC and all local codes.

The electrical data lists fuse and wire sizes (75° C copper) for all models, including the most commonly used heater sizes. Also shown are the number of field power circuits required for the various models with heaters.

The unit rating plate lists a “Maximum Time Delay Relay Fuse” or “HACR Type” circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection, and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor motor.

**FIGURE 14  
COMPONENT LOCATION**

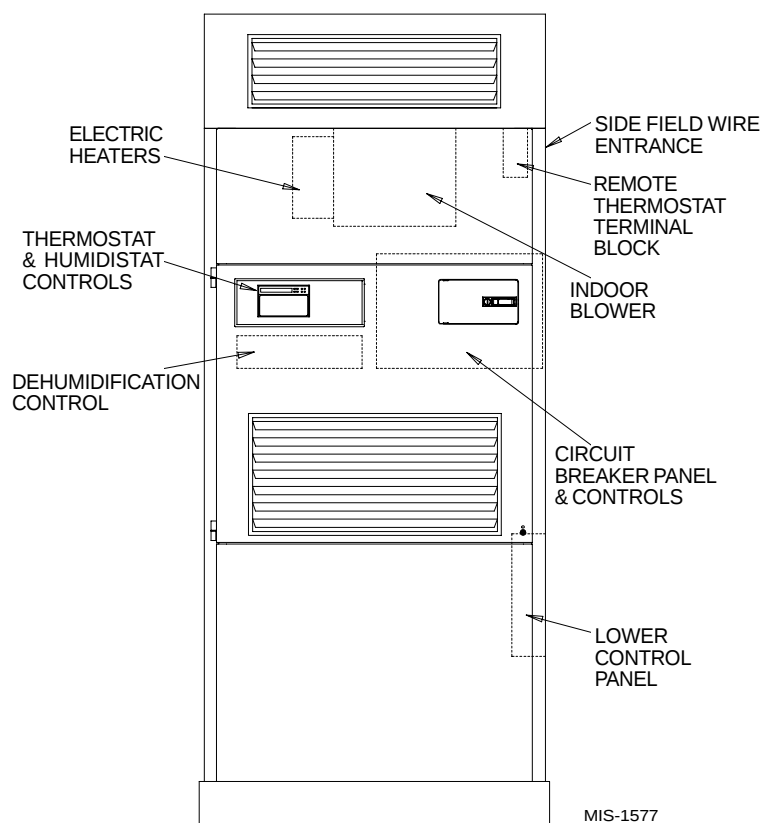

The disconnect access door on this unit may be locked to prevent unauthorized access to the disconnect.

See Start Up section for information on three phase scroll compressor start-ups.

The field wiring connections are located behind the top and hinged panel in the circuit breaker panel. See Figure 14.

## WIRING – LOW VOLTAGE WIRING

### 230/208V, 1 PHASE AND 3 PHASE EQUIPMENT DUAL PRIMARY VOLTAGE TRANSFORMERS.

All Equipment leaves the factory wired on 240V tap. For 208V operation, reconnect from 240V to 208V tap. The acceptable operating voltage range for the 240 and 208V taps are as noted in Table 3.

**TABLE 3  
OPERATING VOLTAGE RANGE**

| TAP   | RANGE     |
|-------|-----------|
| 240 V | 253 - 216 |
| 208 V | 220 - 187 |

NOTE: The voltage should be measured at the field power connection point in the unit and while the unit is operating at full load (maximum amperage operating condition).

The standard Climate Control **Option X** is a remote thermostat connection terminal block. See Figure 16 for wiring diagram. Compatible thermostats are listed in Table 4.

The Climate Control **Option E** is an electronic, programmable thermostat and a humidistat. The sub base of the thermostat and the humidistat are factory wired to the front panel of the unit. See Figure 16A for wiring diagram. Compatible for use with Energy Recovery Ventilator or Ventilator.

The Climate Control **Option F** is an electronic, non-programmable thermostat, timer and a humidistat. The sub base of the thermostat and the timer are factory wired to the front panel of the unit. See Figure 16B for wiring diagram. Compatible for use with Energy Recovery Ventilator or Ventilator.

The Climate Control **Option G** is an electronic, non-programmable thermostat and humidistat. The subbase of the thermostat is factory wired to the front panel of the unit. This option is compatible for use with the optional CS2000 Energy Control Monitor and a terminal block is provided for connection to the CS2000. See Figure 16C for wiring diagram. Compatible for use with Energy Recovery Ventilator or Ventilator.

**NOTE:** On options X and G the CS2000 (or other field provided means to control ventilation) must be used if any of the mechanical (motorized) ventilation options are installed.

## LOW VOLTAGE CONNECTIONS

These units use a grounded 24 volt AC low voltage circuit.

The “R” terminal is the *hot* terminal and the “C” terminal is *grounded*.

“G” terminal or pin 6 of P4 is the *fan input*.

“Y” terminal or pin 7 of P4 is the *compressor input*.

“B” terminal or pin 8 of P4 is the *reversing valve input*. The reversing valve must be energized for heating mode.

“R” terminal or pin 10 of P4 is *24 VAC hot*.

“C” terminal or pin 11 of P4 is *24 VAC grounded*.

“L” terminal or pin 12 of P4 is *compressor lockout output*. This terminal is activated on a high or low pressure trip by the electronic heat pump control. This is a 24 VAC output.

“W2” terminal or pin 9 of P4 is *second stage heat* (if equipped). If the unit is equipped with an optional hot water coil plenum box the water valve will be connected to this terminal.

“O1” terminal of pin 5 of P4 is the *ventilation input*. This terminal energizes any factory installed ventilation option.

“E” terminal or pin 3 of P4 is the *emergency heat input*. This terminal energizes the emergency heat relay.

*NOTE: For total and proper control using DDC, a total of 7 controlled outputs are required (6 if no ventilation system is installed). For proper system operation under Emergency Heat conditions where the compressor needs to be deactivated, the B-W2-E outputs need to be energized. Removing the Y (compressor) signal alone turns the compressor off, but does not activate the additional circuitry embedded in the heat pump for proper and complete operation.*

“5” terminal or pin 2 of P4 is the *24 dehumidification circuit*.

“4” terminal of pin 4 of P4 is the *dehumidification circuit*. A contact **must** connect terminals 4 and 5.

“6” terminal of pin 1 of P4 is *VAC grounded to the humidistat*, if needed.

### LOW VOLTAGE CONNECTIONS FOR DDC CONTROL


|                                 |                   |
|---------------------------------|-------------------|
| Fan Only                        | Energize G        |
| Cooling Mode                    | Energize Y, G     |
| Heat Pump Heating               | Energize Y, G, B  |
| 2nd Stage Heating (if employed) | Energize G, W2    |
| Ventilation                     | Energize G, O1    |
| Dehumidification                | Connect 4 and 5   |
| Emergency Heat                  | Energize B, W2, E |

**TABLE 4**  
**WALL THERMOSTATS AND SUBBASE COMBINATIONS**


| Thermostat               | Subbase                | Predominant Features                                       |
|--------------------------|------------------------|------------------------------------------------------------|
| 8403-018<br>(T874N1024)  | 8404-010<br>(Q6741261) | Automatic Heat / Cool (2)<br>Changeover Position           |
| 8403-038<br>(H600A)      | N/A                    | Humidistat                                                 |
| 8403-042<br>(T8511G1070) | N/A                    | Manual / Auto / Heat / Cool<br>Non-Programmable Electronic |
| 8403-049<br>(1F93-380)   | N/A                    | Programmable Heat / Cool<br>Electronic                     |

**FIGURE 15**

**THERMOSTAT PLUG TERMINALS  
P2 AND P4  
(VIEWED FROM PIN END)**

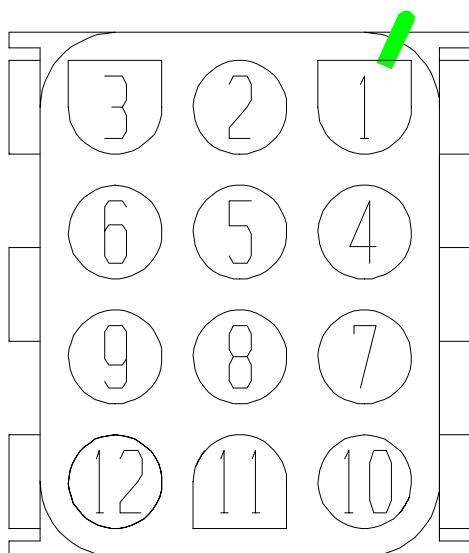


**BLOWER MOTOR  
LOW VOLTAGE PLUG  
(VIEWED FROM PIN END)**

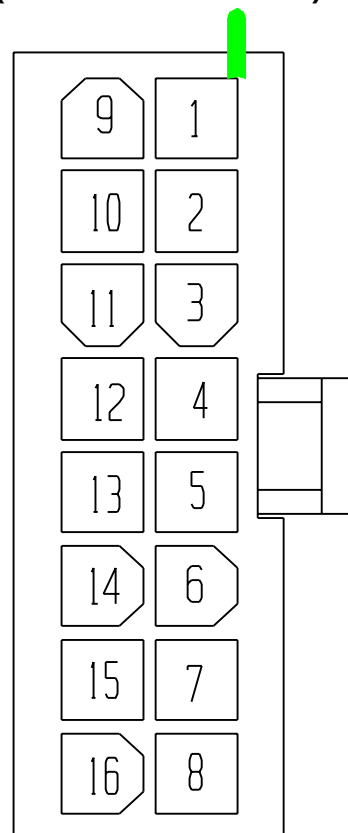

MIS-1285


**FIGURE 16**  
**THERMOSTAT WIRING DIAGRAM**  
**"X" THERMOSTAT OPTION**

**DEHUMIDIFICATION MODULE**

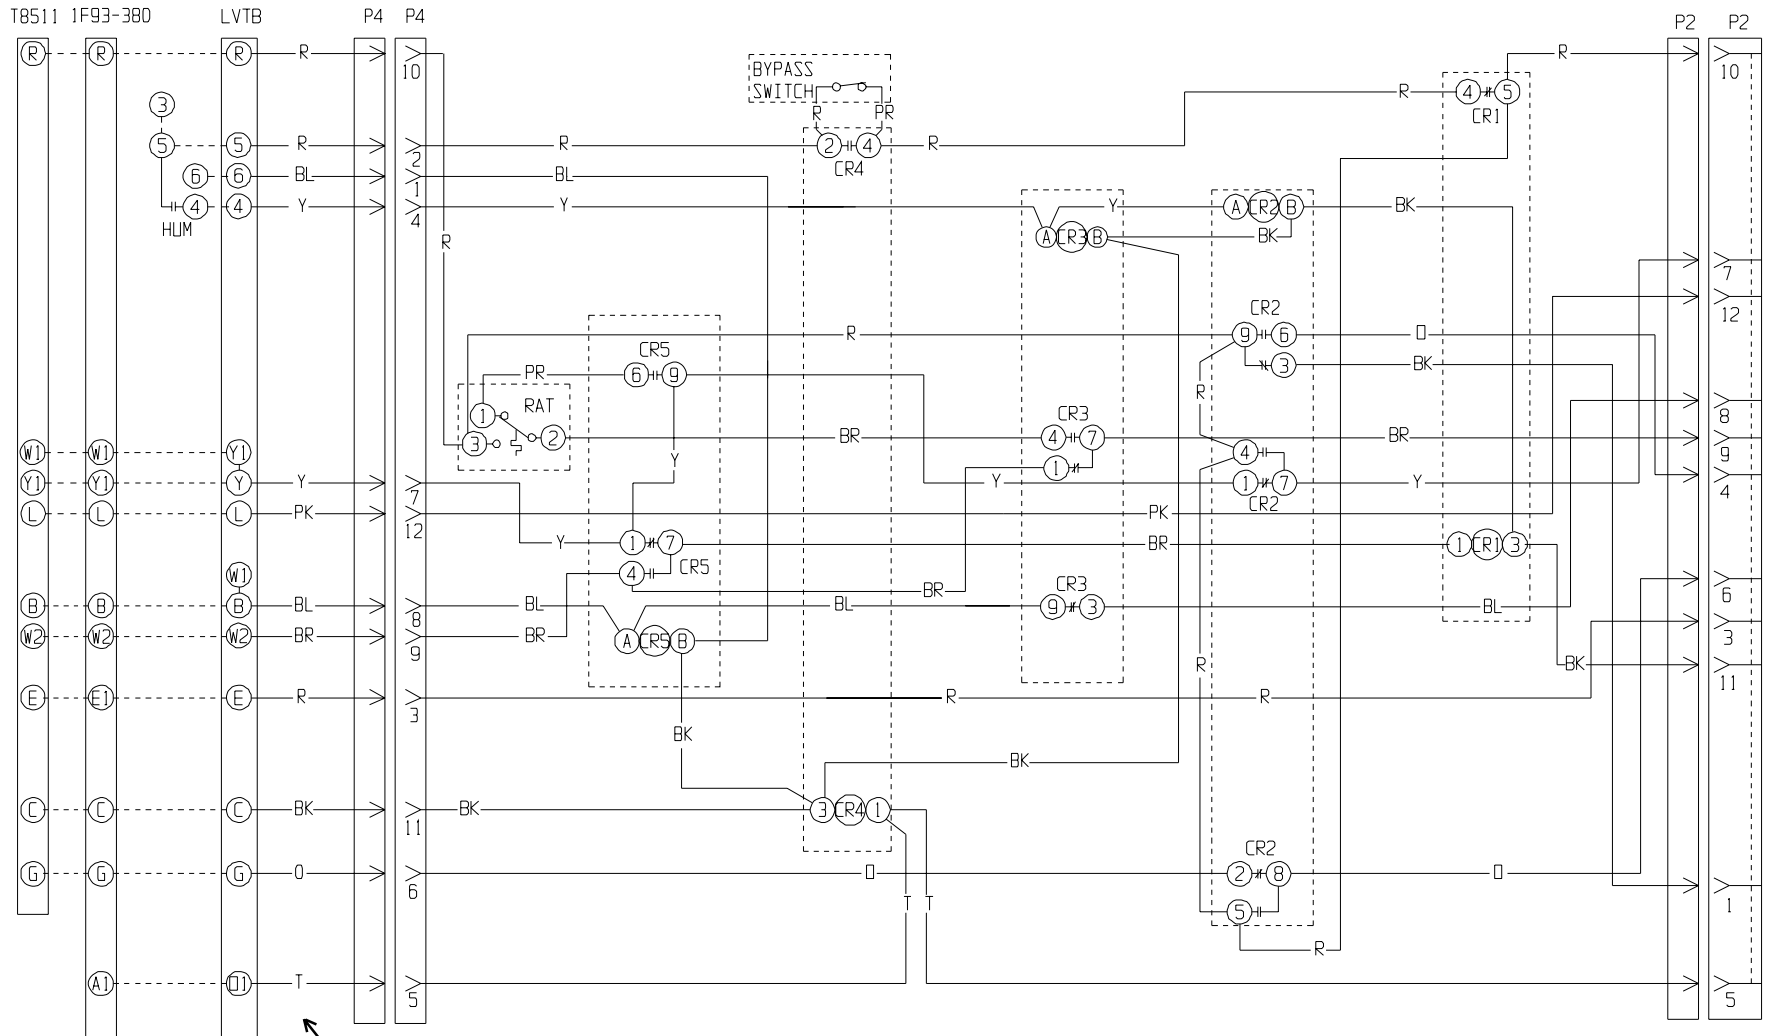

NOTE: See next page for additional details on LVTB connection identification.

**FIGURE 16-1  
DETAILS OF LVTB CONNECTION**

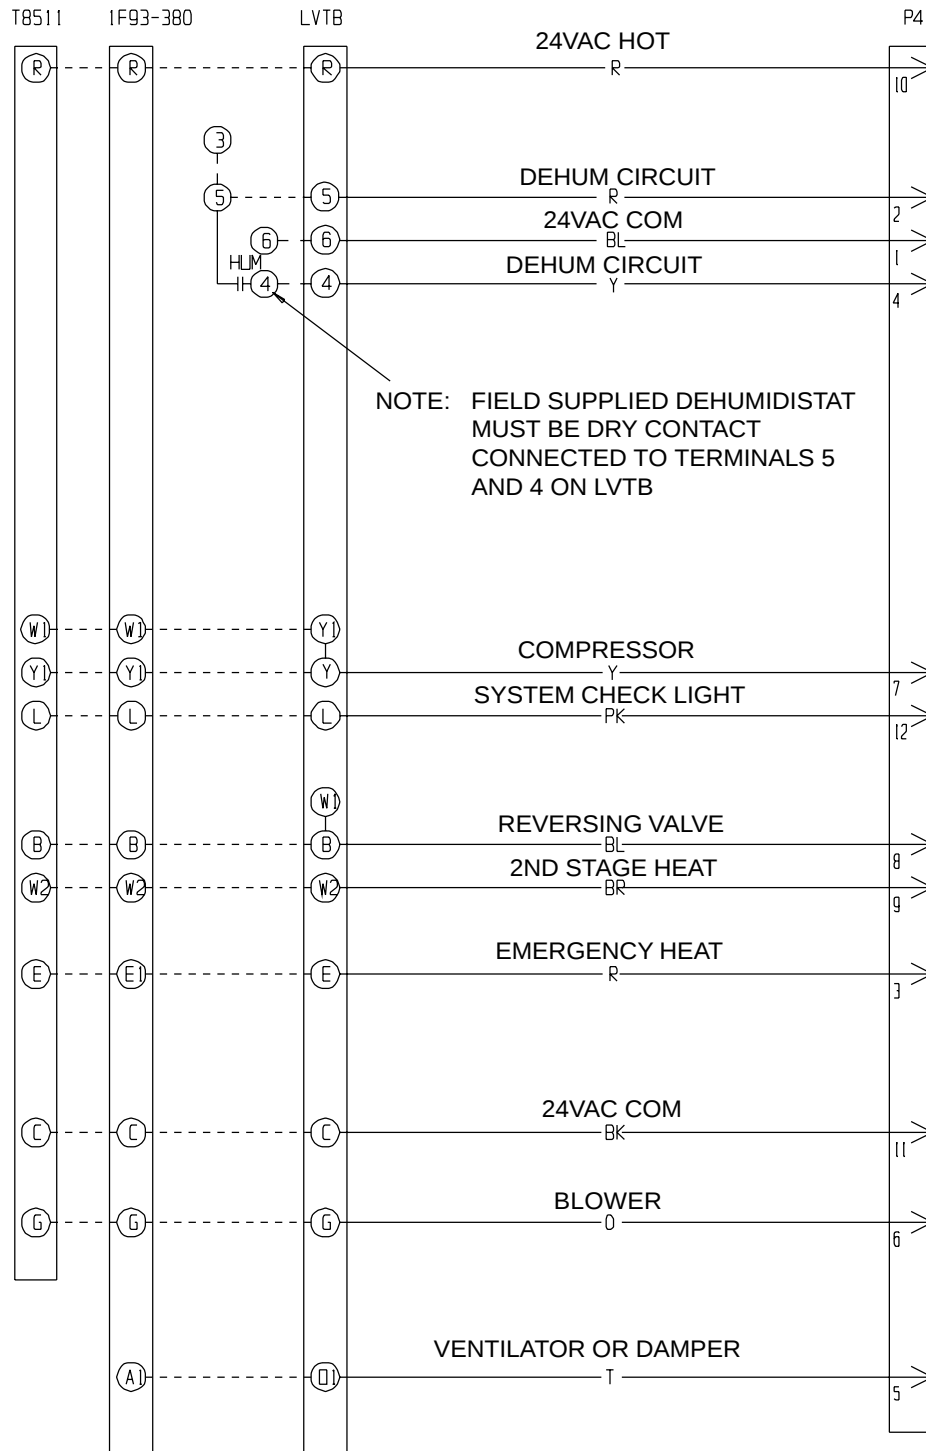


MIS-1638


*NOTE: On options X and G the CS2000 (or other field provided means to control ventilation) must be used if any of the mechanical (motorized) ventilation options are installed.*

**FIGURE 16A**  
**REMOTE THERMOSTAT WIRING DIAGRAM**  
**“E” THERMOSTAT OPTION**


**DEHUMIDIFICATION MODULE**

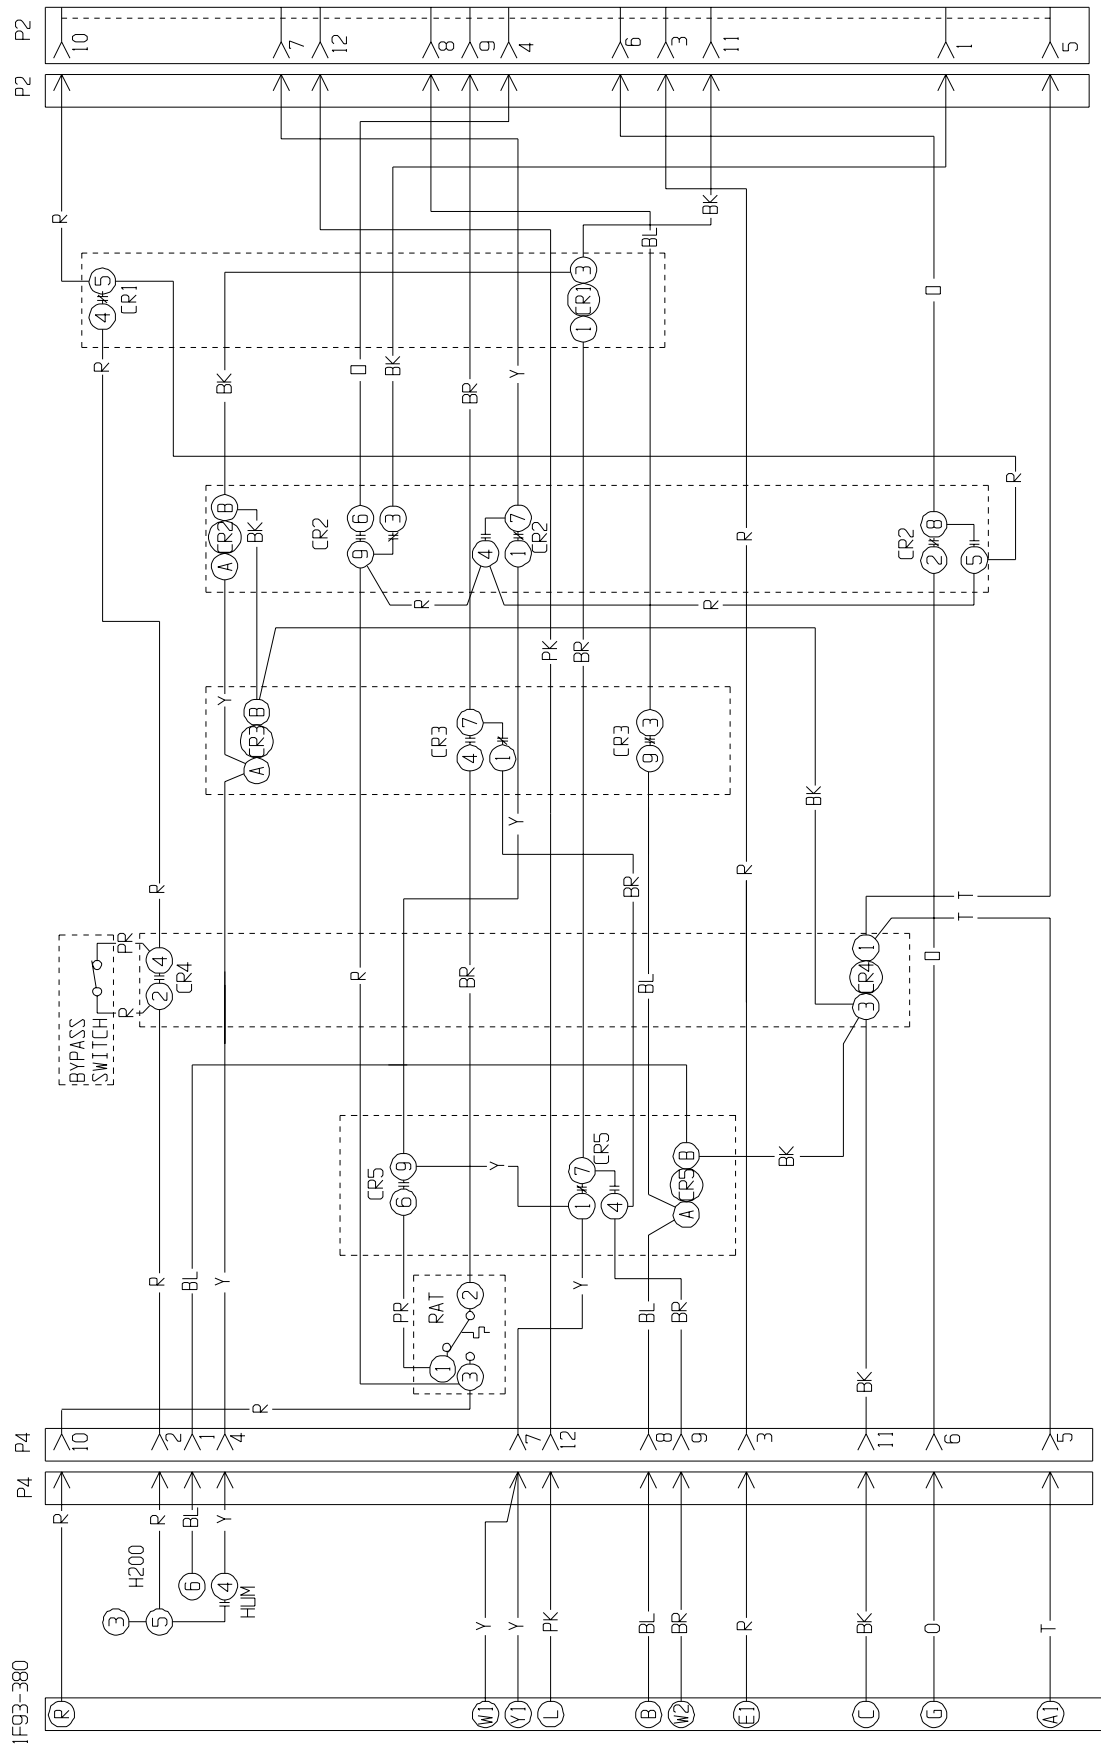

**FIGURE 16B**  
**REMOTE THERMOSTAT WIRING DIAGRAM**  
**"F" THERMOSTAT OPTION**

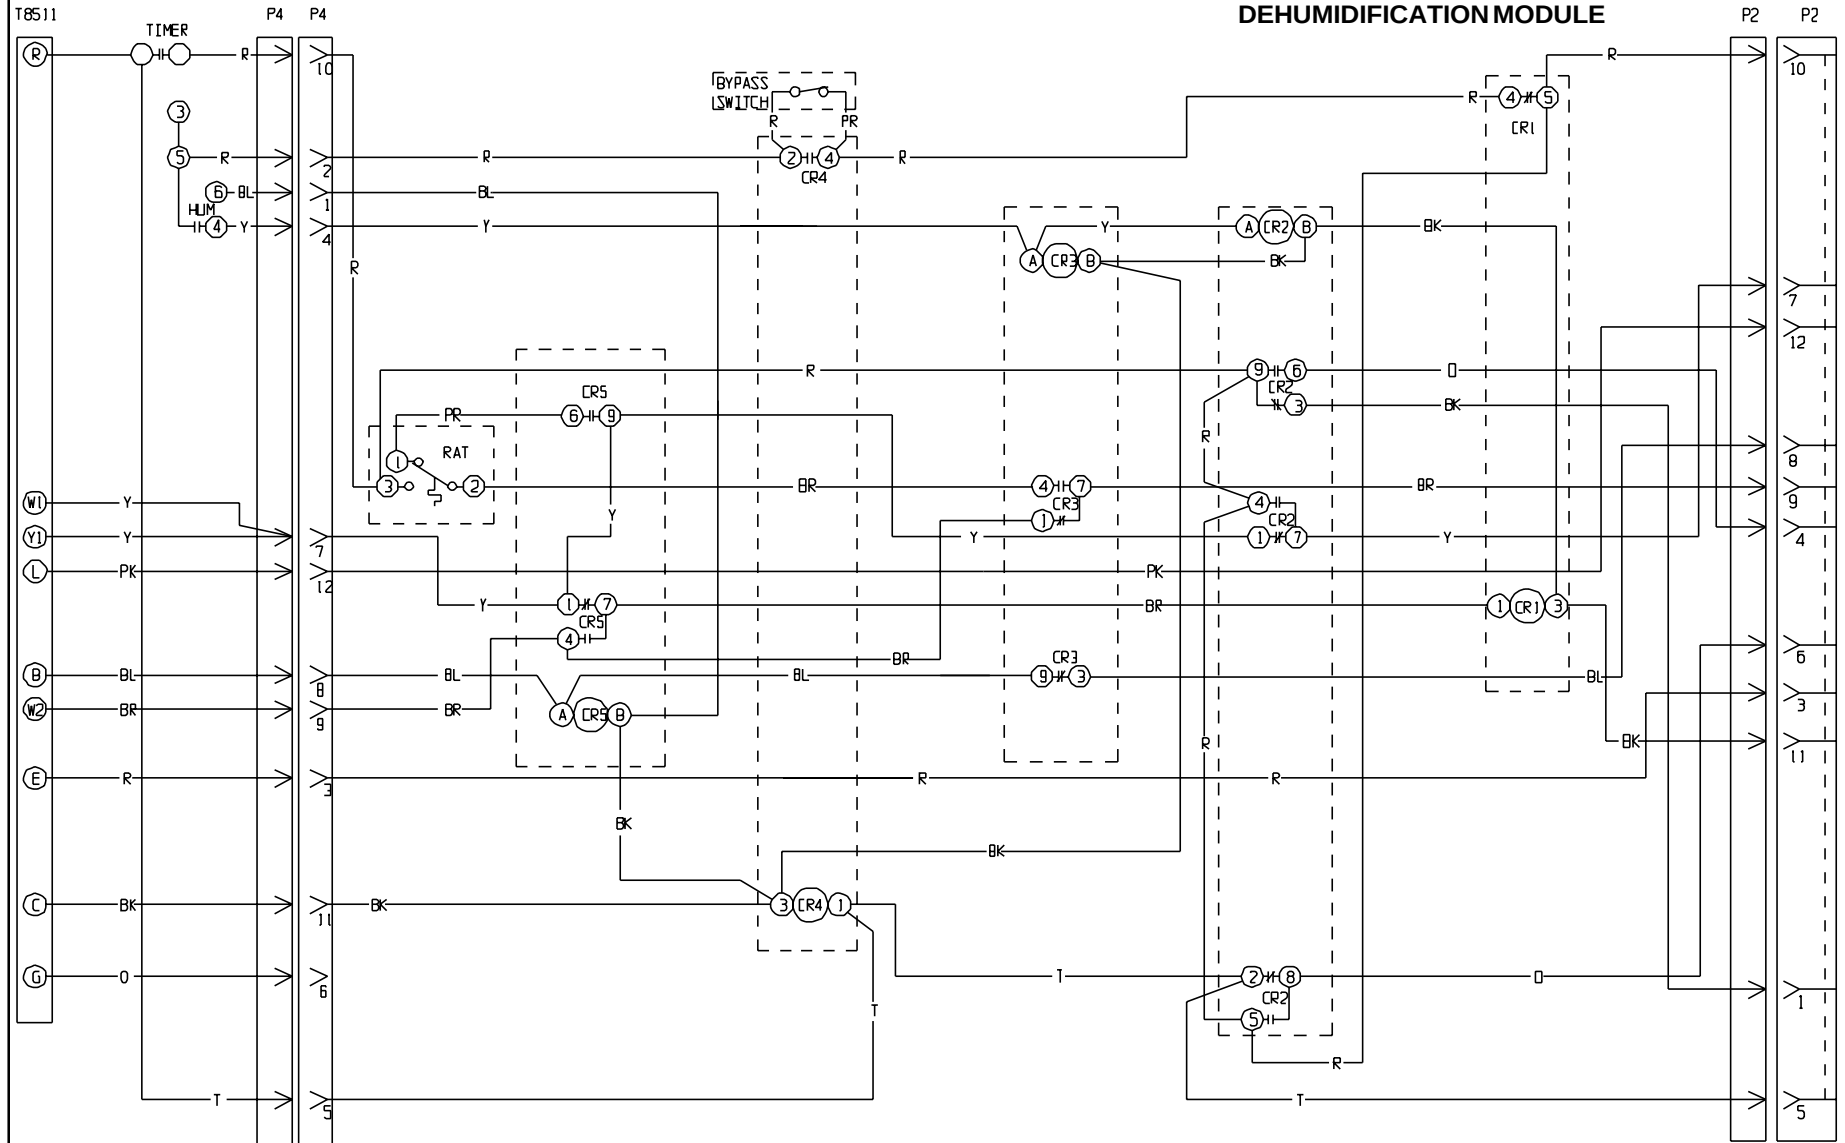

**FIGURE 16C**  
**UNIT MOUNTED THERMOSTAT AND HUMIDISTAT WIRING DIAGRAM**  
**"G" THERMOSTAT OPTION**

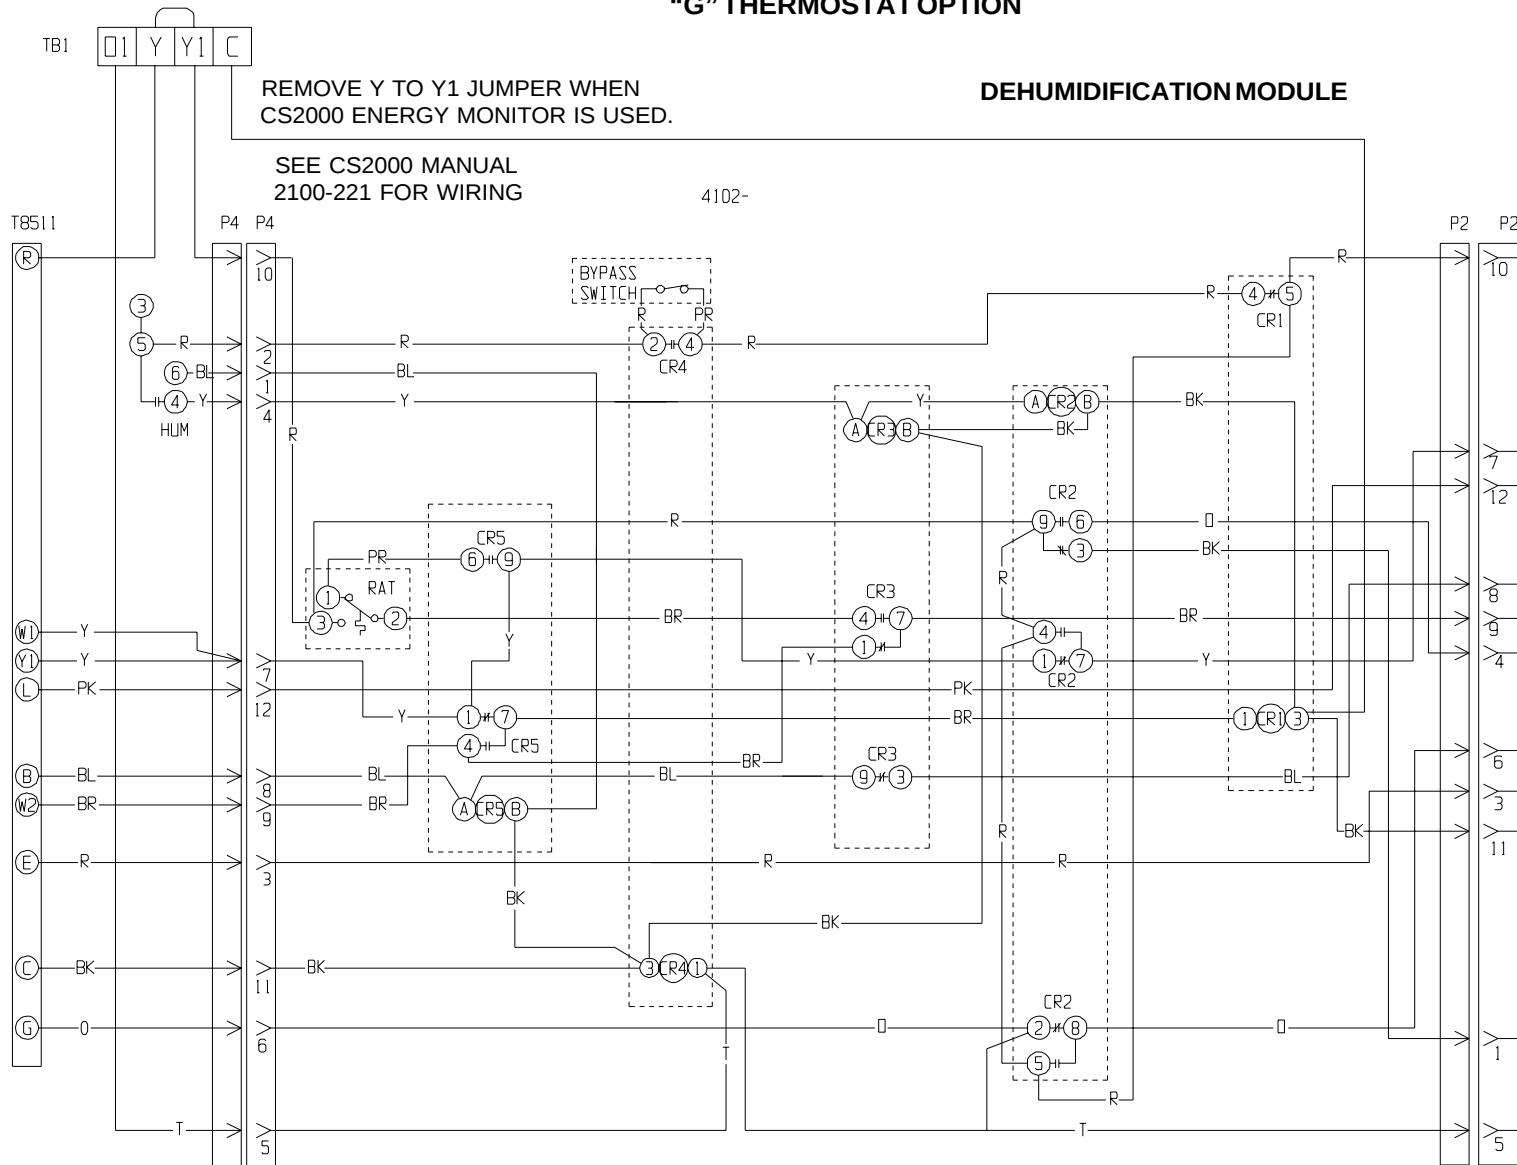

4102-027

## DESCRIPTION OF STANDARD EQUIPMENT

### ***Solid State Electronic Heat Pump Control***

Provides efficient 30 minute defrost cycle. A thermistor sensor and speed up terminal for service along with a 10 minute defrost override are standard on the electronic heat pump control.

### ***High / Low Pressure Switch***

Provides refrigerant circuit high pressure and loss of charge protection. Includes lockout circuit that is resettable from room thermostat.

### ***Five Minute Compressor Time Delay***

Provides short cycle protection for the compressor which extends compressor life. Built into the electronic heat pump control as standard.

### ***Service Light***

One service light indicates when service is required.

- Check System – detects high or low pressure switch operation for compressor protection.

## OPTIONAL CFM (QH362, QH422, QH482 AND QH602 ONLY)

These units are shipped from the factory set to operate at the optional CFM level shown in Table 9. This provides lower operating sound levels for non-ducted, free discharge applications. This CFM level will reduce the system capacity performance by approximately 2% at the same energy efficiency.

Rated CFM is required for ducted applications for maximum performance rating. To obtain full CFM on these models, connect jumper wire as follows:

1. Disconnect all power to the unit. Failure to do so may result in damage to the motor.
2. Open Return Air access panel.
3. Open inner control panel cover.
4. Locate low voltage terminal strip. There is a pink jumper wire with both ends attached to terminal marked “G2”. Move one end of the jumper to terminal “Y”
5. Reverse steps to reassemble.

## IMPORTANT INSTALLER NOTE

For improved start-up performance, wash the indoor coil with a dishwasher detergent.

## PHASE MONITOR

All units with three phase scroll compressors are equipped with a 3 phase line monitor to prevent compressor damage due to phase reversal.

The phase monitor in this unit is equipped with two LEDs. If the Y signal is present at the phase monitor and phases are correct the green LED will light.

If phases are reversed, the red fault LED will be lit and compressor operation is inhibited.

If a fault condition occurs, reverse two of the supply leads to the unit. Do not reverse any of the unit factory wires as damage may occur.

## THREE PHASE SCROLL COMPRESSOR START UP INFORMATION

Scroll compressors, like several other types of compressors, will only compress in one rotational direction. Direction of rotation is not an issue with single phase compressors since they will always start and run in the proper direction.

However, three phase compressors will rotate in either direction depending upon phasing of the power. Since there is a 50-50 chance of connecting power in such a way as to cause rotation in the reverse direction, ***verification of proper rotation must be made.***

Verification of proper rotation direction is made by observing that suction pressure drops and discharge pressure rises when the compressor is energized. Reverse rotation also results in an elevated sound level over that with correct rotation, as well as, substantially reduced current draw compared to tabulated values.

***Verification of proper rotation must be made at the time the equipment is put into service. If improper rotation is corrected at this time there will be no negative impact on the durability of the compressor. However, reverse operation for over one hour may have a negative impact on the bearing due to oil pump out.***

All three phase scroll compressors used in the QTec series are wired identically internally. As a result, once the correct phasing is determined for a specific system or installation, connecting properly phased power leads to the same Fusite terminal should maintain proper rotation direction. The direction of rotation of the motor may be changed by reversing any two line connections to the unit.

## SERVICE HINTS

1. Caution user to maintain clean air filters at all times. Also, not to needlessly close off supply air registers. This may reduce air flow through the system, which shortens equipment service life as well as increasing operating costs and noise levels.
2. Switching to heating cycle at 75°F or higher outside temperature may cause a nuisance trip of the remote reset high pressure switch. Turn thermostat off, then on to reset the high pressure switch.
3. The heat pump wall thermostats perform multiple functions. Be sure that all function switches are correctly set for the desired operating mode before trying to diagnose any reported service problems.
4. Check all power fuses or circuit breakers to be sure they are the correct rating.
5. Periodic cleaning of the outdoor coil to permit full and unrestricted airflow circulation is essential.
6. Some service requires the need to remove the unit from the wall including replacement of the indoor coil and/or the outdoor coil. Also servicing the outdoor fan motor or fan blade will require removing the unit from the wall if the unit is installed at a height that is not easily accessible from the outside of the building.

In order to remove the unit from the wall the following procedure must be used:

- a. Turn off power to the unit at the remote location. Some units may have more than one power supply.
- b. Disconnect field wiring at unit terminal block and remove from unit.
- c. Disconnect condensate drain.
- d. Remove the lower skirting around the unit.
- e. Remove wall mounting brackets from wall on each side of the unit.
- f. If unit is attached to duct work, remove upper cabinet extension by removing the top center screw only from the cabinet side panel.
- g. Remove screws that attach the duct work to the unit flanges.

This unit is equipped with four rollers mounted to the base. For ease of pulling unit out from the wall, you may want to remove the bottom service door which requires removal of the return air panel, and grip the front flange of the base pan then pull straight out.

7. Annual maintenance is required to make sure that all of the systems are functioning properly.
  - a. Check to make sure that the drains are not obstructed in any way.
  - b. Remove any debris in the condenser section of the unit.
  - c. Inspect and clean mist eliminator as described below.
  - d. Inspect and wash outdoor coil as necessary.

## MIST ELIMINATOR SERVICE

A mist eliminator is supplied with the wall sleeve. The mist eliminator is constructed of an aluminum frame and mesh. The mist eliminator is located in the top section of the wall sleeve and can be removed from the inside of the building without removing the unit from the wall. This requires that the ventilation package must be removed.

It is recommended that the mist eliminator be inspected annually and serviced as required. The mist eliminator can be inspected from the outside of the building by looking through the outdoor grille. The mist eliminator can be serviced from the outside by using a vacuum cleaner. The outdoor grille must be removed. Use the vacuum to remove dirt and debris from the surface of the mist eliminator. If additional cleaning is required, the mist eliminator will have to be removed from the sleeve.

The ventilation package will have to be removed to gain access to the mist eliminator. If the blank off plate option is used, it is not necessary to service the mist eliminator. The steps necessary to remove each of the vent options are listed below.

The mist eliminator can be cleaned by washing with soap and water. The excess water should be shaken off the mist eliminator before it is reinstalled.

## VENT OPTIONS

### BAROMETRIC FRESH AIR DAMPER (Standard)

Before starting, make sure the power has been turned off. The return air grille panel must be removed. The fresh air damper assembly can be seen on the back of the unit. See Figure 17.

1. The fresh air damper is attached to the back of the unit with one screw on either side of the assembly. Both of the screws must be removed.
2. Once the mounting screws are removed, tilt the assembly down and lift it out.

The mist eliminator can be seen through the opening. The mist eliminator must be raised up and the bottom can be pulled toward the front of the unit.

### COMMERCIAL ROOM VENTILATOR (Option)

Before starting, make sure the power has been turned off. The return air grille panel must be removed. The commercial room ventilator (CRV) can be seen after the panel has been removed. The CRV must be removed to gain access to the mist eliminator.

1. The two mounting screws in the front of the CRV must be removed.
2. The power connectors for the CRV (located on the right side of the unit) must be disconnected. Squeeze the tabs on the sides of the connector and pull straight out. Unplug both of the connectors.
3. Slide the CRV straight out of the unit.

The mist eliminator can be seen through the opening in the back of the unit. The mist eliminator must be raised up and the bottom can be pulled toward the front of the unit and removed.


### QTEC R ENERGY RECOVERY VENTILATOR (Option)

Before starting, make sure that the power has been turned off. The return air grille panel must be removed. The energy recovery ventilator (QERV) can be seen after the panel has been removed. To gain access to the mist eliminator, the QERV must be removed. See Figure 18.

1. The front fill plate of the QERV must be removed. There is one screw on either side of the plate. Remove these screws and remove the plate.
2. On either side of the QERV there are mounting screws that hold the QERV in place. Remove both of these screws.
3. Underneath the heat recovery cassette there is a power connector for the lower blower assembly. To disconnect this plug, the tabs on both sides of the plug must be squeezed to release the plug. While squeezing the tabs, pull the plug out of the socket.
4. The QERV is plugged into the unit in the right side of the unit. Both of these plugs must be disconnected to remove the QERV. Squeeze the tabs on the sides of the connector and pull straight out.
5. Slide the QERV assembly straight out of the unit, being careful not to let the cassette slide out of the QERV.


The mist eliminator can be seen through the opening in the back of the unit. The mist eliminator must be raised up and the bottom can be pulled toward the front of the unit and removed.

**FIGURE 17**  
**FRESH AIR DAMPER REMOVAL**

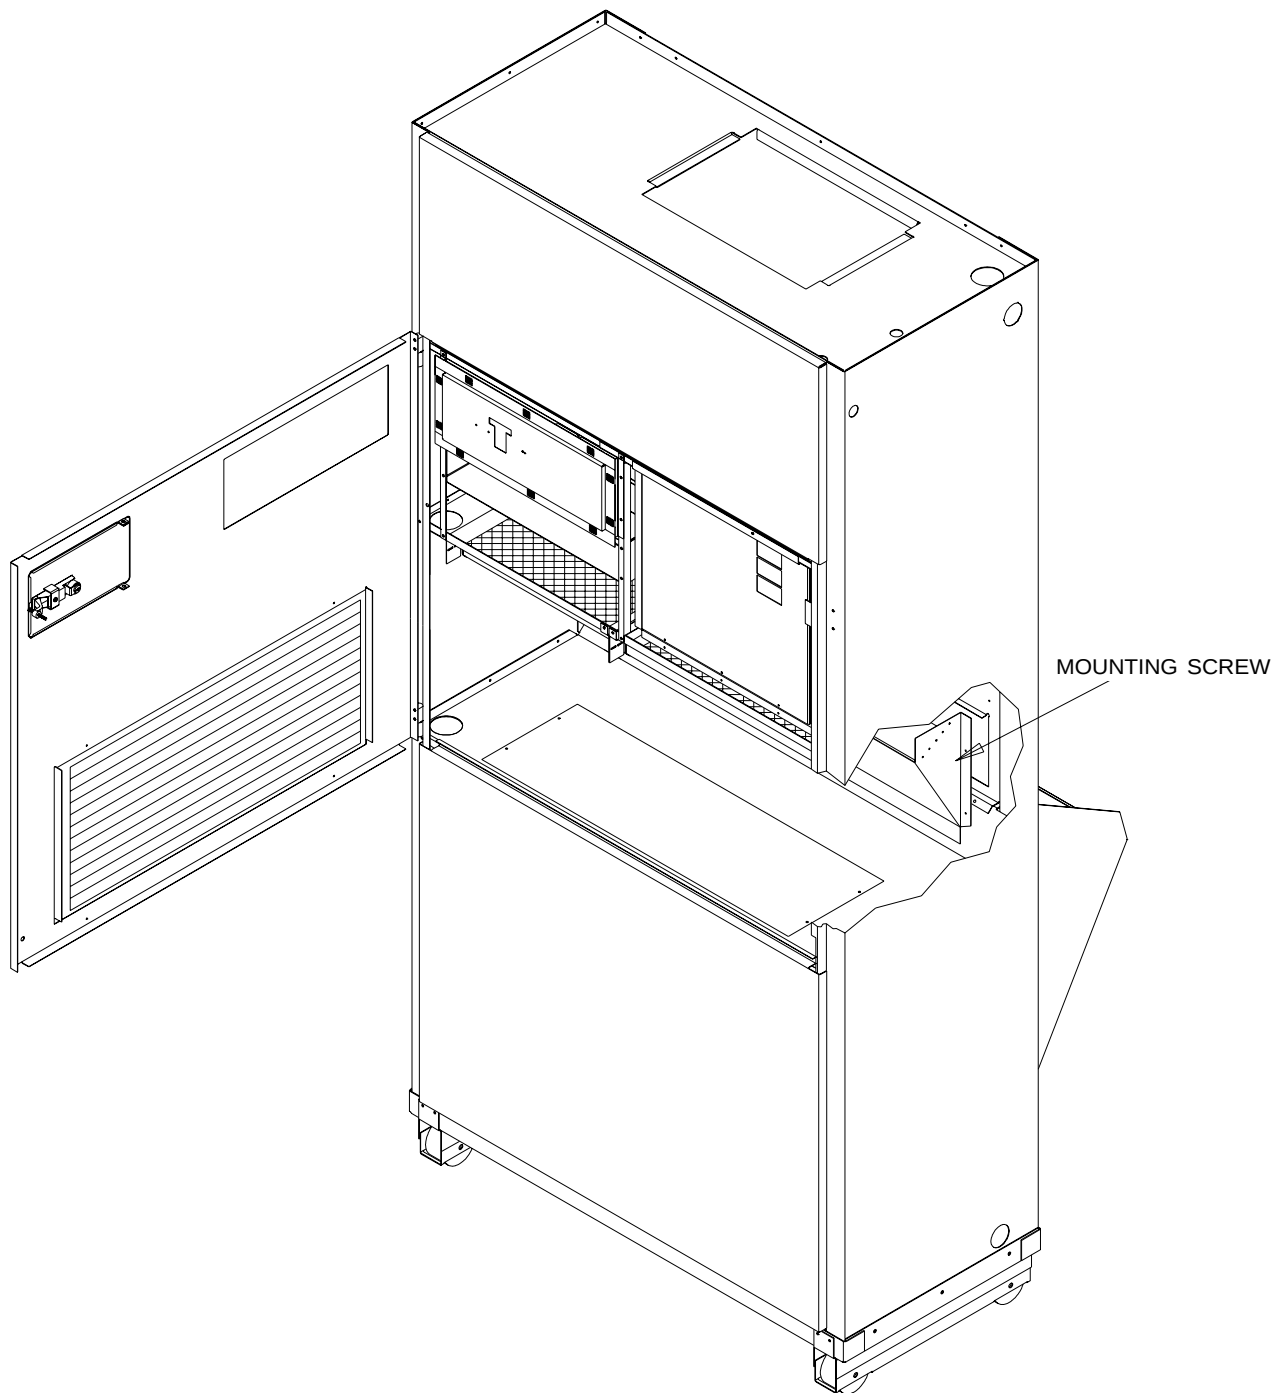

MIS-1627

**FIGURE 18**  
**QERV REMOVAL**

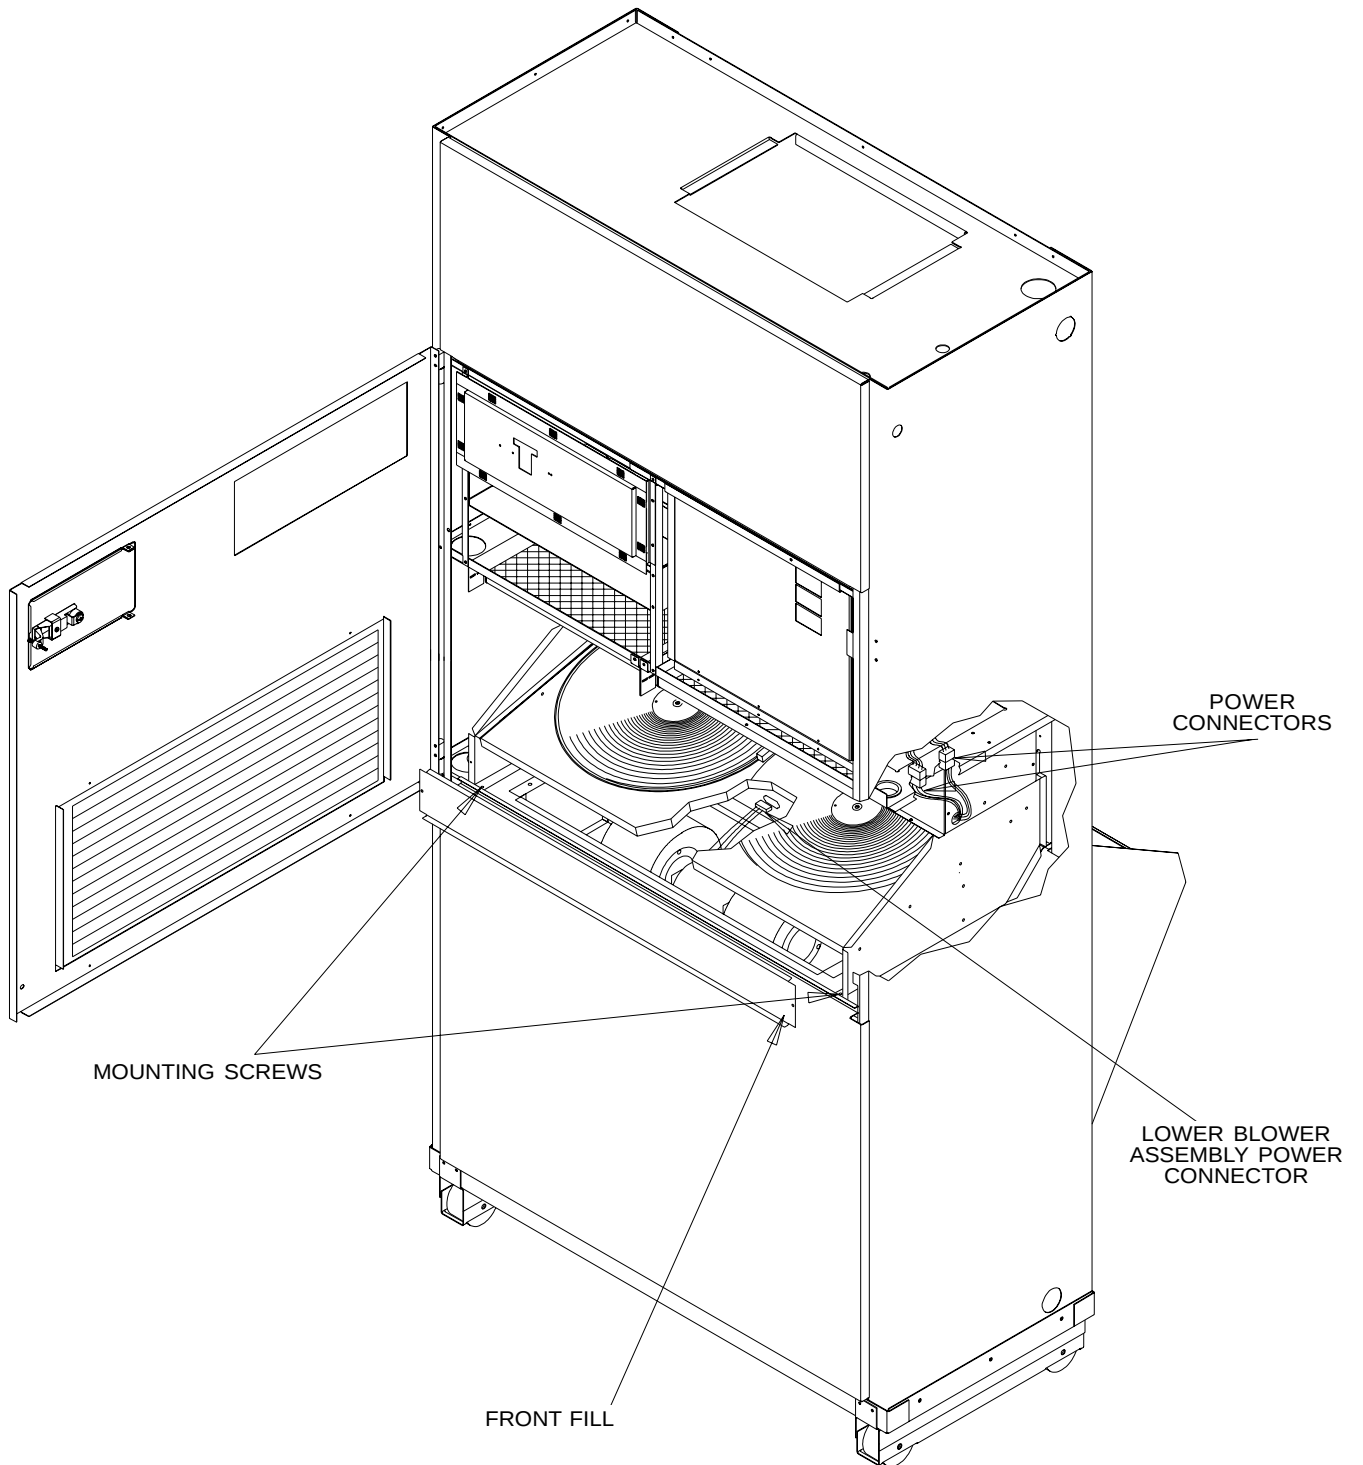

MIS-1039

## SEQUENCE OF OPERATION

**Cooling** – Circuit R-Y makes the thermostat pull in the compressor contactor starting the compressor and outdoor motor. The G (indoor motor) circuit is automatically completed on any call for cooling operation, or can be energized by manual fan switch on subbase for constant air circulation.

**Heating** – A 24V solenoid coil on reversing valve controls heating cycle operation. Two thermostat options, one allowing “Auto” change over from cycle to cycle and the other constantly energizing solenoid coil during heating season and thus eliminating pressure equalization noise except during defrost, are to be used on “Auto” option, a circuit is completed for R-W1 and R-Y on each heating “on” cycle, energizing reversing valve solenoid and pulling in compressor contactor starting compressor and outdoor motor. R-G also makes starting indoor blower motor. Heat pump heating cycle now in operation.

The second option has no “Auto” change over position, but instead energizes the reversing valve solenoid constantly whenever the system switch on subbase is placed in “Heat” position, the “B” terminal being constantly energized from R. A thermostat demand for heat completes R-Y circuit, pulling in compressor contactor starting compressor and outdoor motor. R-G also make starting indoor blower motor.

**Reheat Circuit** There is a small capillary tube inserted between the reheat coil return line and suction line that will prevent liquid from accumulating in the reheat coil when it is inactive. This drain does not affect the normal operation of the system.

There is a check valve located in the reheat coil return line. It has a soft spring to hold the ball on the seat. This will make the method of checking the ball freedom with a magnet difficult. Refer to Figures 18 and 19 for the location of the check valve and drain back capillary.

When the system is operating in the dehumidification mode the suction pressure will be reduced by 4 to 8 psig and the discharge pressure will be reduced by 19 to 22 psig.

**Return Air Thermostat** In dehumidification mode if the return air temperature is lower than 65°, the return air thermostat closes and brings on stage one electric heat to maintain 65°.

**High / Low Pressure control** provides protection for the compressor. In the event system pressures go above 350 PSI or below 3.5 PSI in either cooling or heating mode the compressor will be stopped. This will activate the red light located in the control panel. The lockout circuit will hold compressor off line. When the system problem is corrected, the unit operation can be

restored by turning of the main power supply off and then back on, or reset the room thermostat. The low pressure control has a bypass to eliminate nuisance lockout on cold start up.

## OPTIONAL CLIMATE CONTROLS SEQUENCE OF OPERATION

The Climate Control **Option E** is an electronic, programmable thermostat and a humidistat. This unit has a refrigerant reheat circuit that is controlled by a 3 way valve.

When the humidity is above the setpoint of the humidistat, the compressor circuit and the 3 way valve are energized and the evaporator air flow is reduced. The 3 way valve directs hot discharge gas into a separate desuperheating condenser circuit that reheats the conditioned air before it is delivered to the room. When the humidistat is satisfied, the system switches back to normal air conditioning mode.

If the thermostat calls for cooling during dehumidification mode, the call for cooling takes precedence over the dehumidification and the unit will cool until the thermostat is satisfied. Once the call for cooling is satisfied, the unit may continue to dehumidify.

If the thermostat calls for heat when the unit is in the dehumidification mode, the electric heaters will energize and the evaporator air flow will return to the heating air flow. When the thermostat is satisfied, the electric heaters will turn off and the air flow will be reduced and the system will continue to dehumidify until humidistat is satisfied.

If the unit is running in heat pump mode and the humidistat calls for dehumidification, the dehumidification mode takes precedence over the heat pump heating mode. The unit will not return to the heating mode until 2nd stage heating is called for.

The Climate Control **Option F** has a non-programmable electronic thermostat, timer, and humidistat. This unit has a refrigerant reheat circuit that is controlled by a 3 way valve.

Unit operation is controlled by the manually operated timer. Normal heating, cooling or ventilation is available only when the timer is on. Dehumidification can be set to be available only when the timer is on, or to be available continuously by switching a toggle switch.

Fan thermostat output should be programmed to be on continuously when used with a vent option.

When the humidity is above the setpoint of the humidistat, the compressor circuit and the 3 way valve are energized and the evaporator air flow is reduced. The 3 way valve directs hot discharge gas into a separate desuperheating condenser circuit that reheats the conditioned air before it is delivered to the room. If the return air thermostat sensed a temperature below 65° during dehumidification, the first stage electric heaters are brought on to raise the return air temperature above 65°. When the humidistat is satisfied, the system switches back to normal air conditioning mode.

If the thermostat calls for cooling during dehumidification mode, the call for cooling takes precedence over the dehumidification and the unit will cool until the thermostat is satisfied. Once the call for cooling is satisfied, the unit may continue to dehumidify.

If the thermostat calls for heat when the unit is in the dehumidification mode, the electric heaters will energize and the evaporator air flow will return to the heating air flow. When the thermostat is satisfied, the electric heaters will turn off and the air flow will be reduced and the system will continue to dehumidify until humidistat is satisfied.

If the unit is running in heat pump mode and the humidistat calls for dehumidification, the dehumidification mode takes precedence over the heat pump heating mode. The unit will not return to the heating mode until 2nd stage heating is called for.

The Climate Control **Option G** has a non-programmable electronic thermostat, humidistat and is compatible for use with a CS2000 Energy Control Monitor. This unit has a refrigerant reheat circuit that is controlled by a three-way valve.

Unit operation is controlled by the thermostat and humidistat, and optional CS2000 Energy Monitor Controller can be easily integrated by simple connection to the low voltage terminal block provided. See Figure 16C.

*NOTE: The CS2000 (or other means for ventilation control) must be used if any mechanical (motorized) ventilation options are installed.*

Dehumidification can be set to be available only when CS2000 is active or to be available continuously by switching a toggle switch at the control panel.

When the humidity is above the setpoint of the humidistat, the compressor circuit and the 3 way valve are energized and the evaporator air flow is reduced. The 3 way valve directs hot discharge gas into a separate desuperheating condenser circuit that reheats the conditioned air before it is delivered to the room. If the return air thermostat sensed a temperature below 65° during dehumidification, the first stage electric heaters are brought on to raise the return air temperature above 65°. When the humidistat is satisfied, the system switches back to normal air conditioning mode.

If the thermostat calls for cooling during dehumidification mode, the call for cooling takes precedence over the dehumidification and the unit will cool until the thermostat is satisfied. Once the call for cooling is satisfied, the unit may continue to dehumidify.

If the thermostat calls for heat when the unit is in the dehumidification mode, the electric heaters will energize and the evaporator air flow will return to the heating air flow. When the thermostat is satisfied, the electric heaters will turn off and the air flow will be reduced and the system will continue to dehumidify until humidistat is satisfied.

If the unit is running in heat pump mode and the humidistat calls for dehumidification, the dehumidification mode takes precedence over the heat pump heating mode. The unit will not return to the heating mode until 2nd stage heating is called for.

## REFRIGERANT TUBE SCHEMATIC FOR REHEAT COIL


Figure 19 shows the refrigerant gas flow through the reheat coil during the dehumidification mode.

When the unit is in standard cooling (Figure 20) or heating mode the reheat coil is inactive.

## PRESSURE SERVICE PORTS


High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Pressure curves can be found later in the manual covering all models on both cooling and heating cycles. It is imperative to match the correct pressure curve to the unit by model number. Upper and lower service doors must be attached to obtain proper reading.

**FIGURE 19**  
**QT<sub>EC</sub> DEHUMIDIFICATION MODE CIRCUIT DIAGRAM**

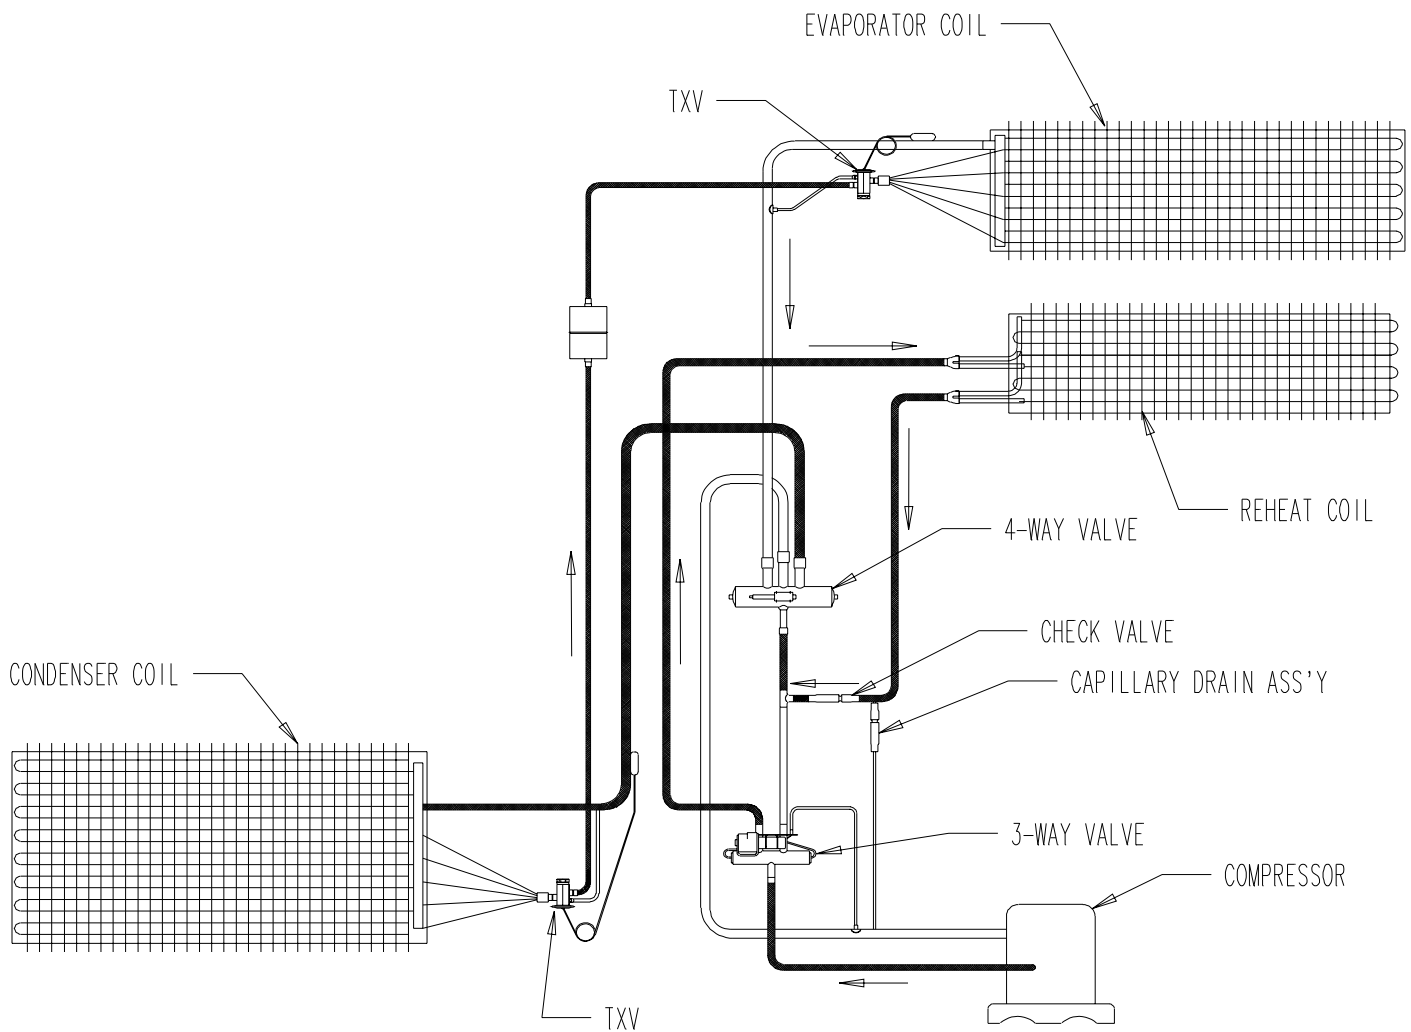


MIS-1088

**FIGURE 20**  
**QT<sub>EC</sub> COOLING MODE CIRCUIT DIAGRAM**

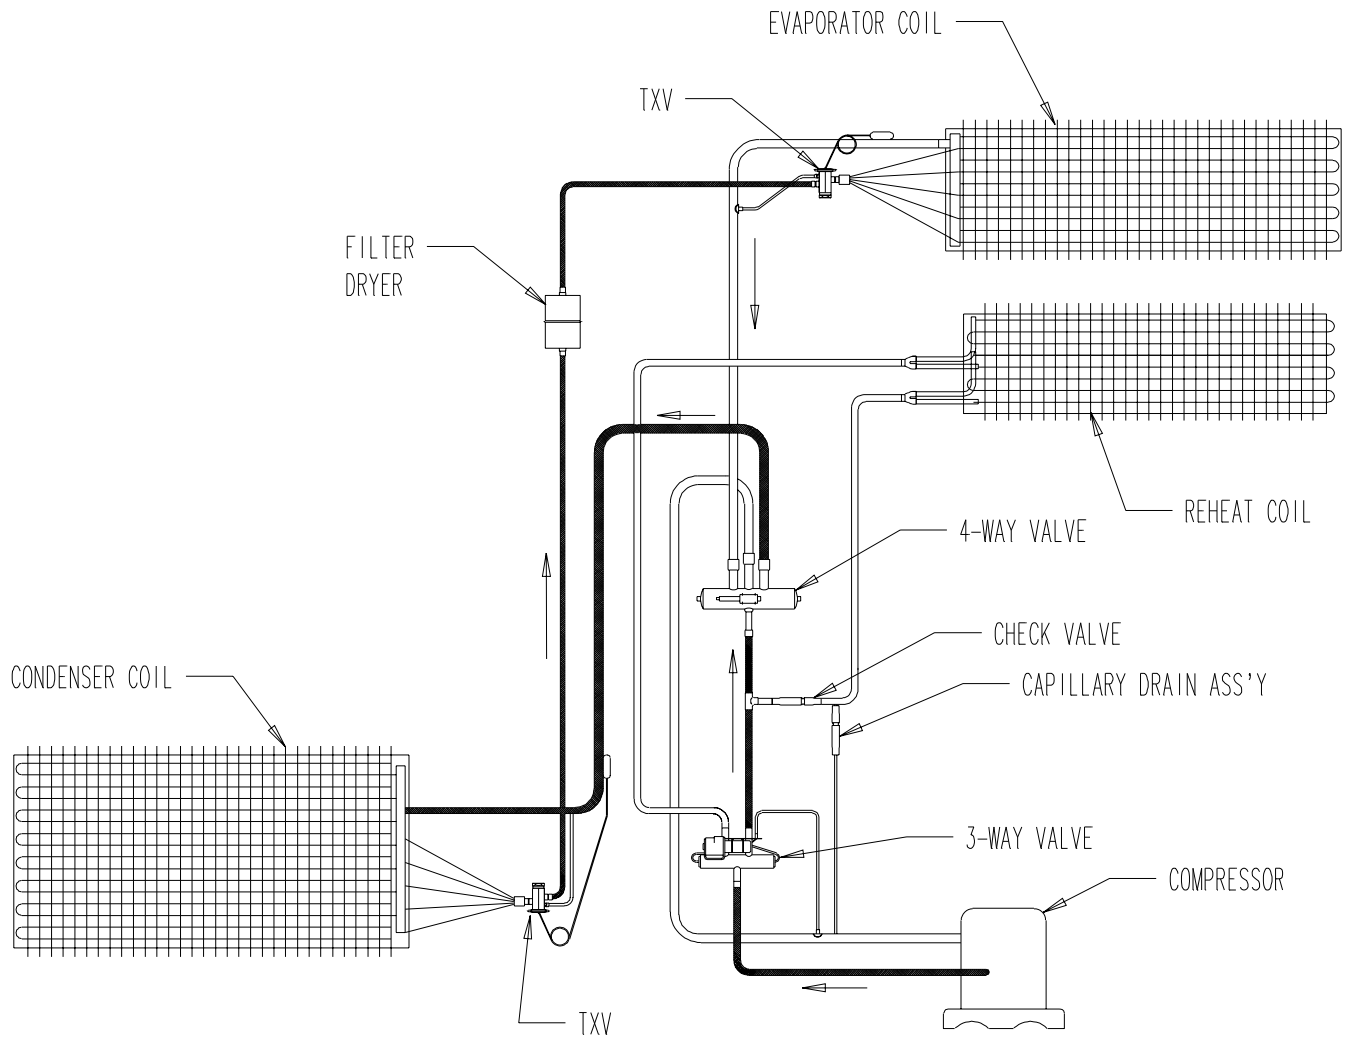

MIS-1089

**FIGURE 21**  
**HEAT PUMP CONTROL BOARD (HPC)**

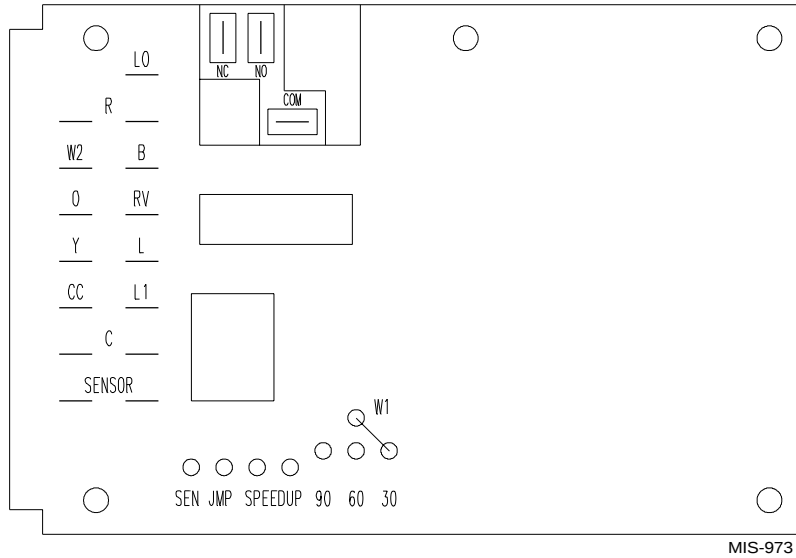

## DEFROST CYCLE

The defrost cycle is controlled by temperature and time on the solid state heat pump control. (See Figure 21.)

When the outdoor temperature is in the lower 40° F temperature range or colder, the outdoor coil temperature is 32° F or below. This coil temperature is sensed by the coil sensor mounted near the bottom of the outdoor coil. Once coil temperature reaches 30° F or below, the coil sends a signal to the control logic of the heat pump control and the defrost timer will start.

After 30 minutes at 30° F or below, the heat pump control will place the system in the defrost mode.

During the defrost mode the refrigerant cycle switches back to the cooling cycle, the outdoor motor stops, electric heaters are energized, and hot gas passing through the outdoor coil melts any accumulated frost. When the temperature rises to approximately 57° F, the coil sensor will send a signal to the heat pump control which will return the system to heating operations automatically.

If some abnormal or temporary condition such as a high wind causes the heat pump to have a prolonged defrost cycle, the heat pump control will restore the system to heating operation automatically after 10 minutes.

There are three settings on the heat pump control – 30 minute, 60 minute and 90 minute. Models are shipped wired on the 30 minute setting for greatest operating economy. If special circumstances require a change to another time, remove wire connected to terminal 30 and reconnect to desired terminal. Refer to Figure 21. The manufacturer's recommendation is for 30 minute defrost cycles.

There is a cycle speed up jumper on the control. This can be used to reduce the time between defrost cycle operation without waiting for time to elapse.

There is an initial defrost jumper (sen jmp) on the control that can be used at any outdoor ambient during the heating cycle to simulate a 0° coil temperature. This can be used to check defrost operation of the unit without waiting for the outdoor ambient to fall into the defrost region.

Use a small screwdriver or other metallic object, or another 1/4 inch QC, to short between the *SPEEDUP* terminals to accelerate the HPC timer and initiate defrost. Be careful not to touch any other terminals with the instrument used to short the *SPEEDUP* terminals. It may take up to 10 seconds with the *SPEEDUP* terminals shorted for the speedup to be completed and the defrost cycle to start.

***As soon as the defrost cycle kicks in remove the shorting instrument from the SPEEDUP terminal.***

Otherwise the timing will remain accelerated and run through the 1- minute maximum defrost length sequence in a matter of seconds and will automatically terminate the defrost sequence.

There is an initial defrost jumper (sen jmp) on the control that can be used at any outdoor ambient during the heating cycle to simulate a 0° coil temperature. This can be used to check defrost operation of the unit without waiting for the outdoor ambient to fall into the defrost region.

By placing a jumper across the *SEN JMP* terminals (a 1/4 inch QC terminal works best) the defrost sensor mounted on the outdoor coil is shunted out and will activate the timing circuit. This permits the defrost cycle to be checked out in warmer weather conditions without the outdoor temperature having to fall into the defrost region.

In order to terminate the defrost test the *SEN JMP* jumper must be removed.. If left in place too long the compressor could stop due to the high pressure control opening because of high pressure condition created by operating in the cooling mode with outdoor fan off. Pressure will rise fairly fast as there is likely no actual frost on the outdoor coil in this artificial test condition.

There is also a 5 minute compressor time delay function built into the HPC. This is to protect the compressor from short cycling conditions. In some instances it is helpful to the service technician to override or speed up this timing period, and shorting out the *SPEEDUP* terminals for a few seconds can do this.

# TROUBLESHOOTING

**TABLE 5  
TROUBLESHOOTING**

| Sympton                                                                   | Possible Cause                                    | What to Check                                                                                                                                                                     | How to Check or Repair                                                                                                                                                                    |
|---------------------------------------------------------------------------|---------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Compressor contactor does not energize (cooling or heating)               | Control circuit wiring                            | Check for R connection at unit, and 24V between R-C.                                                                                                                              | Run R connection to outdoor unit to power heat pump control.                                                                                                                              |
|                                                                           | Compressor lock out                               | 1) Check for 24V between L1-C on heat pump control.<br><br>2) Check across high pressure switch.                                                                                  | 1) If no voltage between L1-C turn thermostat off and on again to reset high pressure switch.<br><br>2) If high pressure switch is open and will not reset, replace high pressure switch. |
|                                                                           | Compressor short cycle protection                 | Check for 24V between CC-C and Y-C on heat pump control.                                                                                                                          | If no voltage between CC-C jumper speed up terminal and within 10 seconds power should appear between CC-C. Remove speed up jumper after 10 seconds.                                      |
|                                                                           | Heat pump control defective                       | Check all other possible causes. Manual 2100-034                                                                                                                                  | Replace heat pump control.                                                                                                                                                                |
|                                                                           | Contactor defective                               | Check for open or shorted coil winding.                                                                                                                                           | Replace contactor.                                                                                                                                                                        |
| Fan outdoor motor does not run (cooling or heating except during defrost) | Motor defective                                   | Check for open or shorted motor winding.                                                                                                                                          | Replace motor.                                                                                                                                                                            |
|                                                                           | Motor capacitor defective                         | Check capacitor rating. Check for open or shorted capacitor.                                                                                                                      | Replace capacitor.                                                                                                                                                                        |
|                                                                           | Heat pump control defective                       | Check across fan relay on heat pump control (Com-NC)                                                                                                                              | Replace heat pump control.                                                                                                                                                                |
|                                                                           | 460V models only – outdoor motor relay defective  | Check relay for 24V to relay coil when compressor contactor is energized, and that contacts are closing properly.                                                                 | Replace relay.                                                                                                                                                                            |
| Reversing valve does not energize (heating only)                          | Reversing valve solenoid coil defective           | Check for open or shorted coil.                                                                                                                                                   | Replace solenoid coil.                                                                                                                                                                    |
|                                                                           | Heat pump control defective                       | Check for 24V between RV-C and B-C.                                                                                                                                               | 1) Check control circuit wiring.<br>2) Replace heat pump control                                                                                                                          |
| Unit will not go into defrost (heating only)                              | Temperature sensor or heat pump control defective | Disconnect temperature sensor from board, and jumper across speed up terminals and sen jmp terminals. This should cause the unit to go through a defrost cycle within one minute. | 1) If unit goes through defrost cycle, replace temperature sensor.<br><br>2) If unit does not go through defrost cycle, replace heat pump control.                                        |
| Unit will not come out of defrost (heating only)                          | Temperature sensor or heat pump control defective | Jumper across speed up terminals. This should cause the unit to come out of defrost within one minute.                                                                            | 1) If unit comes out of defrost cycle, replace temperature sensor.<br>2) If unit does not come out of defrost cycle, replace heat pump control.                                           |

## SOLID STATE HEAT PUMP CONTROL TROUBLESHOOTING PROCEDURE

1. Turn on AC power supply to indoor and outdoor units.
2. Turn thermostat blower switch to “fan on” – the indoor blower should start. (If it doesn’t, troubleshoot indoor unit and correct problem.)
3. Turn thermostat blower to “auto” position. Indoor blower should stop.
4. Set system switch to “heat” or “cool”. Adjust thermostat to call for heat or cool. The indoor blower, compressor and outdoor fan should start.

*NOTE: If there was no power to 24 volt transformer, the compressor and outdoor fan motor will not start for 5 minutes. This is because of the compressor short cycle protection.*

## CHECKING TEMPERATURE SENSOR

1. Disconnect temperature sensor from board and from outdoor coil.
2. Use an ohmmeter and measure the resistance of the sensor. Also use ohmmeter to check for short or open.
3. Check resistance reading to chart of resistance use sensor ambient temperature. (Tolerance of part is  $\pm 10\%$ .)
4. If sensor resistance reads very low, then sensor is shorted and will not allow proper operation of the heat pump control.
5. If sensor is out of tolerance, shorted, open, or reads very low ohms then it should be replaced.


**TABLE 6**  
**TEMPERATURE (F) VS RESISTANCE (R) OF TEMPERATURE SENSOR**

| F     | R      | F    | R     | F    | R     | F    | R     | F     | R    |
|-------|--------|------|-------|------|-------|------|-------|-------|------|
| -25.0 | 196871 | 5.0  | 72910 | 35.0 | 29986 | 65.0 | 13474 | 95.0  | 6531 |
| -24.0 | 190099 | 6.0  | 70670 | 36.0 | 29157 | 66.0 | 13137 | 96.0  | 6383 |
| -23.0 | 183585 | 7.0  | 68507 | 37.0 | 28355 | 67.0 | 12810 | 97.0  | 6239 |
| -22.0 | 177318 | 8.0  | 66418 | 38.0 | 27577 | 68.0 | 12492 | 98.0  | 6098 |
| -21.0 | 171289 | 9.0  | 64399 | 39.0 | 26823 | 69.0 | 12183 | 99.0  | 5961 |
| -20.0 | 165487 | 10.0 | 62449 | 40.0 | 26082 | 70.0 | 11883 | 100.0 | 2827 |
| -19.0 | 159904 | 11.0 | 60565 | 41.0 | 25383 | 71.0 | 11591 | 101.0 | 4697 |
| -18.0 | 154529 | 12.0 | 58745 | 42.0 | 24696 | 72.0 | 11307 | 102.0 | 5570 |
| -17.0 | 149355 | 13.0 | 56985 | 43.0 | 24030 | 73.0 | 11031 | 103.0 | 5446 |
| -16.0 | 144374 | 14.0 | 55284 | 44.0 | 23384 | 74.0 | 10762 | 104.0 | 5326 |
| -15.0 | 139576 | 15.0 | 53640 | 45.0 | 22758 | 75.0 | 10501 | 105.0 | 5208 |
| -14.0 | 134956 | 16.0 | 52051 | 46.0 | 22150 | 76.0 | 10247 | 106.0 | 5094 |
| -13.0 | 130506 | 17.0 | 50514 | 47.0 | 21561 | 77.0 | 10000 | 107.0 | 4982 |
| -12.0 | 126219 | 18.0 | 49028 | 48.0 | 20989 | 78.0 | 9760  | 108.0 | 4873 |
| -11.0 | 122089 | 19.0 | 14590 | 49.0 | 20435 | 79.0 | 8526  | 109.0 | 4767 |
| -10.0 | 118108 | 20.0 | 46200 | 50.0 | 19896 | 80.0 | 9299  | 110.0 | 7663 |
| -9.0  | 114272 | 21.0 | 44855 | 51.0 | 19374 | 81.0 | 9077  | 111.0 | 4562 |
| -8.0  | 110575 | 22.0 | 43554 | 52.0 | 18867 | 82.0 | 8862  | 112.0 | 4464 |
| -7.0  | 107010 | 23.0 | 42295 | 53.0 | 18375 | 83.0 | 8653  | 113.0 | 4367 |
| -6.0  | 103574 | 24.0 | 41077 | 54.0 | 17989 | 84.0 | 8449  | 114.0 | 7274 |
| -5.0  | 100260 | 25.0 | 39898 | 55.0 | 17434 | 85.0 | 8250  | 115.0 | 4182 |
| -4.0  | 97064  | 26.0 | 38757 | 56.0 | 16984 | 86.0 | 8057  | 116.0 | 4093 |
| -3.0  | 93981  | 27.0 | 37652 | 57.0 | 16547 | 87.0 | 7869  | 117.0 | 4006 |
| -2.0  | 91008  | 28.0 | 36583 | 58.0 | 16122 | 88.0 | 7686  | 118.0 | 3921 |
| -1.0  | 88139  | 29.0 | 35548 | 59.0 | 15710 | 89.0 | 7507  | 119.0 | 3838 |
| 0.0   | 85371  | 30.0 | 34545 | 60.0 | 15310 | 90.0 | 7334  | 120.0 | 3757 |
| 1.0   | 82699  | 31.0 | 33574 | 61.0 | 14921 | 91.0 | 7165  | 121.0 | 3678 |
| 2.0   | 80121  | 32.0 | 32634 | 62.0 | 14544 | 92.0 | 7000  | 122.0 | 3601 |
| 3.0   | 77632  | 33.0 | 31723 | 63.0 | 14177 | 93.0 | 6840  | 123.0 | 3526 |
| 4.0   | 75230  | 34.0 | 30840 | 64.0 | 13820 | 94.0 | 6683  | 124.0 | 3452 |

## FAN BLADE SETTING DIMENSIONS

Any service work requiring removal or adjustment in the fan and/or motor area will require that the dimensions in Table 7 be checked and blade adjusted in or out of the motor shaft accordingly.

**FIGURE 22  
FAN BLADE SETTING**

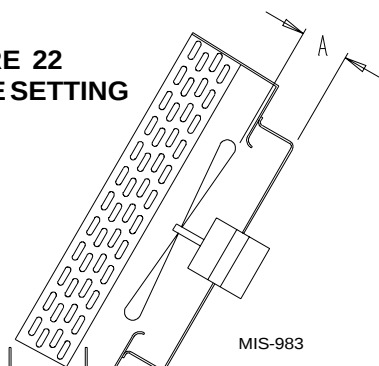

**TABLE 7  
FAN BLADE DIMENSIONS**

| MODEL | DIMENSION A (INCHES) |
|-------|----------------------|
| QH243 | .750                 |
| QH302 | .750                 |
| QH362 | .750                 |
| QH422 | .750                 |
| QH482 | .750                 |
| QH602 | .750                 |

## REFRIGERANT CHARGE

The correct system R-22 charge is shown on the unit rating plate. Optimum unit cooling performance will occur with a refrigerant charge resulting in a Super Heat as shown in Table 8. If correct charge is in doubt, recover the refrigerant and recharge per the charge on the unit rating plate.

**TABLE 8  
SUPER HEAT AT COMPRESSOR**

| MODEL | RATED CFM | 95° F OD TEMPERATURE | 82° F OD TEMPERATURE |
|-------|-----------|----------------------|----------------------|
| QH243 | 800       | 16 - 18              | 14 - 16              |
| QH302 | 1000      | 16 - 18              | 15 - 17              |
| QH362 | 1200      | 16 - 18              | 14 - 16              |
| QH422 | 1200      | 19 - 21              | 16 - 18              |
| QH482 | 1400      | 23 - 25              | 22 - 24              |
| QH602 | 1550      | 7 - 9                | 13 - 15              |

**TABLE 9  
INDOOR BLOWER PERFORMANCE**

| Model   | Rated ESP | ① Max. ESP | ② Rated CFM | ③ Optional CFM | ④ Continuous CFB | ⑤ Dehumidification CFM | CFM @ Max. EXP |
|---------|-----------|------------|-------------|----------------|------------------|------------------------|----------------|
| QH243 ⑥ | .10       | 0.5        | 800         | -----          | 800              | 500                    | 700            |
| QH302   | .15       | 0.8        | 1000        | -----          | 1000             | 700                    | 910            |
| QH362   | .15       | 0.8        | 1200        | 1000           | 1000             | 850                    | 1175           |
| QH422   | .15       | 0.8        | 1200        | 1000           | 1000             | 850                    | 1175           |
| QH482   | .15       | 0.8        | 1400        | 1100           | 1100             | 850                    | 1175           |
| QH602   | .20       | 0.5        | 1550        | 1250           | 1250             | 1250                   | 1400           |

**NOTE:** These units are equipped with a variable speed (ECM) indoor motor that automatically adjust itself to maintain approximately the same rate of indoor air flow in both heating and cooling, dry and wet coil conditions and at both 230/208 or 460 volts.

- ① Maximum ESP (inches WC) shown is with 1" thick disposable filter (reduced by .2 for 2" filter).
- ② Rated CFM for ducted applications – required for maximum performance rating. To obtain full CFM on models QH362 and QH422 connect the pink jumper wire (provided) to terminal #5 and #6 on the low voltage terminal block located in the circuit breaker box.
- ③ Optional CFM – the unit is shipped from the factory set to operate at the optional CFM level shown. This provides lower operating sound levels for non-ducted, free discharge applications. This reduces system capacity performance by approximately 2% at the same energy efficiency.
- ④ Continuous fan CFM is the total air being circulated during continuous fan mode.
- ⑤ Indoor air flow during periods of high humidity when system is operating under control of optional humidistat for maximum humidity reduction.
- ⑥ Models QH243 – when operating on 2nd stage heating the indoor air will increase to 1000 CFM.

**TABLE 10**  
**COOLING PRESSURE**  
**(All Temperatures in Degrees F)**

| Model | Return Air Temperature | Pressure  | AIR TEMPERATURE ENTERING OUTDOOR COIL |     |     |     |     |     |     |     |     |
|-------|------------------------|-----------|---------------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|
|       |                        |           | 75 ①                                  | 80  | 85  | 90  | 95  | 100 | 105 | 110 | 115 |
| QH243 | 75 deg. DB             | Low Side  | 73                                    | 73  | 74  | 76  | 77  | 79  | 80  | 81  | 83  |
|       | 62 deg. WB             | High Side | 195                                   | 199 | 214 | 229 | 244 | 259 | 274 | 289 | 304 |
|       | 80 deg. DB             | Low Side  | 78                                    | 78  | 79  | 80  | 82  | 84  | 85  | 87  | 88  |
| QH302 | 67 deg. WB             | High Side | 203                                   | 204 | 219 | 234 | 250 | 264 | 280 | 296 | 312 |
|       | 85 deg. DB             | Low Side  | 84                                    | 84  | 85  | 86  | 88  | 89  | 91  | 93  | 94  |
|       | 72 deg. WB             | High Side | 121                                   | 213 | 228 | 244 | 259 | 274 | 290 | 305 | 320 |
| QH362 | 75 deg. DB             | Low Side  | 75                                    | 75  | 76  | 77  | 78  | 79  | 80  | 81  | 82  |
|       | 62 deg. WB             | High Side | 226                                   | 202 | 242 | 258 | 273 | 319 | 303 | 319 | 335 |
|       | 80 deg. DB             | Low Side  | 80                                    | 80  | 81  | 82  | 83  | 84  | 85  | 86  | 87  |
| QH422 | 67 deg. WB             | High Side | 228                                   | 233 | 248 | 264 | 280 | 296 | 311 | 327 | 343 |
|       | 85 deg. DB             | Low Side  | 86                                    | 86  | 87  | 88  | 89  | 90  | 91  | 92  | 93  |
|       | 72 deg. WB             | High Side | 238                                   | 240 | 257 | 273 | 290 | 306 | 323 | 339 | 356 |
| QH482 | 75 deg. DB             | Low Side  | 74                                    | 74  | 75  | 76  | 77  | 78  | 79  | 80  | 81  |
|       | 62 deg. WB             | High Side | 212                                   | 215 | 233 | 251 | 269 | 287 | 305 | 323 | 341 |
|       | 80 deg. DB             | Low Side  | 79                                    | 79  | 80  | 81  | 82  | 83  | 84  | 85  | 86  |
| QH602 | 67 deg. WB             | High Side | 219                                   | 220 | 239 | 257 | 276 | 294 | 312 | 331 | 350 |
|       | 85 deg. DB             | Low Side  | 85                                    | 85  | 86  | 87  | 88  | 89  | 90  | 91  | 92  |
|       | 72 deg. WB             | High Side | 223                                   | 228 | 247 | 267 | 286 | 305 | 324 | 343 | 363 |
| QH422 | 75 deg. DB             | Low Side  | 71                                    | 71  | 72  | 73  | 74  | 75  | 76  | 77  | 79  |
|       | 62 deg. WB             | High Side | 246                                   | 248 | 264 | 281 | 299 | 318 | 339 | 362 | 385 |
|       | 80 deg. DB             | Low Side  | 75                                    | 76  | 77  | 78  | 79  | 80  | 81  | 82  | 83  |
| QH482 | 67 deg. WB             | High Side | 251                                   | 243 | 270 | 288 | 307 | 327 | 349 | 371 | 395 |
|       | 85 deg. DB             | Low Side  | 82                                    | 82  | 83  | 84  | 85  | 86  | 87  | 88  | 90  |
|       | 72 deg. WB             | High Side | 261                                   | 262 | 279 | 298 | 318 | 330 | 361 | 384 | 409 |
| QH482 | 75 deg. DB             | Low Side  | 69                                    | 71  | 72  | 72  | 73  | 74  | 75  | 75  | 76  |
|       | 62 deg. WB             | High Side | 221                                   | 237 | 252 | 270 | 287 | 305 | 323 | 343 | 363 |
|       | 80 deg. DB             | Low Side  | 75                                    | 76  | 76  | 77  | 78  | 79  | 80  | 80  | 81  |
| QH602 | 67 deg. WB             | High Side | 228                                   | 244 | 260 | 276 | 294 | 312 | 331 | 351 | 372 |
|       | 85 deg. DB             | Low Side  | 81                                    | 82  | 82  | 83  | 84  | 85  | 86  | 86  | 87  |
|       | 72 deg. WB             | High Side | 237                                   | 252 | 269 | 285 | 304 | 323 | 342 | 363 | 385 |
| QH602 | 75 deg. DB             | Low Side  | 69                                    | 70  | 71  | 72  | 73  | 74  | 75  | 76  | 77  |
|       | 62 deg. WB             | High Side | 244                                   | 260 | 277 | 294 | 313 | 332 | 352 | 372 | 393 |
|       | 80 deg. DB             | Low Side  | 74                                    | 75  | 76  | 77  | 78  | 79  | 80  | 81  | 82  |
| QH602 | 67 deg. WB             | High Side | 250                                   | 267 | 284 | 302 | 321 | 341 | 361 | 382 | 403 |
|       | 85 deg. DB             | Low Side  | 77                                    | 78  | 79  | 80  | 81  | 82  | 83  | 84  | 85  |
|       | 72 deg. WB             | High Side | 259                                   | 276 | 294 | 313 | 332 | 353 | 374 | 395 | 417 |

Low side pressure  $\pm$  2 psig

High side pressure  $\pm$  5 psig

Tables are based upon rated CFM (airflow) across the evaporator coil. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated and recharged to serial plate instructions.

① 75° F outdoor temperature condenser fan motor is running on low speed.

**TABLE 11**  
**HEATING PRESSURE**  
**(All Temperatures in Degrees F)**

| Model | Return Air Temp. | Pressure  | 0   | 5   | 10  | 15  | 20  | 25  | 30  | 35  | 40  | 45  | 50  | 55  | 60  |
|-------|------------------|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| QH243 | 70 deg           | Low Side  | 7   | 12  | 17  | 23  | 28  | 33  | 39  | 44  | 50  | 55  | 60  | 65  | 71  |
|       |                  | High Side | 147 | 155 | 164 | 172 | 181 | 189 | 198 | 206 | 215 | 224 | 232 | 240 | 249 |
| QH302 | 70 deg           | Low Side  | 16  | 20  | 24  | 28  | 33  | 37  | 41  | 45  | 49  | 54  | 58  | 62  | 67  |
|       |                  | High Side | 157 | 163 | 169 | 175 | 180 | 187 | 193 | 199 | 205 | 211 | 217 | 222 | 228 |
| QH362 | 70 deg           | Low Side  | 13  | 17  | 21  | 25  | 30  | 34  | 38  | 42  | 46  | 51  | 55  | 59  | 63  |
|       |                  | High Side | 147 | 153 | 159 | 164 | 171 | 176 | 182 | 188 | 194 | 200 | 206 | 211 | 217 |
| QH422 | 70 deg           | Low Side  | 13  | 18  | 22  | 26  | 31  | 35  | 39  | 44  | 48  | 53  | 57  | 61  | 65  |
|       |                  | High Side | 161 | 168 | 174 | 180 | 187 | 193 | 199 | 206 | 212 | 218 | 225 | 231 | 237 |
| QH482 | 70 deg           | Low Side  | 11  | 15  | 20  | 24  | 29  | 33  | 38  | 42  | 47  | 52  | 56  | 60  | 65  |
|       |                  | High Side | 154 | 160 | 167 | 173 | 180 | 186 | 192 | 199 | 206 | 213 | 219 | 225 | 232 |
| QH602 | 70 deg           | Low Side  | 21  | 21  | 22  | 23  | 25  | 28  | 31  | 36  | 41  | 46  | 53  | 60  | 68  |
|       |                  | High Side | 162 | 166 | 170 | 175 | 181 | 187 | 193 | 200 | 208 | 216 | 225 | 234 | 244 |