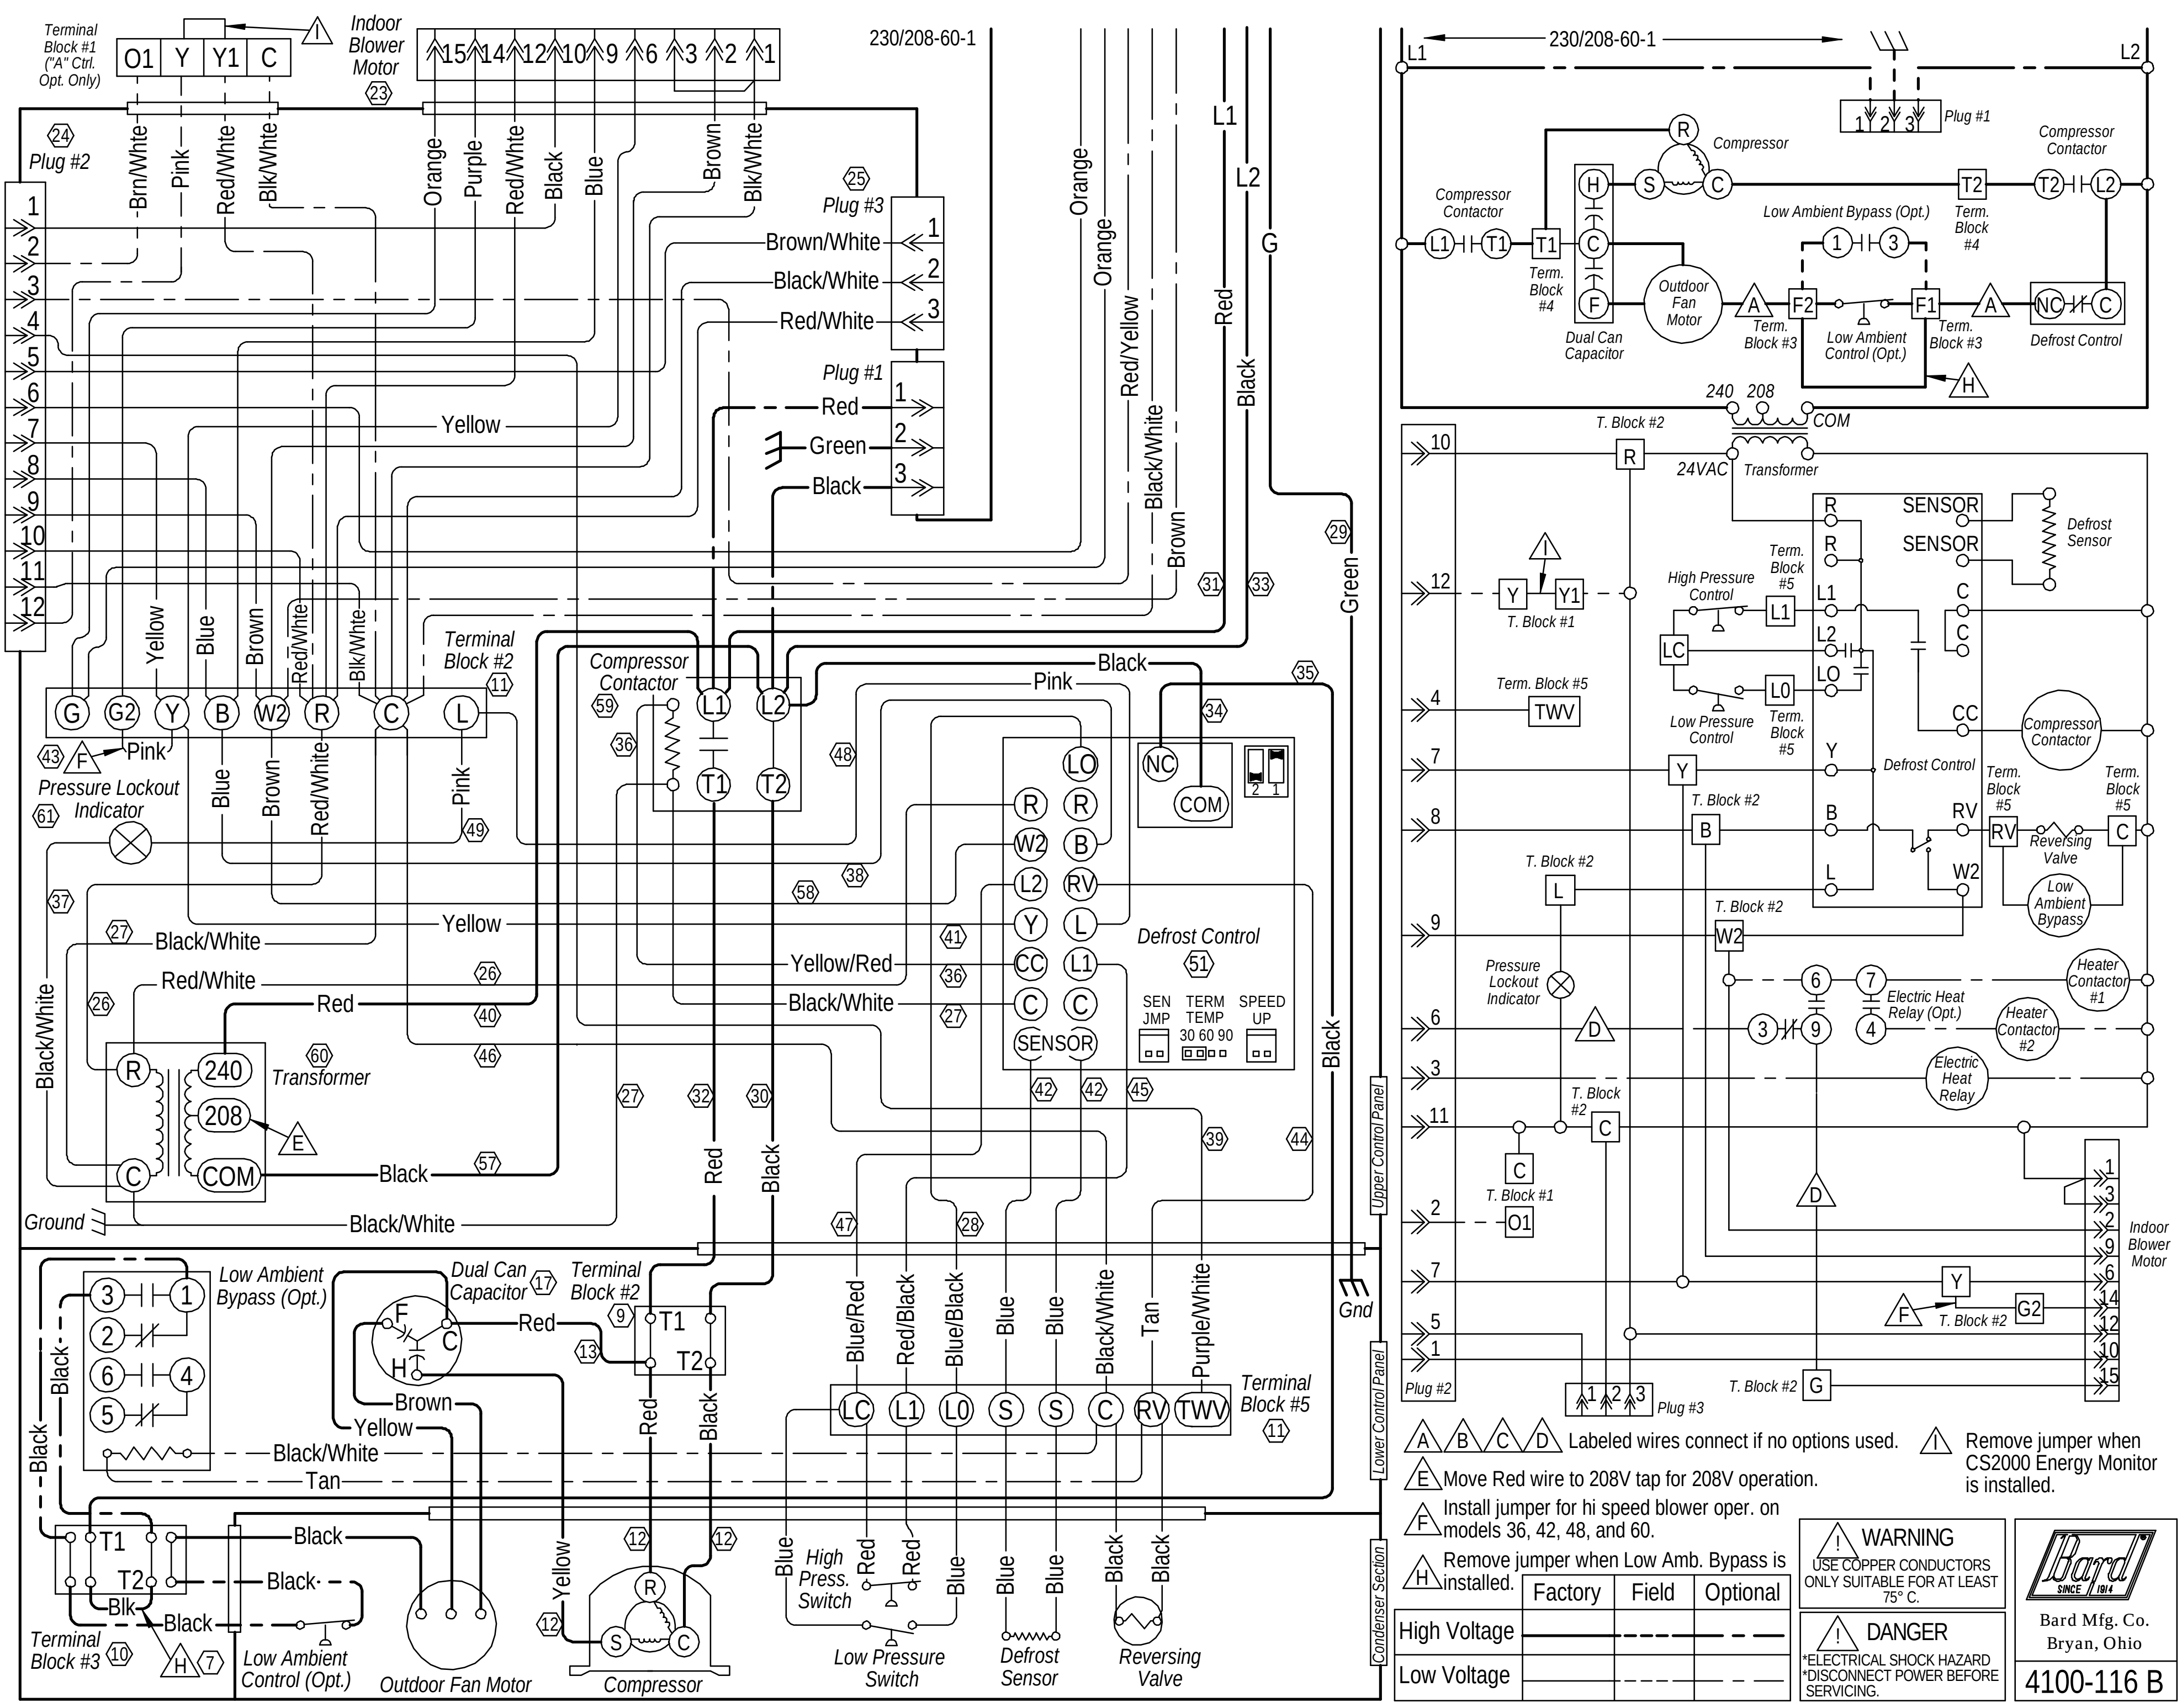

A B C D Labeled wires connect if no options used.

E Move Red wire to 208V tap for 208V operation.

F Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.

H Remove jumper when Low Amb. Bypass is installed.

! Remove jumper when CS2000 Energy Monitor is installed.

| | Factory | Field | Optional |
|---|---|---|---|
| High Voltage | ━━━━ | ━ ━ ━ | ━ ━ ━ |
| Low Voltage | ──── | – – – | – – – |

**⚠ WARNING**

USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**⚠ DANGER**

*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

Bard SINCE 1914

Bard Mfg. Co.
Bryan, Ohio

4100-116 B