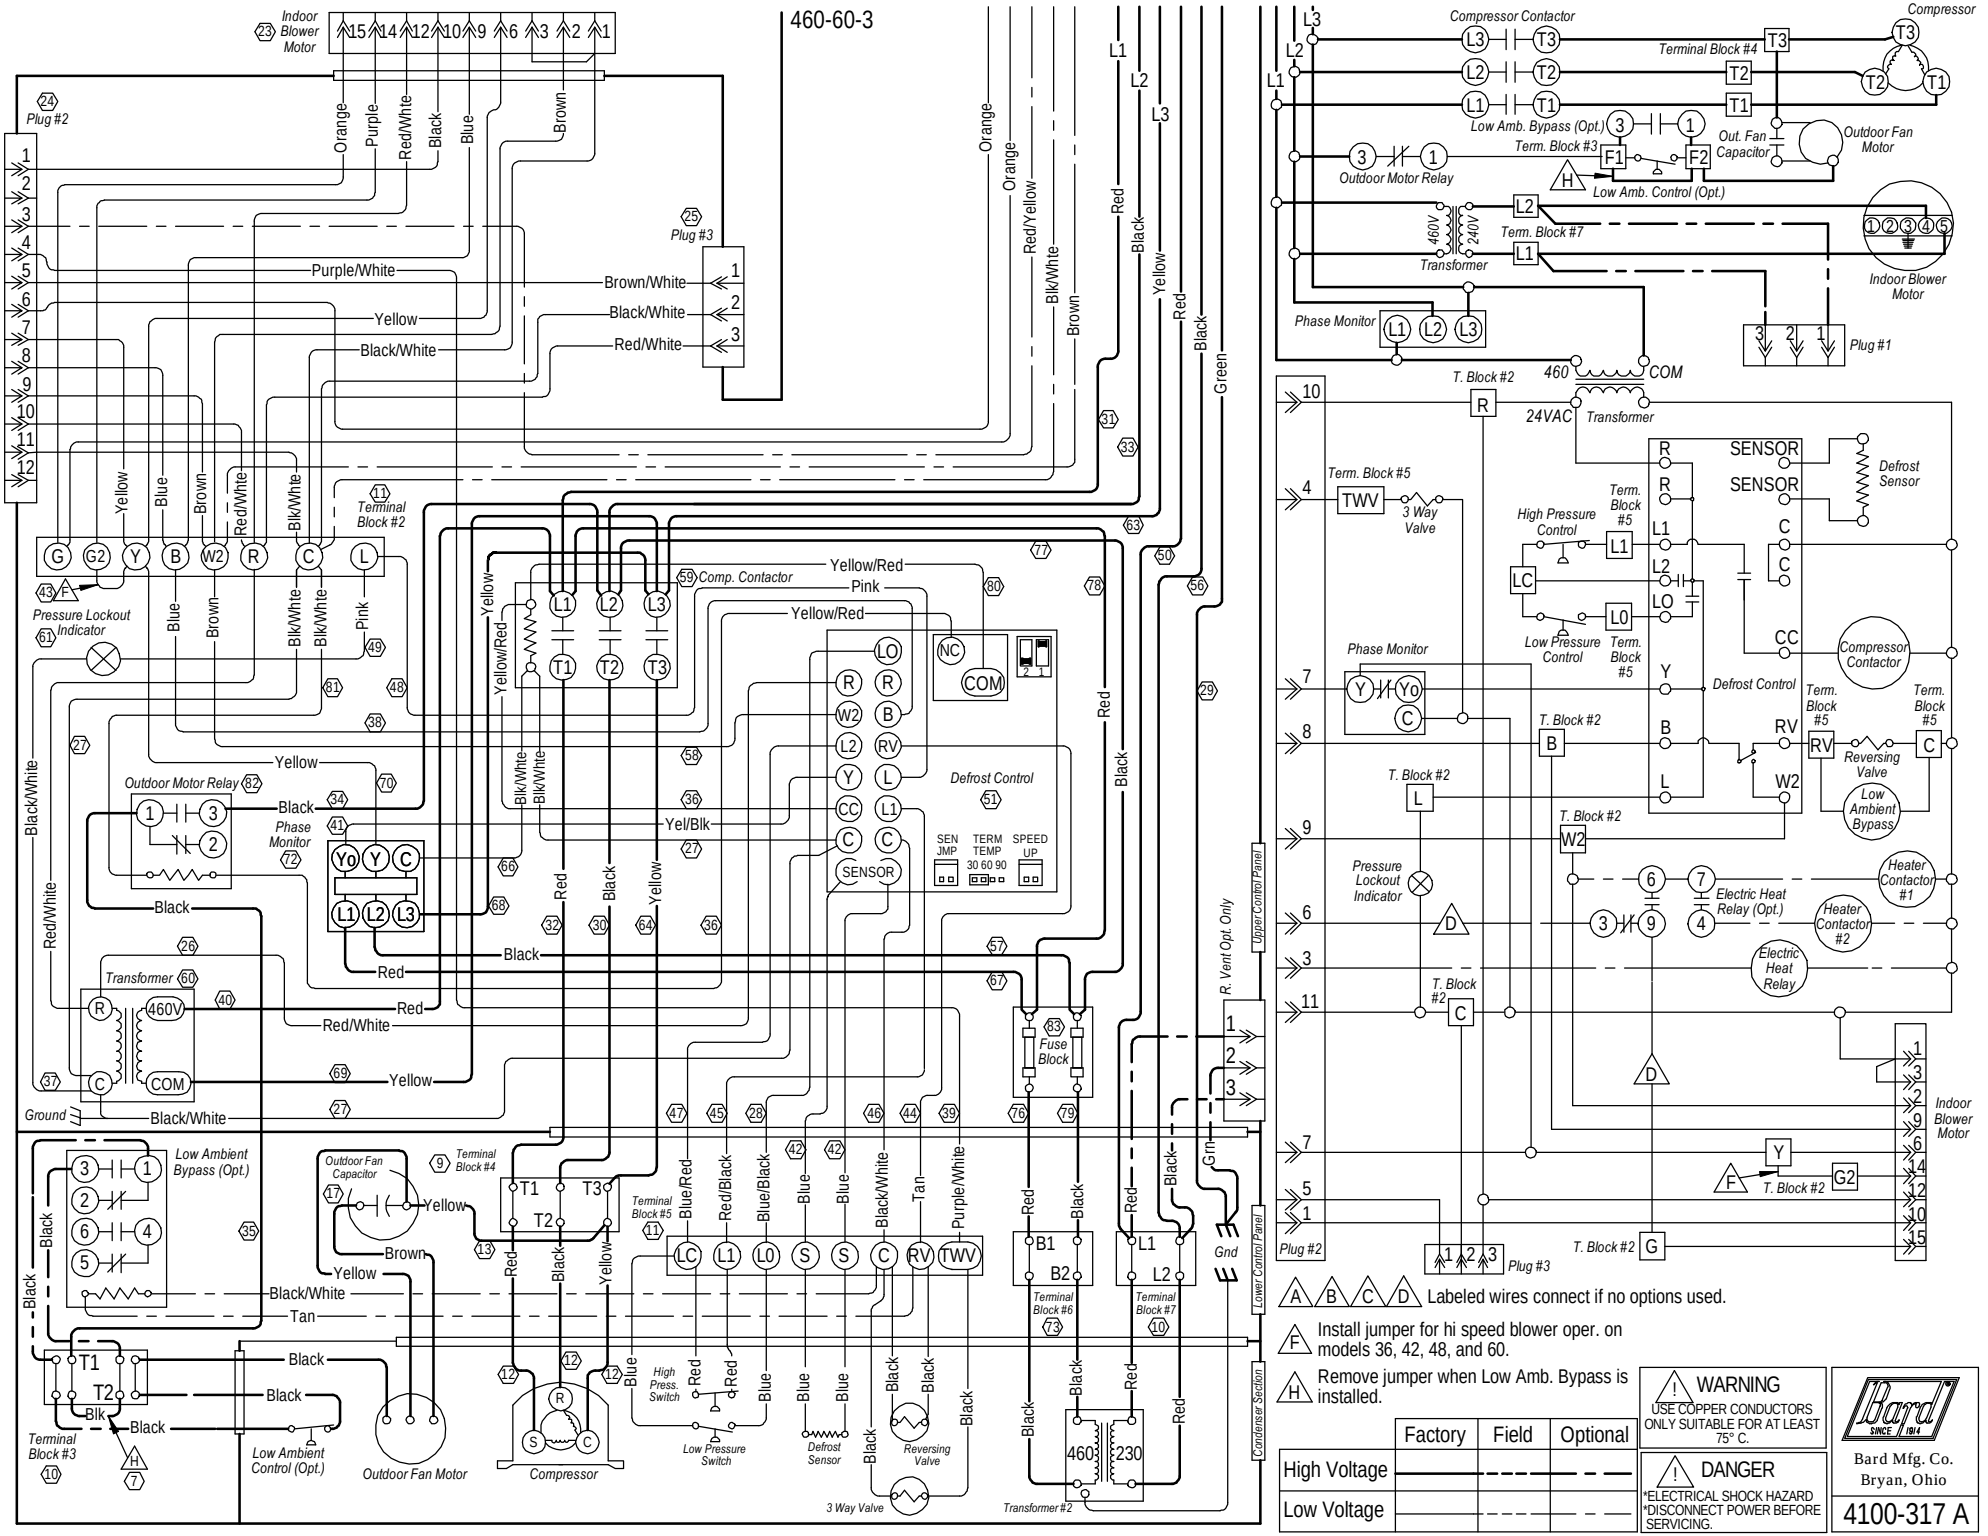
460-60-3
Indoor Blower Motor
Plug #2
Plug #3
Terminal Block #2
Pressure Lockout Indicator
Comp. Contactor
Defrost Control
Outdoor Motor Relay
Phase Monitor
Transformer
Fuse Block
Upper Control Panel
R. Vent Opt. Only
Lower Control Panel
Condense Section
Low Ambient Bypass (Opt.)
Outdoor Fan Capacitor
Terminal Block #4
Terminal Block #5
Terminal Block #6
Terminal Block #7
Terminal Block #3
Low Ambient Control (Opt.)
Outdoor Fan Motor
Compressor
High Press. Switch
Low Pressure Switch
Defrost Sensor
Reversing Valve
3 Way Valve
Transformer #2
Compressor Contactor
Low Amb. Bypass (Opt.)
Term. Block #3
Out. Fan Capacitor
Outdoor Motor Relay
Low Amb. Control (Opt.)
Term. Block #7
Phase Monitor
T. Block #2
Plug #1
Term. Block #5
3 Way Valve
High Pressure Control
Low Pressure Control
Defrost Sensor
Defrost Control
Reversing Valve
Low Ambient Bypass
Electric Heat Relay (Opt.)
Heater Contactor #1
Heater Contactor #2
Electric Heat Relay
Plug #3
Labeled wires connect if no options used.
Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.
Remove jumper when Low Amb. Bypass is installed.
WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.
Factory
Field
Optional
High Voltage
Low Voltage
Bard SINCE 1914
Bard Mfg. Co.
Bryan, Ohio
4100-317 A