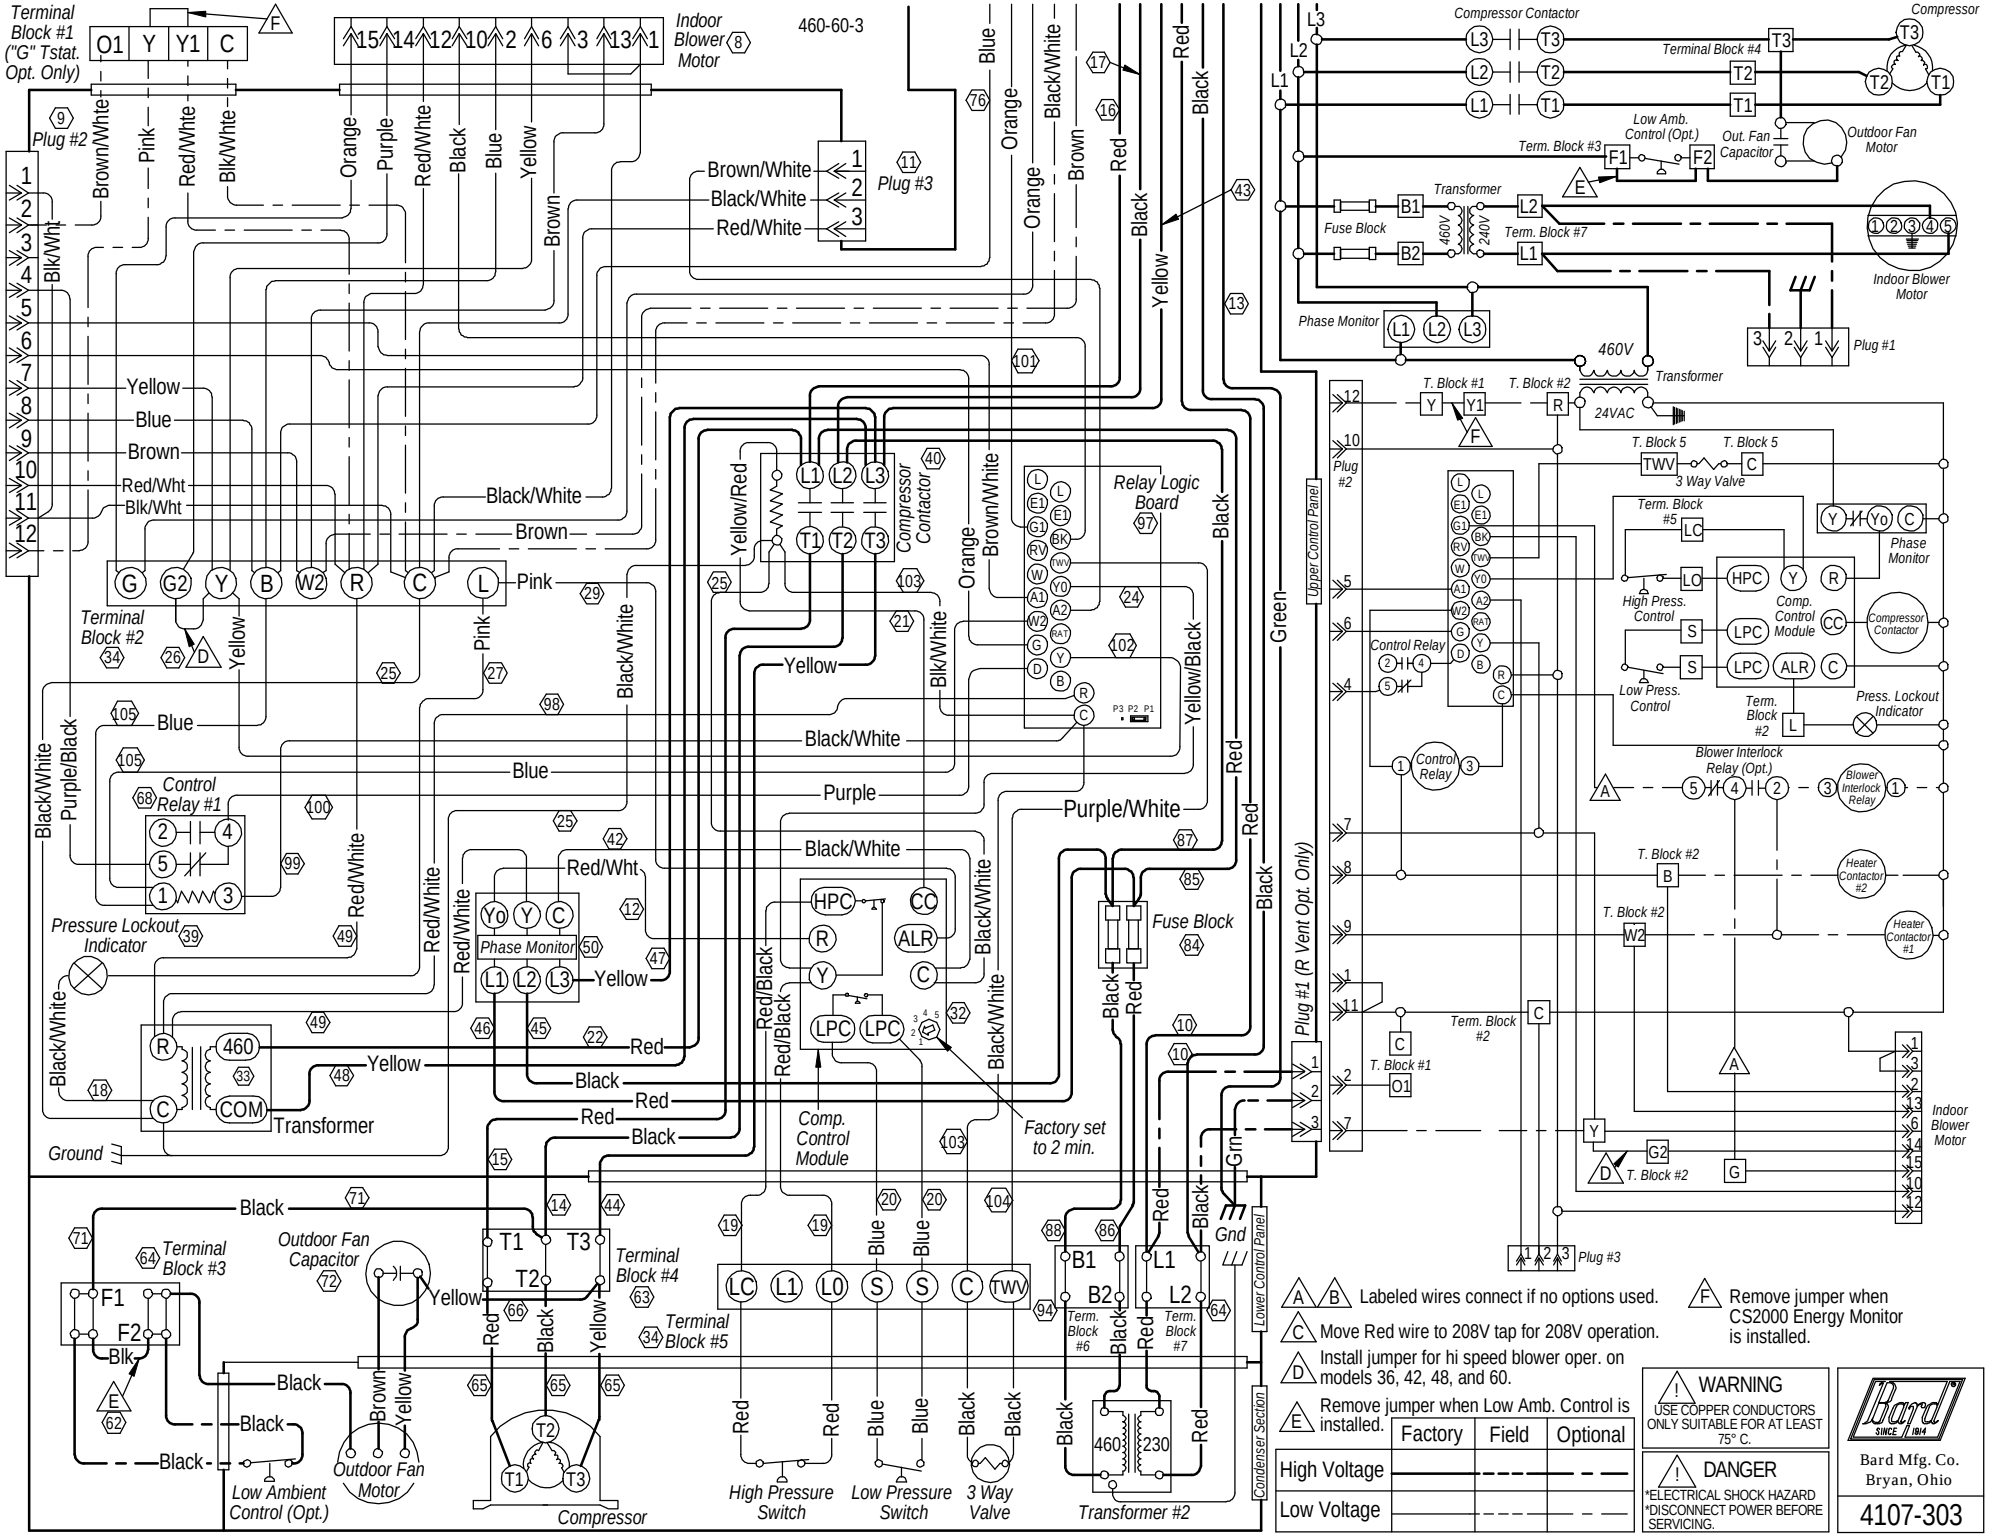


A B Labeled wires connect if no options used.

C Move Red wire to 208V tap for 208V operation.

D Install jumper for hi speed blower oper. on models 36, 42, 48, and 60.

E Remove jumper when Low Amb. Control is installed.

F Remove jumper when CS2000 Energy Monitor is installed.

| | Factory | Field | Optional |
|---|---|---|---|
| High Voltage | | | |
| Low Voltage | | | |

**WARNING**
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

**DANGER**
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

Bard SINCE 1914
Bard Mfg. Co.
Bryan, Ohio
4107-303