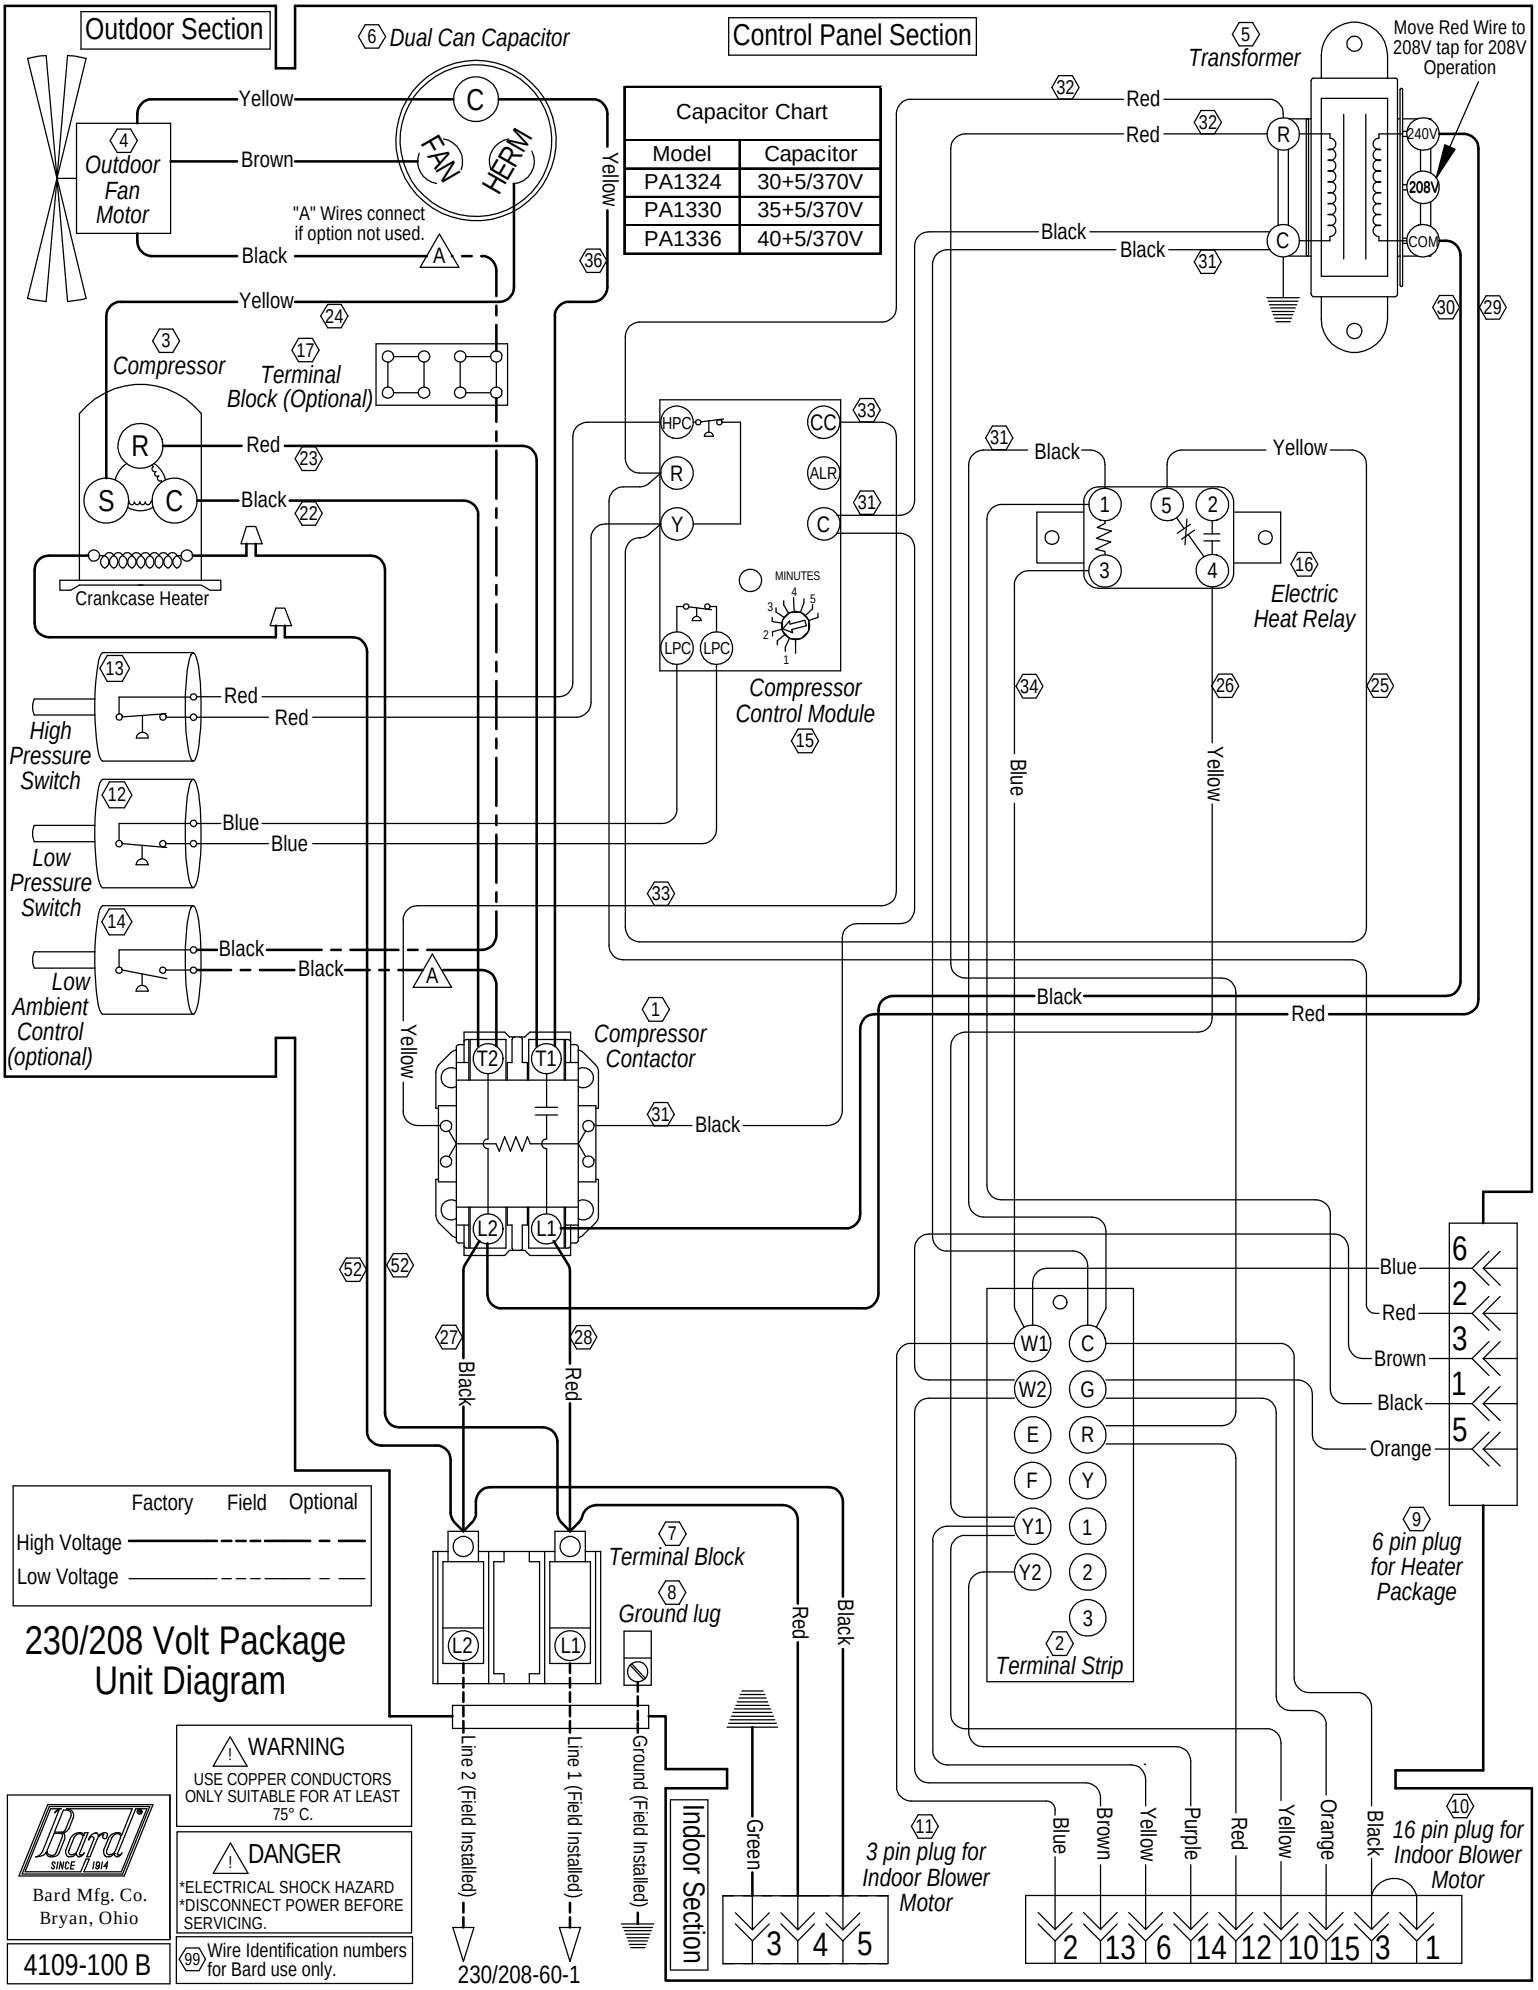
Outdoor Section
Control Panel Section
6 Dual Can Capacitor
5 Transformer
Move Red Wire to 208V tap for 208V Operation
Capacitor Chart
Model | Capacitor
PA1324 | 30+5/370V
PA1330 | 35+5/370V
PA1336 | 40+5/370V
4 Outdoor Fan Motor
"A" Wires connect if option not used.
3 Compressor
17 Terminal Block (Optional)
Crankcase Heater
High Pressure Switch
Low Pressure Switch
Low Ambient Control (optional)
Compressor Control Module
15
16 Electric Heat Relay
1 Compressor Contactor
2 Terminal Strip
7 Terminal Block
8 Ground lug
9 6 pin plug for Heater Package
10 16 pin plug for Indoor Blower Motor
11 3 pin plug for Indoor Blower Motor
Indoor Section
Factory
Field
Optional
High Voltage
Low Voltage
230/208 Volt Package Unit Diagram
WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.
99 Wire Identification numbers for Bard use only.
Bard SINCE 1914
Bard Mfg. Co.
Bryan, Ohio
4109-100 B
230/208-60-1
Line 2 (Field Installed)
Line 1 (Field Installed)
Ground (Field Installed)