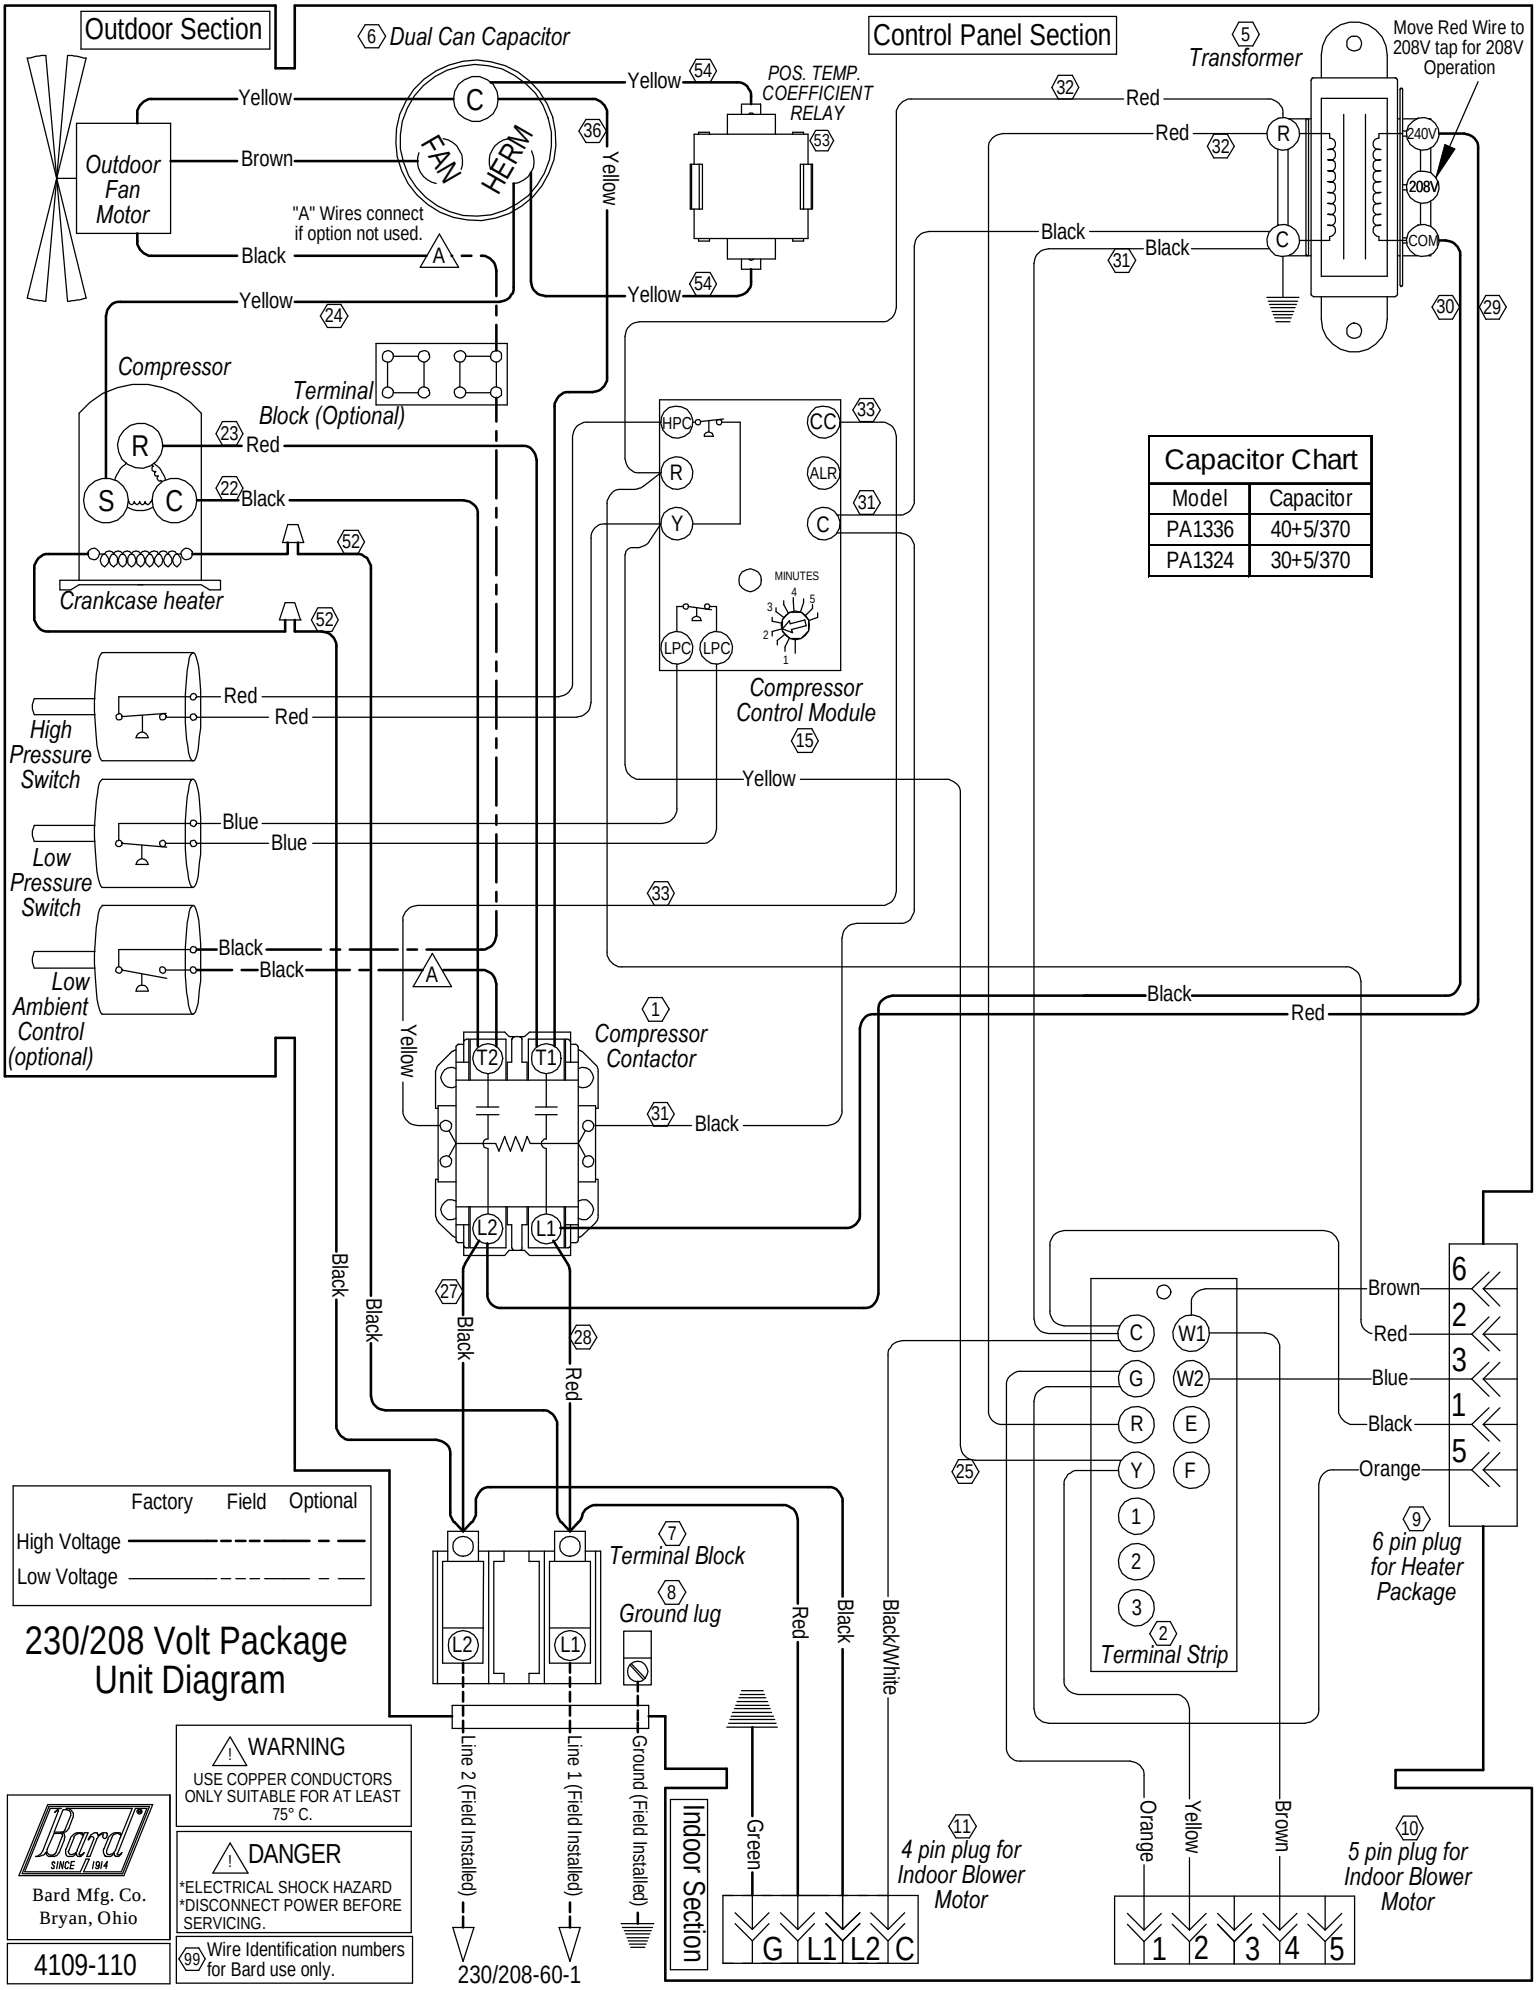
Outdoor Section
Control Panel Section
6 Dual Can Capacitor
5 Transformer
Move Red Wire to 208V tap for 208V Operation
POS. TEMP. COEFFICIENT RELAY
Outdoor Fan Motor
"A" Wires connect if option not used.
Compressor
Terminal Block (Optional)
Crankcase heater
High Pressure Switch
Low Pressure Switch
Low Ambient Control (optional)
Compressor Control Module
15
1 Compressor Contactor
Capacitor Chart
Model | Capacitor
PA1336 | 40+5/370
PA1324 | 30+5/370
Factory Field Optional
High Voltage
Low Voltage
230/208 Volt Package Unit Diagram
7 Terminal Block
8 Ground lug
2 Terminal Strip
9 6 pin plug for Heater Package
11 4 pin plug for Indoor Blower Motor
10 5 pin plug for Indoor Blower Motor
Indoor Section
WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.
99 Wire Identification numbers for Bard use only.
Bard Mfg. Co.
Bryan, Ohio
4109-110
Line 2 (Field Installed)
Line 1 (Field Installed)
Ground (Field Installed)
230/208-60-1