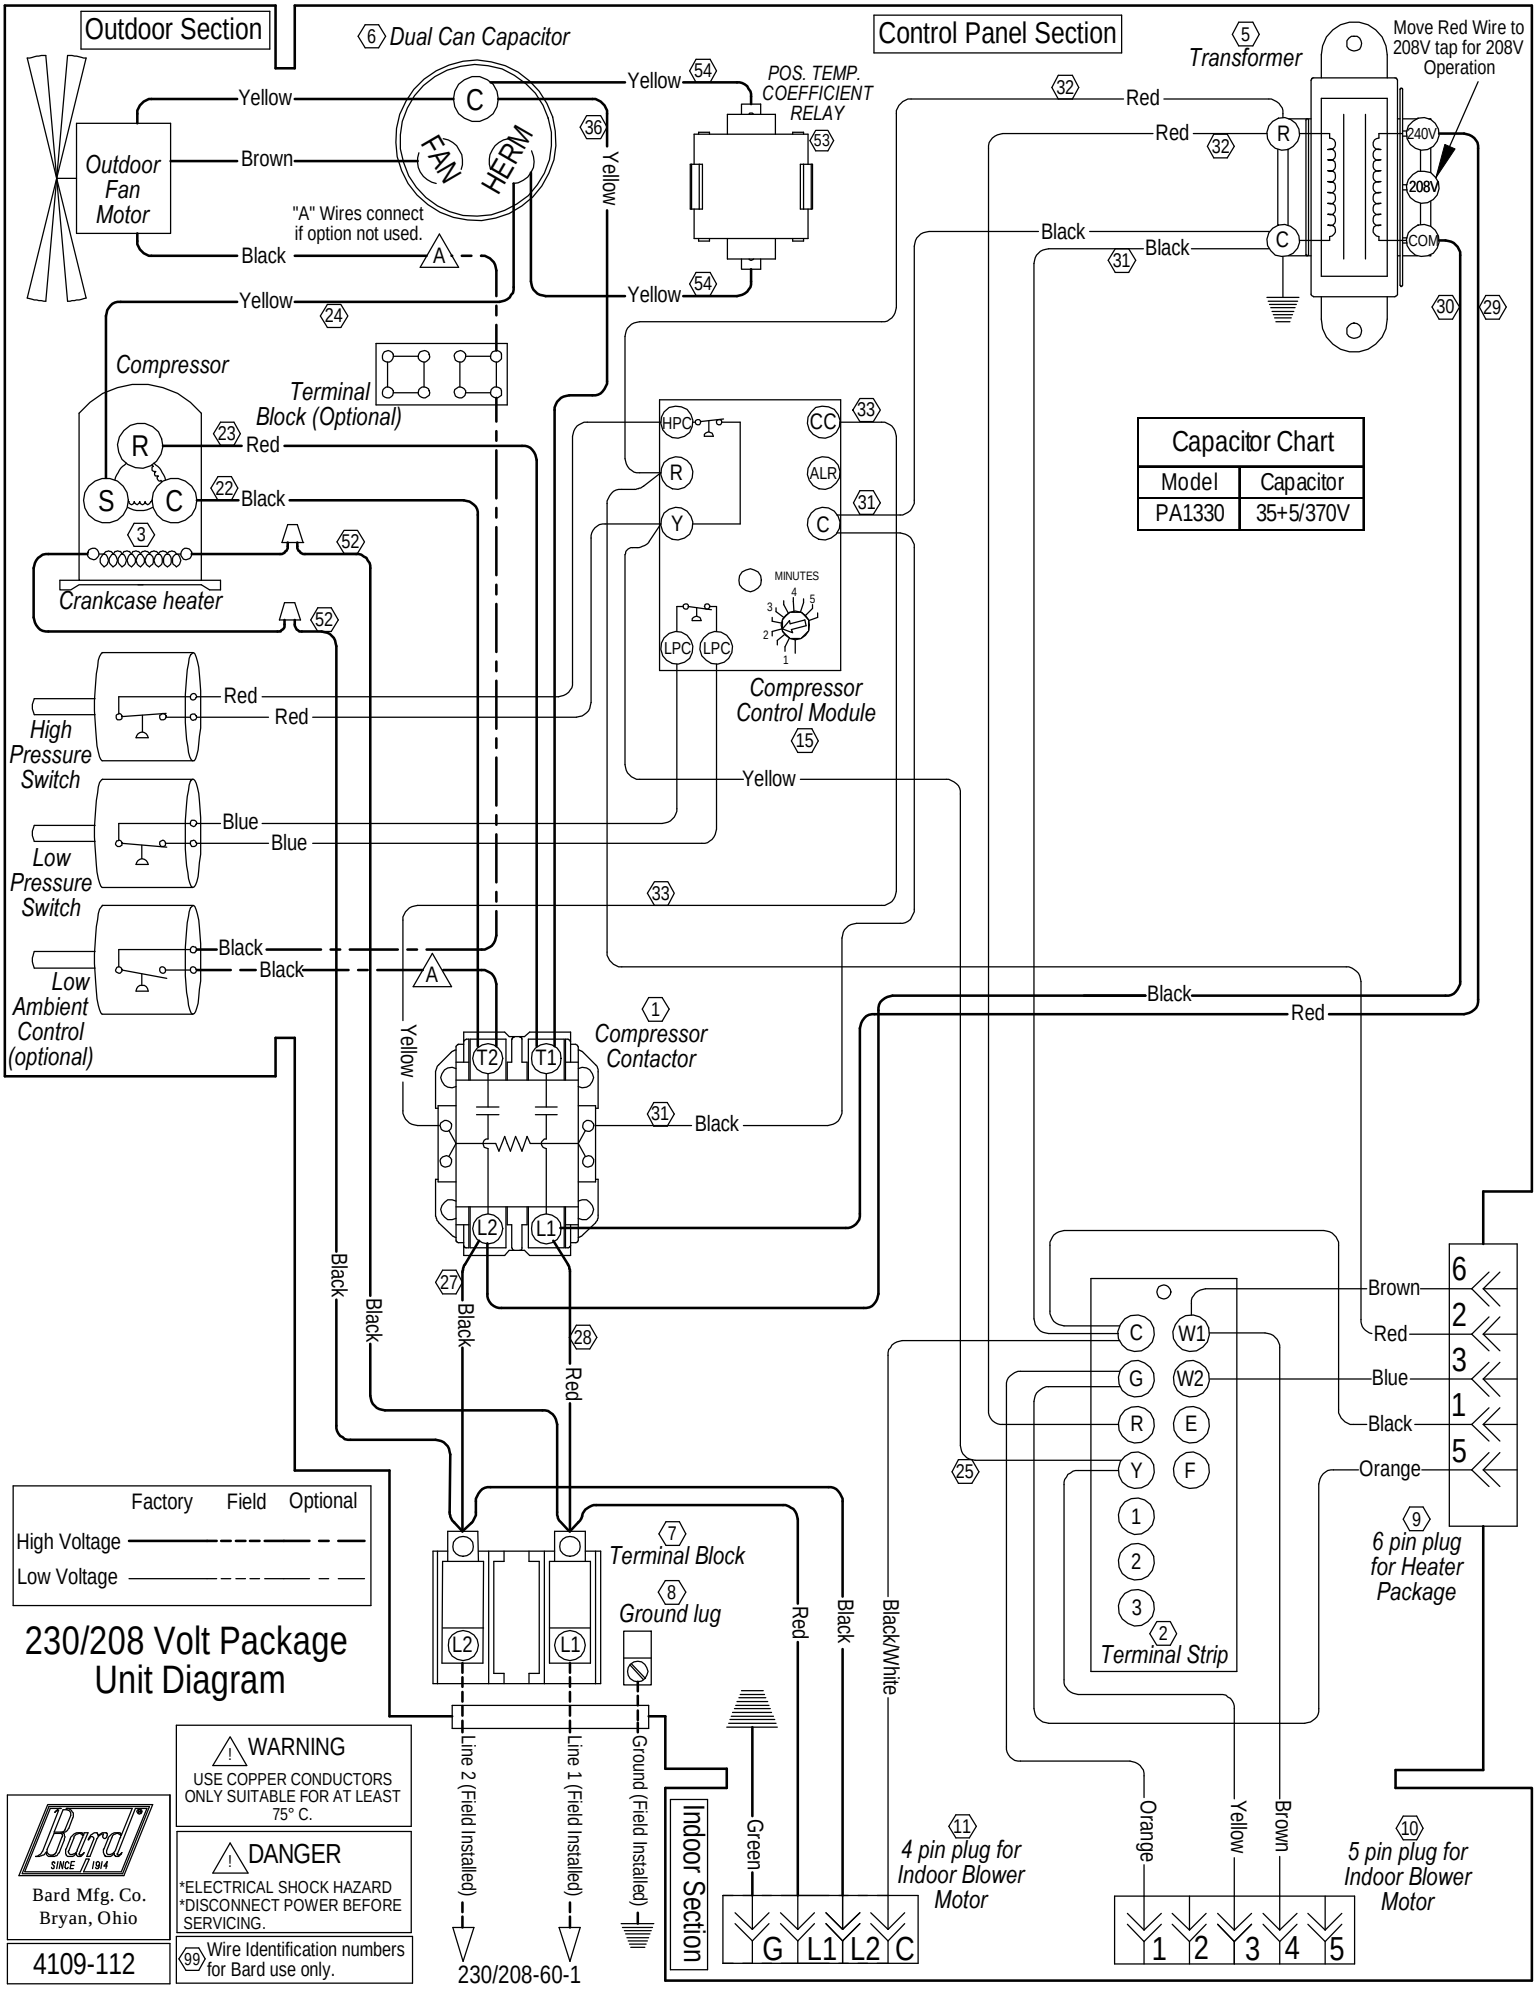
Outdoor Section
Control Panel Section
6 Dual Can Capacitor
5 Transformer
Move Red Wire to 208V tap for 208V Operation
POS. TEMP. COEFFICIENT RELAY
Outdoor Fan Motor
"A" Wires connect if option not used.
Compressor
Terminal Block (Optional)
Crankcase heater
High Pressure Switch
Low Pressure Switch
Low Ambient Control (optional)
Compressor Control Module
15
1 Compressor Contactor
Capacitor Chart
Model | Capacitor
PA1330 | 35+5/370V
Terminal Strip
2
6 pin plug for Heater Package
9
4 pin plug for Indoor Blower Motor
11
5 pin plug for Indoor Blower Motor
10
7 Terminal Block
8 Ground lug
Factory Field Optional
High Voltage
Low Voltage
230/208 Volt Package Unit Diagram
WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.
99 Wire Identification numbers for Bard use only.
Bard Mfg. Co.
Bryan, Ohio
4109-112
Line 2 (Field Installed)
Line 1 (Field Installed)
Ground (Field Installed)
230/208-60-1
Indoor Section
Yellow
Brown
Red
Black
Blue
Orange
Green
Black/White