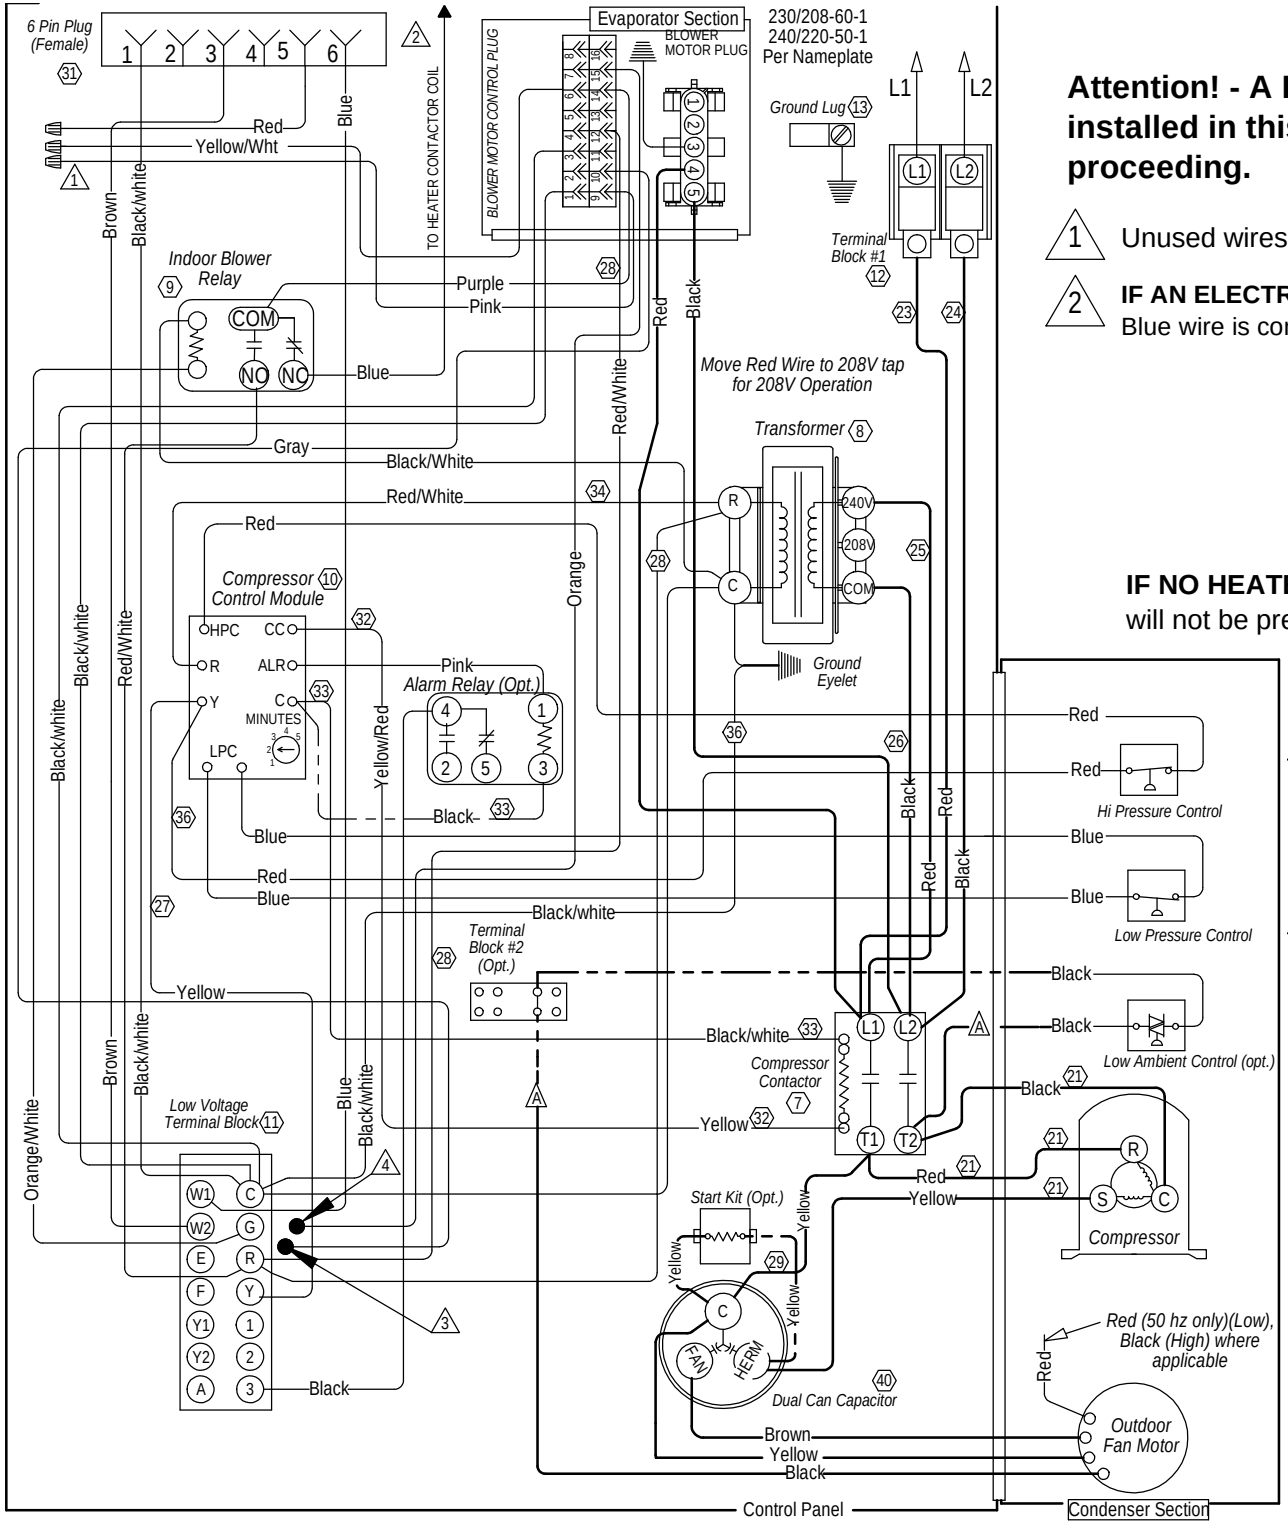

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

1 Unused wires. Ends should be capped with a wire nut.

2 **IF AN ELECTRIC HEATER PACKAGE IS INSTALLED IN THIS UNIT**
Blue wire is connected to the (+) side of the heater contactor coil.

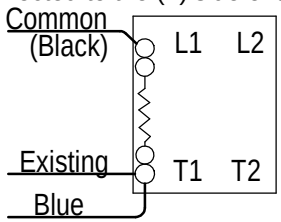

IF NO HEATER PACKAGE IS INSTALLED - Blue wire will not be present in the unit.

3 **Blower Airflow Select Wires**
- Connect Gray wireto R in W36, W48 or W60 Units
-Tape off Gray wire for ALL OTHER UNITS

4 **Single/Dual speed operation**
-For single-speed operation, connect as shown
- For dual (full/vent) speed operation move orange/White wire from G to Y. land orange wire on G

* 9 was high voltage blower relay. Replaced with pilot duty low voltage relay*

A Wires Connect if Option Not Used	Factory	Field	Optional
High Voltage			
Low Voltage			

99 Wire Identification numbers for Bard use only.

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

4213-115 A