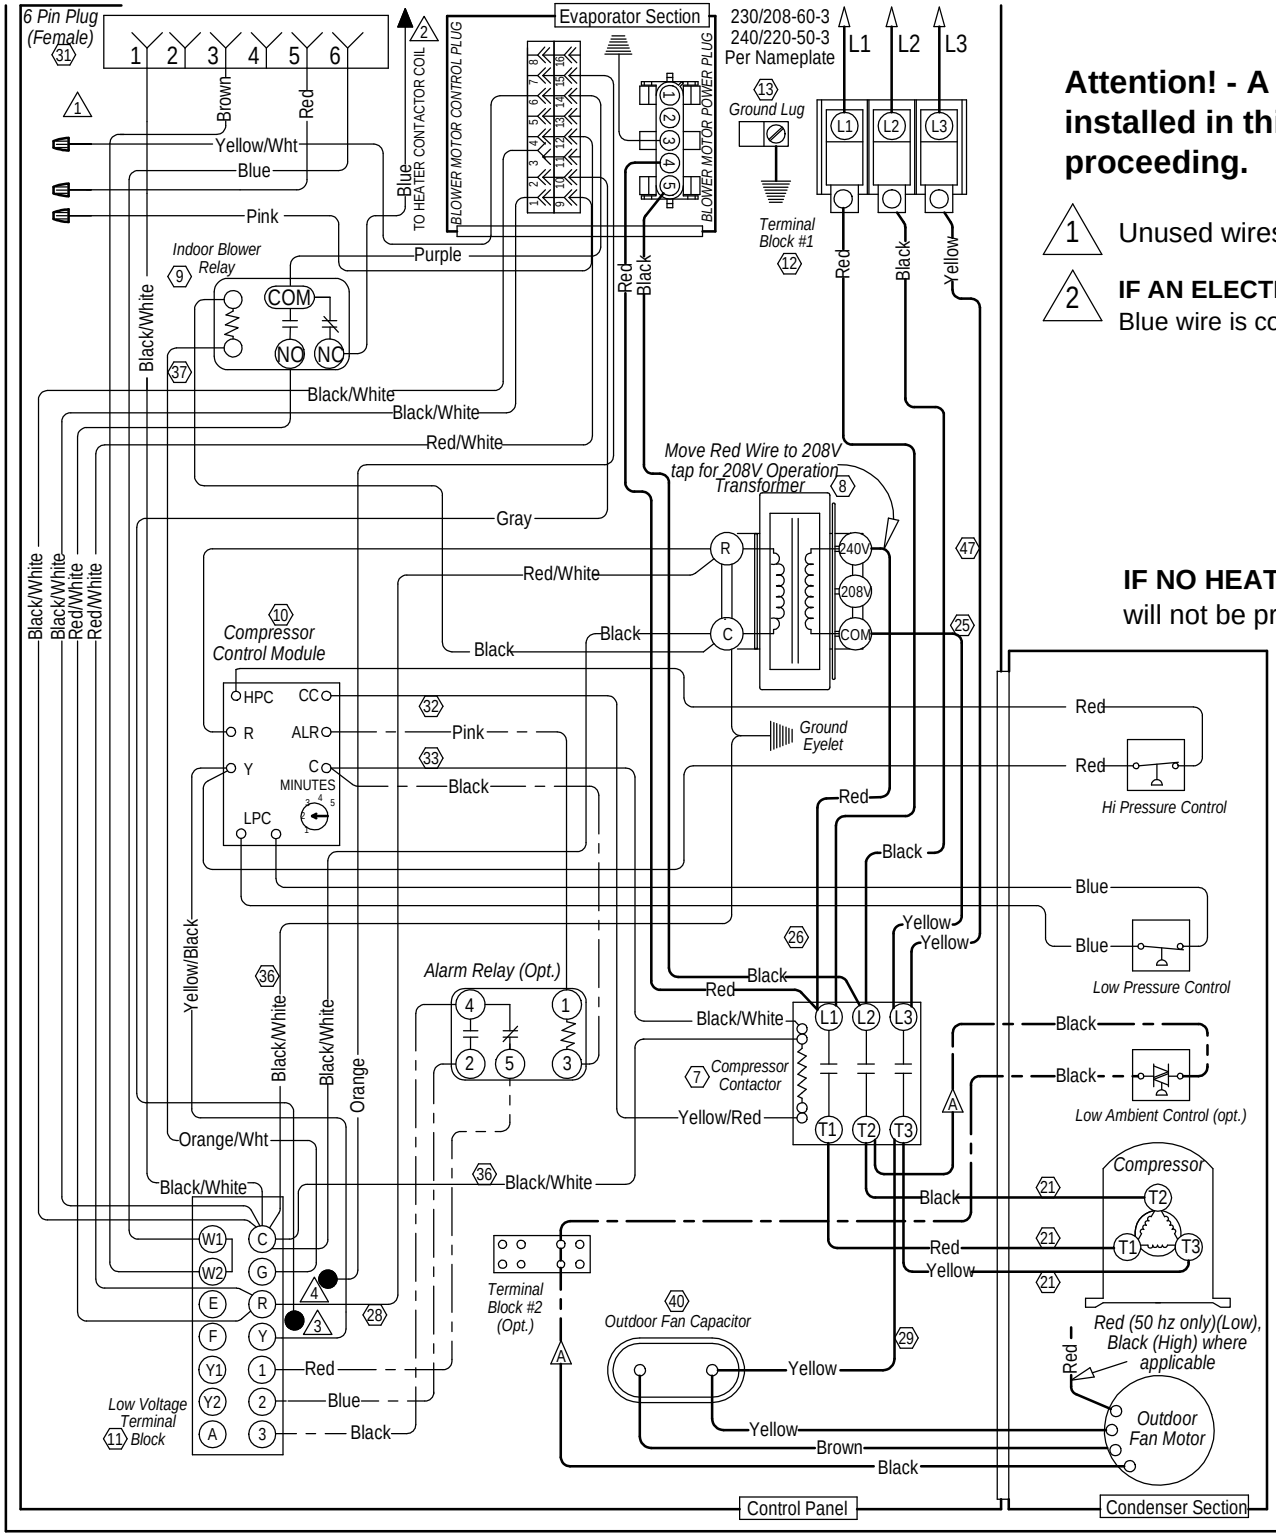

Attention! - A Bard constant-cfm blower kit has been installed in this unit. Please review this diagram before proceeding.

△1 Unused wires. Ends should be capped with a wire nut.

△2 **IF AN ELECTRIC HEATER PACKAGE IS INSTALLED IN THIS UNIT**
Blue wire is connected to the (+) side of the heater contactor coil.

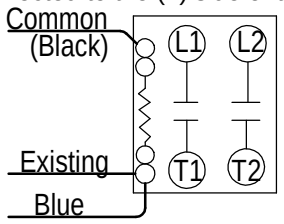

IF NO HEATER PACKAGE IS INSTALLED - Blue wire will not be present in the unit.

△3 Blower Airflow Select Wires
- Connect Gray wire to R in W36, W48, or W60 Units
-Tape off Gray wire for ALL OTHER UNITS

△4 Single/Dual speed operation
-For single-speed operation, connect as shown
- For dual (full/vent) speed operation move orange/White wire from G to Y. land orange wire on G

* ⟨9⟩ was high voltage blower relay. Replaced with pilot duty low voltage relay*

△A Wires Connect if Option Not Used

⟨99⟩ Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

△! WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

△! DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.

4213-215 A